

120 mm


# anko

## 10W WIRELESS CHARGER PAD

User Manual  
EPB-17034-B

K: 43-367-542 | T: 69-127-014

### 1. Device Lay-out

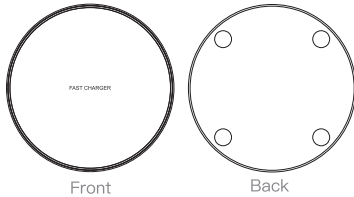

Front

Back



USB Port

Indicator Light

### 2. Includes

- (1) Charging pad
- (2) USB-C cable
- (3) User manual

### 3. Technical specifications

Input: 5V/2A,9V/2A,12V/2A  
 Wireless charging output: 10W/7.5W/5W  
 Charging efficiency: ≤75%  
 Charging distance: ≤8MM

### 4. LED Color indication

- (1) Standby: Plug in the charging cable, the blue light stays on.
- (2) On Charging: Red light stays on.
- (3) Fully charged: Blue light stays on (Android/Apple cell phone).
- (4) Foreign Object Detection: Red light flashes.

### 5. Operating instruction

- (1) Connect the wireless charger to an outlet with a 5V/2A,9V/2A,12V/2A adapter (not included) and the LED lights on.
- (2) To ensure efficient charging, a compatible charger is required. Only 5W output if using a 5V/2A charger.
- (3) Place your wireless charging enabled device on the charging plate to start charging.
- (4) To achieve fast wireless charging, a QuickCharge 2.0 or above USB power adapter will be required (sold separately).

### 6. Notes:

- (1) Do not disassemble or throw into fire or water, to avoid damage.
- (2) Do not use wireless charger in severely hot, humid or corrosive environments, to avoid circuit damage and occurs leakage phenomenon.
- (3) Do not place too close with magnetic stripe or chip card (ID card, credit cards, etc.) to avoid magnetic failure.

Front

118 mm

- (4) Please keep the distance at least 30cm between implantable medical devices (pacemakers, implantable cochlear, etc.) and the wireless charger, to avoid potential interference with the medical device.
- (5) To take care of the children, to ensure that they won't play the wireless charger as a toy.
- (6) Some phone case may affect the charging performance. Ensure there is no any metal object between your phone cases or try to take it off before charging.

The wireless charging efficiency may be affected by some phone cases.

Make sure there is no metal foreign object between the charging pad and phone case when charging.

### \* 12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.  
 For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.  
 This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.  
 You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

Back