

KMT说明书 折页 128g双铜 尺寸: 89*127mm

anko

K : 43-369-652 | T : 69-103-292
Model No.: SP506B

BLUETOOTH SPEAKER User manual

Package contents:
• Type-C earphone
• 3.5mm Aux Cable
• User manual



12 month warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.


Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

WARNING:

- Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- This product shall not be connected to power supply source exceeding PS1 . Rated 5V d.c. 1A .
- Please note the product working temperature is : 0-40 °C .
- The U flash disk port is for data transmission only. Do not connect it to power supply.

Function overview:

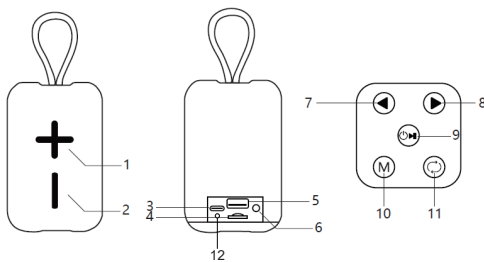

1. Volume up
2. Volume down
3. Type-C charging port
4. TF Card port
5. U flash disk port
6. 3.5mm Aux Input port
7. Previous track
8. Next track
9. (MF Button)-Power on & off /Pause & Play /answer & reject & recall phone-call
10. Mode switch between Bluetooth / TF/ U disk /TWS mode
11. Turn on & off the Light
12. LED indicator

Specifications:

- Bluetooth version: V 5.3
- Unit driver: 52mm
- Rated output power: 3Ω 5W
- Battery capacity: 3.7V 500mAh
- Charge time: 2Hrs
- Playing time: approx.3.5 Hrs. (at 80% volume)

TWS Speaker Function

Note : The TWS function is only available in Bluetooth mode.

To activate TWS function, both speakers are turn on, press and hold M button of either one of speakers, then two speakers automatically search for connections and a beep alerts. After TWS mold activated, press and hold M button of one of speakers, then TWS mold deactivate and the speaker can use separately.

Operating Instruction

Power on / off

Press and hold the MF button 2s to turn on the speaker, the blue light flashes quickly; To turn it off, please press and hold the MF button 3s after powering on.

Pairing

Once speaker is ON, turn the Bluetooth ON in your device, select the pairing name on the list of available devices. Pairing name is: **anko43369652** . LED light turns Blue when connected successfully. Once connected , speaker will be connected with the paired device automatically next time when used.

Playing Music

- Click MF button once to pause playing, click again to resume playback. click ◀ button for previous track , click ▶ button for next track; click + button to increase volume; click - button to decrease volume.
- Long press ○ button to switch on / off RGB light at the top of product.
- Insert TF card or U flash disk when the speaker is ON, you can play the music from your TF card or U flash disk. MP3 audio format music supported only.
- 3.5mm Aux cable is included, you can connect mobile phone or other device with the 3.5mm cable to play music by speaker directly.
- Short press M button to switch the music between TF card, U flash disk, Bluetooth, Aux mode.

Phone calls

When there is an incoming call, the unit will pause the playback and ring to alert you of the call. To answer the call, click MF button . To end a call, click MF button again. To decline an incoming call, click MF button twice quickly.

Battery Charging

Use the standard USB to Type-C cable for power charging, Red light indicates charging ,when red light off, the charging finished.

Note: When the battery is low, it will automatically turn off after voice prompt. Please charge in time.