

anko

**Portable USB Blender
BT46803C
User Manual**



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE
REFERENCE**

IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:




READ ALL INSTRUCTIONS BEFORE USE.

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. Do not operate any damaged appliance. Bring appliance to Customer Service Center for examination, repair, electrical or mechanical adjustment.
4. **WARNING: DO NOT BLEND HOT LIQUIDS.**
5. Do not operate the appliance if damaged.
6. Do not operate the appliance for other than its intended use.
7. Do not put the appliance including the USB cable in water or other liquid. See "Care and Cleaning" section.
8. Blades are sharp. Handle with care.
9. Never remove parts from the appliance such as screws.
10. Do not use harsh detergents or abrasives materials to clean any of the parts/housing.
11. Do not overload the appliance during use, i.e., do not blend thick, sticky ingredients.
12. Do not wash the blender jar in warm water above 50°C.
13. Do not place the appliance in microwave oven or refrigerator.
14. Do not allow children to use the blender without adult supervision.
15. Do not attempt to disassemble the product or try access internal parts.
16. Before adding ingredients, make sure the blade is in place and running smoothly.
17. The max operating cycle is 40 seconds.
18. After operated 1 cycle, allow the appliance to rest for at least 3 minutes before using it again. After 5 cycles of operation, allow the appliance to cool down for approx. 30 minutes before using it again.
19. This appliance is intended for processing small quantities of food for immediate consumption. This appliance is not intended to prepare large quantities of food.
20. This appliance contains batteries that are non-replaceable. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.

21. Keep the appliance and its cord out of reach of children.
22. The appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, office and other working environments,
 - farmhouses,
 - by clients in hotels, motels and other residential type environments,
 - bed and breakfast type environments.
23. The product must be recharged with suitable USB power corresponding to the marking on the appliance.
24. Misuse may cause injury.
25. **WARNING! Do not immerse the motor base in any water or any liquid.**
26. **WARNING!** Beware of potential injury from misuse. Care should be taken when handling, assembling and cleaning the sharp blade.
27. **WARNING!** This appliance is intended for processing small quantities of food for immediate consumption. Please do not prepare food over maximum quantities.
28. For charging, please refer to section “CHARGE BLENDER”.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

KNOW YOUR PRODUCT

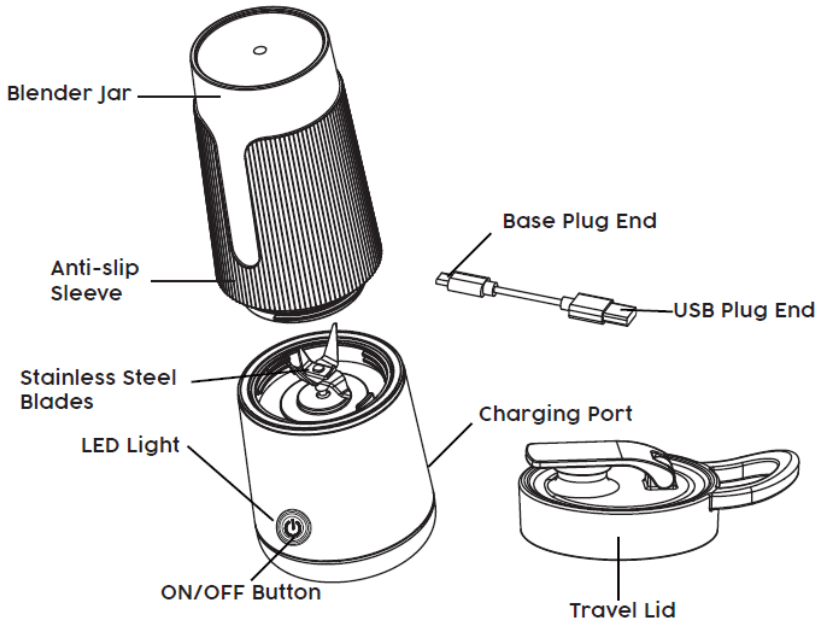


BEFORE FIRST USE

1. Unpack the appliance and all attachments carefully. Blades are very sharp. Handle carefully when inserting, removing or cleaning the blades.
2. Ensure you have all parts and accessories before discarding packaging.
3. Wash the travel lid, blender jar in warm water and rinse.
4. Holding base on its side, carefully rinse the blades under running water. It is okay for some water to get into top of base. Do not immerse base in water or use in the dishwasher.
5. Wipe off the motor base with a slightly damp cloth. Then allow all parts to dry completely.
6. Please make sure the appliance is fully-charged before use.

CHARGING THE BATTERY ON THE BLENDER

1. We recommend fully charging the blender before first use. Remove charging port cover and insert base plug into charging port. Plug USB plug end into a USB plug adapter and then plug into a power outlet.

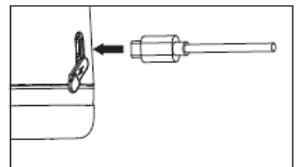

2. Different colors of LED light will be shown as below when charging:

LED Light	Indicates
Solid Blue	Battery is full in charge
Solid Purple	Battery is between 50% to 100%
Solid Red	Battery is < 50%

3. Charge time will vary depending on your charger,


5V 2A rated output will take maximum 4 hours.

4. **IMPORTANT:** Only use USB Cable provided with blender.


USING YOUR PRODUCT

Your blending jar and blades are subject to wear during normal use. Always inspect blender jar and blades for nicks, chips, or cracks. Check blades for breaks, cracks, or chips. If any parts are damaged, do not use them.

1. Add ingredients and liquid into the blender jar first. **DO NOT** fill over MAX 300mL line. (For example – the bowl filled to maximum indicated level with a mixture of 120g soaked carrots and 180ml water.)
2. Turn base upside down, and clockwise to lock base onto blender jar. The dots on blender jar and base should align when base is locked onto the blender jar.
3. Press ON/OFF button 2 times within 1 second while holding upside down, then immediately turn blender jar right side up.
4. LED Light stays on while blending. Blender will automatically turn off after 40 seconds of blending. LED Light will be off when blending is complete.

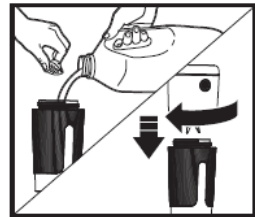

- Remark:** If blending crushed ice, greens, or frozen fruit, repeat blending until desired consistency.
5. Turn base upside down, and carefully turn base counterclockwise to unlock. Lift up base to remove.
 6. Place travel lid on Blending Jar and turn clockwise to tighten.
 7. Wash the blades with water, keep the base with sharp blades in a safe place away from children.
 8. For best results, always add liquid first and then, ice, greens, frozen fruit, or powder.
 9. Do not blender or process hard foods such as cheese, crackers, or meat.
 10. If blending stops, shake blender several times to dislodge food stuck on blades.
 11. If food is stuck to blender Jar side, while blender is still blending, shake blender several times to remove stuck-on food.

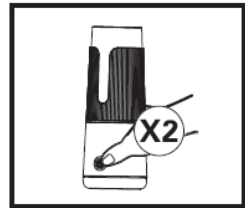

12. Avoid bumping or dropping the blender.
13. Recommend to operate your blender when blender is at least charged to illuminate purple.

Note

The appliance has two working models: PULSE working mode and Crushing Ice mode.

PULSE working mode: Press ON/OFF button 1 time and keep the ON/OFF button pressed do not remove your finger, the appliance will operate in PULSE working mode and LED Light will stay on. Blender will automatically turn off after 30 seconds blending. LED Light will be off when blending is complete. (The appliance will switch off if you remove your finger from the ON/OFF button during this process.)

Crushed Ice mode: Add few ice cubes like 10g-20g. The ice cube size suggested is not over the size of 20mm x 20mm. Press ON/OFF button 2 times within 1 second, the appliance is in Crushed Ice mode and LED Light will stay on while blending. The blender will automatically turn off after 40 seconds of blending. LED light will switch off when blending is complete.

TROUBLESHOOTING AND SOLUTION

Blender jar position protection circuit

If the blender jar is not locked together with the base properly, the LED light will flash in cyan color. Then you need to turn base upside down, and turn clockwise to lock base onto blender jar while the dots on blender jar and base are aligned correctly.

Machine temperature abnormal protection

During use (or when charging), if the temperature on the appliance becomes abnormal, it will activate the protection function. The LED light will flash in blue color and the appliance will stop working (or charging). Disconnect the USB cable (if charging) and allow the unit to cool down for at least 30 minutes.

Machine works abnormally

During use, if the load is too large (for example, the motor is sticky or stuck by food), the appliance will activate the protection function. The LED light will flash in yellow color and the appliance will stop working. To reset, press the ON/OFF button to turn the appliance off, then shake the blender several times to remove stuck-on food if it is stuck OR decrease the food quantity if it is overloaded.

Machine does not operate

The blender battery may be low. Check the battery charge status level. Charge the blender with recommended charger. Follow the charging instructions as described in this manual.

CARE AND CLEANING



WARNING! Electrical shock Hazard.

Disconnect power before cleaning. Do not immerse USB cable assembly or base in any liquid.

1. Unplug USB cable from the unit. Make sure LED Light is off.
2. Turn base upside down and turn counterclockwise to unlock base. Lift up the base to remove.
3. Hold the base on its side, carefully rinse just the blades under running water. It is okay for some water to get into top of base. Do not immerse base in water or place use in the dishwasher.



WARNING! Do not immerse the main unit in water or any other liquids to clean.

4. Wipe blender base and control panel with a damp cloth or sponge. To remove stubborn spots, use a mild, nonabrasive cleanser.
5. Care should be taken when handling blades on base since blades are very sharp. Rinse and dry thoroughly. Do not soak.

Quick Clean

To clean Blender Jar, add water to MAX level and a drop of liquid dishwashing detergent. Place base onto blender jar and turn clockwise to tighten. Press START/STOP button 2 times within 1 second. LED Light will stay on while blending.

Blender will automatically shut off after 40 seconds. Turn Base counterclockwise and lift up to remove. Discard soapy water. Rinse Blender Jar with clean, warm water.

TECHNICAL DATA

Voltage input: 5Vd.c. 2A

Rated power: 80W

Battery capacity: 1500mAh

Capacity: Max 300mL

Button switch: Single-click for PULSE working mode and Double-click for Crushed Ice mode.

This product is an electronically controlled rechargeable handy blender for blending fruits, vegetables, and other foods, with button control and indicator display light.

DISPOSAL AND RECYCLING



This product must not be disposed together with the domestic waste.

This product has to be disposed at an authorised place for recycling of electrical and electronic appliances. By collecting and recycling waste you help save natural resources, and make sure the product is disposed in an environmentally friendly and healthy way.

- The battery must be removed from the appliance before it is scrapped:
- The appliance must be disconnected from the supply mains when removing the battery;
- The battery is to be disposed of safely

12 MONTH WARRANTY

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

