

anko

**Portable USB Citrus Squeezer
43002A
User Manual**



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE
REFERENCE**

IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:




READ ALL INSTRUCTIONS BEFORE USE.

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. Do not allow children to use the appliance without supervision.
4. Do not operate the appliance if it is damaged.
5. The appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, office and other working environments,
 - farmhouses,
 - by clients in hotels, motels and other residential type environments,
 - bed and breakfast type environments.
6. Do not operate the appliance for other than its intended use.
7. **WARNING! It must only be supplied at safety extra low voltage corresponding to the marking on the appliance.**
8. Do not put the appliance include USB cable in water or other liquid. See "Care and Cleaning" section.
9. This appliance contains batteries that are non-replaceable.
10. Never remove parts from the appliance such as screws.
11. Do not use harsh detergents or abrasives materials to clean any of the parts/housing.
12. Keep the appliance and its cord out of reach of children.
13. Do not place the appliance in microwave oven or refrigerator.
14. Do not allow children to use the citrus juicer without supervision.
15. Strictly prohibit disassembling the product shell to replace the lithium battery privately.
16. Keep the appliance and its cord out of reach of children.
17. Misuse may cause injury.
18. **WARNING! Do not immerse the motor base in any water or any liquid.**

19. The max operating time per cycle is around 18 seconds.
20. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
21. For charging, please refer to “CHARGING YOUR CITRUS SQUEEZER”.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

KNOW YOUR PRODUCT

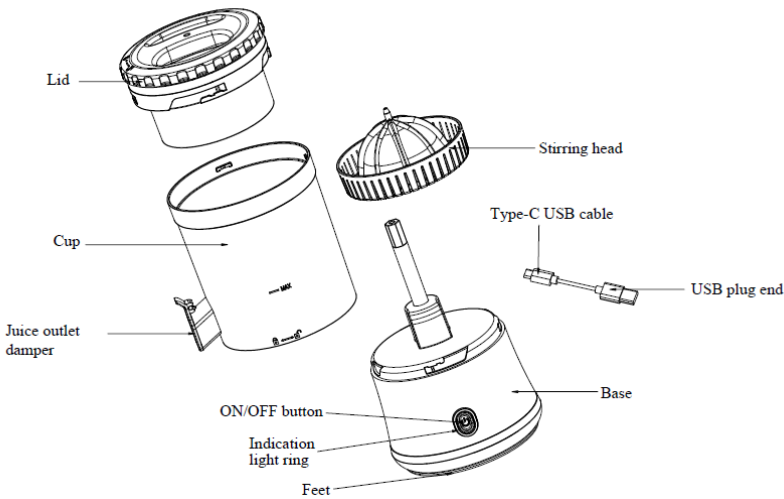

BEFORE FIRST USE

1. Unpack the appliance and all attachments carefully. We suggest you keep the original packaging carton and materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the appliance when it is not in use. In the event that the carton is to be disposed of, please recycle all packaging materials where possible.
2. Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.

3. Ensure you have all parts and accessories and inspect all parts of the appliance for visual damage. Unwind the USB cable to its full length and inspect the cable for damage. Do not use the appliance if the appliance or the USB cable has been damaged or is not working properly.
4. Read this manual to familiarize yourself with the parts and operating principles of the USB Citrus Squeezer. Pay particular attention to the safety instructions in this manual.
5. To remove dust from transport and storage, wipe off the motor base with a slightly damp cloth. Then wait until all parts are dry.
6. Do not use harsh detergents or abrasives materials to clean any of the parts/housing.
7. Please make sure the appliance is fully charged before use.

CHARGING YOUR CITRUS SQUEEZER

1. We recommend fully charging the citrus squeezer before first use. Remove charging port cover and insert base plug into charging port. Plug USB plug end into a USB plug adapter and then plug into a power outlet.
2. LED light is in red colour during charging process and will change to white colour if the appliance is fully charged.
3. A charger with DC 5V, 1A rated output will take maximum 4 hours to fully charge the appliance.
4. Only use USB Cable provided with citrus squeezer.

USING YOUR CITRUS SQUEEZER

Your citrus squeezer and stirring head are subject to wear during normal use. Always inspect citrus squeezer and stirring head for nicks, chips, or cracks. If any parts are damaged, do not use them.

1. Place the base on a flat surface and assemble the cup to base correctly. You can hear a “click” when the cup is firmly attached to the base.
2. Put the stirring head into the cup, and place half of the fruit to the stirring head (peel side up), then close the lid to the cup. You can hear a “click” when the lid is firmly attached to the cup.

Tips: Cut the fruit in half or quarters if fruit is larger.

3. Place the cup under the juice outlet.
4. Single click ON/OFF button, the appliance starts working and squeezing juice, the appliance will automatically work for around 18 seconds.

5. During this process, click ON/OFF button to stop the squeezing process, and pressing the ON/OFF button again, the appliance will reset to initial position.
6. During use, if the white light is blinking, it means that the current battery is low, and the appliance needs to be charged as soon as possible to avoid stopping during use. LED light is in red colour when charging, and switch to white colour when fully charged.

RECIPE

Fruit	Weight (g) Cut the fruit into half	Squeeze time (s)
Apple	98	17 seconds
Orange	92	17 seconds
Grapefruit	182	18 seconds
Lemon	56	17 seconds
Pear	108	17 seconds
Kiwi	46	17 seconds

TROUBLESHOOTING AND SOLUTION

Machine does not operate

If the appliance does not operate, the citrus squeezer may be in low battery or not installed correctly. Check the appliance and install the appliance properly. Or charge the citrus squeezer with a recommended charger to fully charge the battery. Follow the charging instructions in previous section of the manual.

Machine operates with abnormal noise

During the working process, if the accessories are not installed properly or the appliance is placed in an inclined position, the appliance may create lot of noise. If this happens check and install the accessories properly and place the appliance in a flat and stable position.

Machine suddenly stops operating

If the appliance is suddenly stops operating, the citrus squeezer may be stuck as the fruit is too big or hard or the battery is drained.

If the appliance is stuck, the red and white lights will alternately flash 10 times and automatically shut down. At this time, remove ingredients that are too large or too hard and restart the appliance.

If the battery runs out, the red light will blink 6 times and the appliance will automatically shut down. Please charge the appliance before use.

CARE AND CLEANING

WARNING Electrical shock Hazard

Disconnect power before cleaning. Do not immerse USB cable assembly or base in any liquid.

1. Unplug USB cable from the unit. Make sure LED Light is off.
2. Remove any excess food from the citrus squeezer and disassemble the unit. Carefully wash the lid, stirring head and cup in warm soapy water, rinse and dry.
3. Clean exterior of motor base with a soft damp cloth and dry.

WARNING Do not immerse the main unit in water or any other liquids to clean.

4. Wipe citrus squeezer base with a damp cloth or sponge. To remove stubborn spots, use a mild, nonabrasive cleanser.
5. Do not use any parts in a dishwasher.

TECHNICAL DATA

Model: 43002A

Input: 5V  1A

Rated Input Power: 30W

Battery capacity: 1500mAh

Capacity: Max 250mL

Button Switch: ON/OFF button for easy operation.

DISPOSAL AND RECYCLING



This product must not be disposed together with normal household waste.

This product must be disposed at an authorised place for recycling of electrical and electronic appliances. By

collecting and recycling waste you help save natural resources, and make sure the product is disposed in an environmentally friendly and healthy way.

-The battery must be removed from the appliance before it is scrapped:

-Ensure the appliance is disconnected from mains power before removing the battery;

-The battery is to be disposed of safely.

12 MONTH WARRANTY

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

