

# **anko**

**Jewellery Ultrasonic Cleaner**

**SHG-007**

**User Manual**



**PLEASE READ AND SAVE THESE  
INSTRUCTIONS FOR FUTURE REFERENCE**

# IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:




## READ ALL INSTRUCTIONS BEFORE USE

- Before using the appliance for the first time, ensure all packaging is removed and disposed of correctly and kept out of reach of children.
- Never leave the product unattended during use.
- Always place the appliance on a solid, stable, flat, and dry surface.
- Do not disassemble and assemble this product by yourself. For electrical safety, any repairs to the product must be carried out by qualified electrical person only.
- Add water when the appliance is switched OFF and the adapter disconnected.
- Do not add water exceeding the MAX level mark.
- Do not use the product without water. Working without water will cause damage to the product and items placed in the product for cleaning.
- Do not add abrasives or corrosive chemicals.
- Switch OFF and unplug the appliance (AC adaptor) from mains power after use.
- Only use the appliance as described in this manual.
- Do not immerse the appliance in water or any other liquid.
- Always check the appliance for damage prior to use. If any damage is observed, DO NOT use.
- Always switch the appliance OFF after use.
- This appliance is for personal use only, not designed for commercial use.
- Do not use the appliance if it is not working properly, if it has been dropped or if it has been immersed in any liquid.
- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Check that your supply voltage is the same as that stated on the adaptor.
- It is normal for the adaptor to become warm to touch when in use.
- Use only attachments provided.
- Do not stretch, twist and curl the cable around the appliance.
- Keep the power cable away from hot surfaces.
- DO NOT submerge the appliance, nor make it flow under a water-tap.
- DO NOT use salt water or boiling water for cleaning. Also, do not use cleaning products that are designed for toilets, bathrooms or kitchen appliances.
- **IMPORTANT! The appliance must be used only with the adaptor provided with the product, adaptor model HCX2401-1201500A.**
- For cleaning and storage, please refer to “CLEANING AND STORAGE” section.

**SAVE THESE INSTRUCTIONS  
FOR HOUSEHOLD USE ONLY**

## KNOW YOUR ULTRASONIC CLEANER

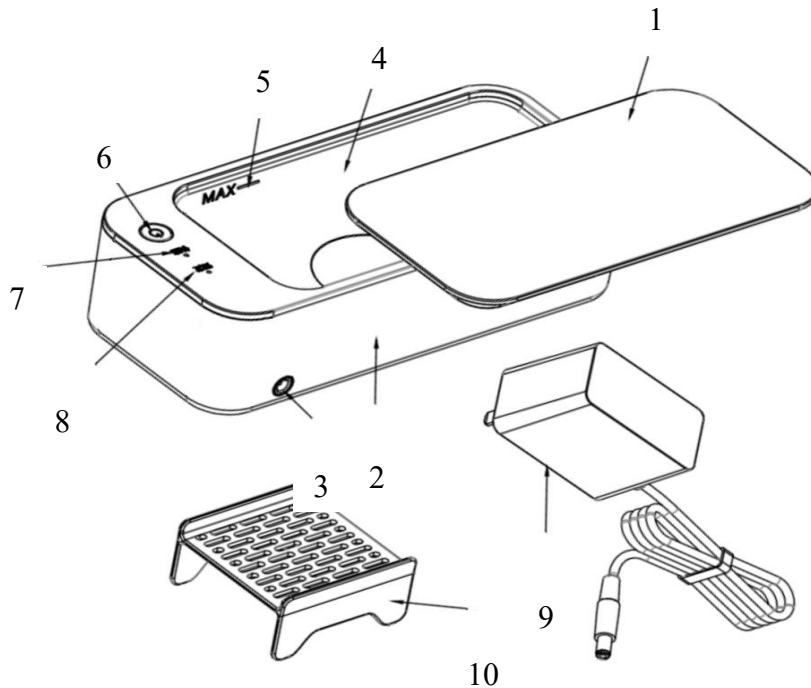

- |                      |                               |
|----------------------|-------------------------------|
| 1. Transparent cover | 6. On/Off switch              |
| 2. Main unit         | 7. 3 Minute working indicator |
| 3. DC inlet          | 8. 6 Minute working indicator |
| 4. Water tank        | 9. Adaptor                    |
| 5. MAX water level   | 10. Shelf                     |

## USE YOUR ULTRASONIC CLEANER

1. Take off the transparent cover and fill water into the water tank up to the MAX water level mark.  
**WARNING! DO NOT fill water above the MAX level mark (maximum water capacity 400mL).**
2. Gently put items into the water tank until completely submerged in water. Use the shelf if needed.
3. Connect the AC adaptor cord plug into mains power outlet and the adaptor plug on to the appliance.
4. Press the On/Off switch once. The 3 Min working indicator will light up and the appliance will start to function.
5. Press the On/Off switch again to extend the cleaning time to 6 Minutes, if needed.

6. The appliance will automatically stop when set time is completed.

Note: If the cleaning process needs to be cancelled or finished earlier than the set time, press the On/Off button one or two times until the appliance stops operating.

7. After cleaning, unplug the power supply. Pour the water out from the opposite direction of the switch.

Note: DO NOT leave water in the tank after cleaning. Ensure the tank is completely drained of any water.




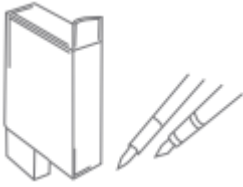


**CAUTION! Allow the appliance to rest for at least 5 minutes after running it for 15 minutes.**

**TIPS**

Regular cleaning: Use only clean water.

Subsection cleaning: For longer items, since they cannot be completely placed in the cleaning tank, they can be cleaned in sections.

**APPLICABLE ARTICLES**

Jewelry	Glasses & Watch	Daily necessities
		
necklace ring earrings bracelet	sunglasses glasses watch chain water-proof watch	the head of electric razor false tooth razor blade comb toothbrush
Office supplies	Metal parts	Tableware
		
the head of pen printer nozzle seal	watch parts coins	metal tableware

**The following articles are NOT applicable to clean in the appliance**

Jewelry	hawkshell, pearl, emerald, ivory, coral, agate	Due to the low hardness of these items, friction may occur during cleaning, resulting in scratches.
Metal	welded metal, plated metal, metal binder	Ultrasonic will cause these items to crack wider and peel off.
Watch	pocket watch	The pocket watch that is not waterproof can cause seepage by ultrasonic
Others	wood, glass, contact lenses, ceramics, etc	The original fine lines on these items can be enlarged by ultrasonic cleaning.

## CLEANING AND STORAGE

**CAUTION: Never immerse the main unit in water or other liquids. Never use abrasive cleaners on any part of the product. Do not place any parts into a dishwasher or extremely hot water.**

- Switch OFF and clean the ultrasonic cleaner after each use.
- Remove the AC adaptor from mains power outlet socket and plug from the main unit.
- Clean the main unit with a damp cloth or sponge. Wipe dry with a soft dry cloth.
- Wash all the other parts except the motor base in warm, soapy water, and then rinse and dry thoroughly.
- Make sure all components are clean and dried thoroughly before storing.
- Store the appliance upright in a clean and dry location. Do not place anything on top.

### **TECHNICAL SPECIFICATION**

Voltage: 12Vd.c 18W

Max Capacity: 400mL

## **12 Month Warranty**

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

<b>Contact for Kmart purchases</b>	<b>Contact for Target purchases</b>
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a>	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a>

# User Manual

## AC Adaptor

Model: HCX2401-1201500A

Input: 100-240V~ 50-60Hz 0.8A

Output: 12VDC 1.5A

### Safety Hints

1. The adaptor is suitable for use together with Class II equipment for household appliance only.
2. The adaptor is suitable for moderate climates only.
3. The maximum ambient temperature during use of the adaptor must not exceed 40°C
4. The adaptor is intended to be operated under altitude up to 2000m.
5. The ventilation must not be impaired by covering the adaptor with items such as newspapers, table cloths, curtains etc.
6. Naked flame sources, such as candles, must not be placed on the adaptor.
7. The adaptor and the power cord plug must all times be easily accessible during use. In case power cord or the plug on the adaptor is broken it must be disposed.
8. The adaptor does not require much attention. When cleaning use only dry cloths or a brush.
9. The internal protective device cannot be replaced after a short-circuit or overload.

Symbols used:



Indoor use only



Protection class II appliance



 
Short-circuit-proof safety isolating transformer  
(inherently or non-inherently)



SMPS (Switch mode power supply unit)



The adaptor complies with Energy Efficiency marking level "VI"



+: Positive    -: Negative

**GUANGDONG HUACHUANGXING POWER SUPPLY CO., LTD.**

NO. 27 FUDONG ROAD, DONGFENG VILLAGE, LELIU STREET, SHUNDE DISTRICT FOSHAN CITY, 528000  
Guangdong, P.R. China