

T: 69546235
K: 43381944

EVERY PORTABLE INDOOR/OUTDOOR LAMP (Model No.:359119)

IMPORTANT SAFETY INSTRUCTIONS:

The following safety precautions should always be followed, to reduce the risk of electric shock, personal injury or fire. It is important to read all these instructions carefully before using the product, and to save them for future reference or new users.

WARNING:



Before using the product, please read this manual carefully.

1. Children must not use this product without adult supervision.
2. Do not expose the product to fire or high temperatures over 45 C.
3. Keep away from water, liquids, or wet areas.
4. Use a dry cloth to clean this product. Do not use chemicals on this product.
5. Make sure the product has plenty of ventilation during charging.
6. Do not place the product in direct sunlight, heat or the under the windshield.
7. Do not try to repair or disassemble this product.
8. When product is not in use, make sure it is correctly turned off and stored in a cool dry place
9. When disposing of this product. Do so responsibly following local government requirements.
10. This device design can be used indoors or outdoors.
11. Bulb is not replaceable. When it reaches its end of life, the whole light shall be replaced.
12. The rechargeable battery is permanently built into the product and cannot be replaced.
13. Never charge the rechargeable battery of the product unattended
14. If the product shows damages, do not use it any longer and have it re-paired by a qualified technician, or contact our customer service department. Do not disassemble the product, and do not try to repair it yourself.
15. Only charge the product with an approved and suitable USB charger that complies with the requirements of the relevant standards
16. When disposing the product, please consult an electrician or your retailer to remove and dispose the built-in batteries in an environmentally friendly manner
17. Use provided charging cable to charge the product only.

WARNING: READ AND FOLLOW ALL ABOVE INSTRUCTIONS CAREFULLY. DO NOT DROP OR APPLY EXCESSIVE FORCE TO THIS PRODUCT. DO NOT EXPOSE TO HIGH TEMPERATURES. IMPROPER USE OR HANDLING OF THIS PRODUCT MAY RESULT IN FIRE OR EXPLOSION CAUSING SERIOUS INJURY OR PROPERTY DAMAGE.

Product Specification

USB input: 5VDC, 2A, Max. 10W
Non-replaceable recharge battery 3.7V 1200mAh
Non-replaceable light globe
Charging indicator will be in red colour during charge. After fully charged it will be changed to green

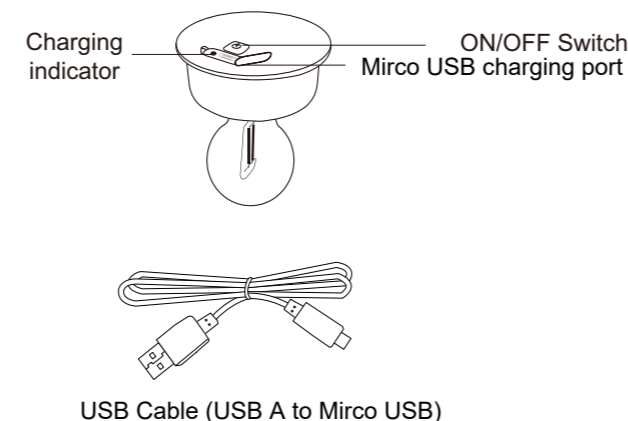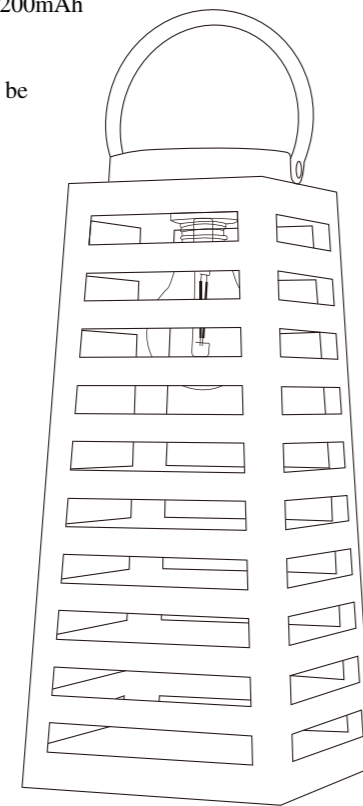

USB Cable (USB A to Mirco USB)

FRONT

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

BACK