


8+ YEARS

# RC FOAM DRONE MANUAL




Please read the instructions before operating the product.

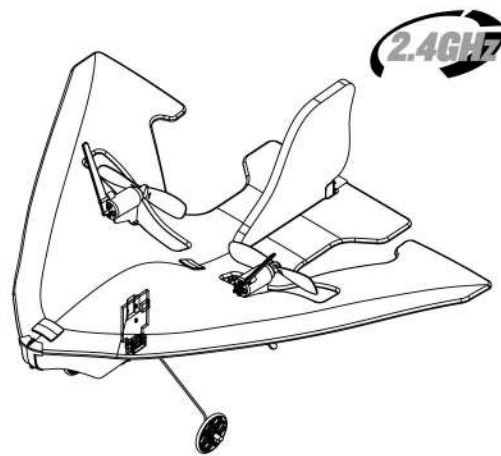


2.4GHZ

**Attention:** The drone includes a built-in rechargeable battery that is non-replaceable. The included rechargeable battery is not fully charged prior to shipment and must be charged before the first use.

## DRONE

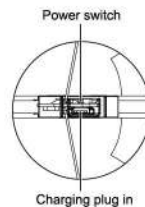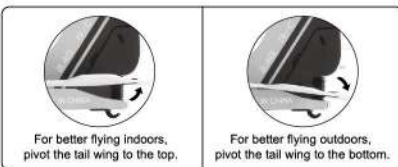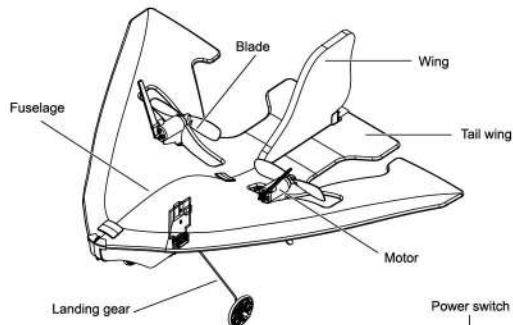

## REMOTE CONTROL

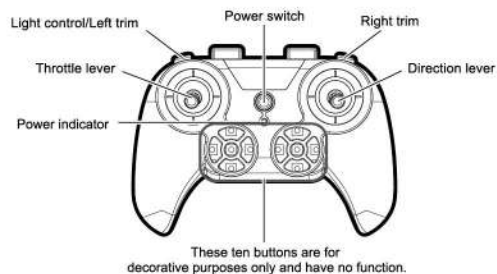


These ten buttons are for decorative purposes only and have no function.

1

## HOW TO ASSEMBLE THE LANDING GEAR


Install the landing gear to the corresponding hole at the bottom of the drone as shown in Diagram 1.

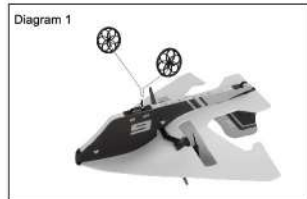

## BATTERY INSTALLATION

- Unscrew to open battery cover, insert 4 x 1.5V AA batteries. (see Diagram 2)
- Replace battery cover.

Attention: Remove batteries after you have finished using your product.

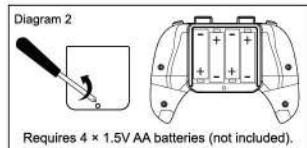

Requires 4 x 1.5V AA batteries (not included).

## LITHIUM BATTERY CHARGE INSTRUCTIONS

Attention: Do not charge battery immediately after each play, let the battery cool down for a while.

- Turn off drone.
- Connect USB charging cable plug with drone charging interface. (The battery connector will only fit in one way, do not force the connectors together)
- Plug the large end of the USB cable into a 5Vd.c. 2A charger (not supplied) or USB port only. The USB indicator light up when it has started charging.
- Once the indicator light extinguishes, the drone is fully charged. Unplug the USB charging cable from computer USB interface and disconnect from drone.

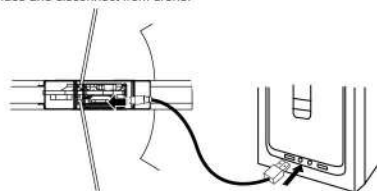


Diagram 3

2

## DRONE MATCHING CONTROL METHOD

Attention: Select a large, wide-open area for flying, and make sure that there are no obstructions, animals, people or overhead powerlines nearby. Do not operate the drone in strong wind, rain or snow etc.

 
- Set the drone power switch to "ON" state and place flat on the ground, the LED lights on drone will be flashing rapidly. Ensure you are least 2 metres away from the back of the drone.
- Set the remote control: push the throttle lever down and set the power to "ON".
- Push the throttle lever up, you will hear one beep sound. Then push it down, you will hear the beep sound again. If the power indicator on the remote control stops flashing, the pairing is successful. If pairing is not successful, please repeat steps 1-3.
- Now you can operate your drone. See following instructions to play your drone.

## CONTROL METHOD OF THE DRONE

Note: It is recommended to play the drone in an open indoor area or in breezy or windless weather for better flying.


## HOW TO TAKE OFF

### Method 1:



Place the drone on the flat ground, slowly push the throttle lever of the remote control from down to up. The drone will take off after gliding straight. When the drone flies off the ground, return the throttle lever to the middle to avoid crashing due to excessive flight power.


### Method 2:

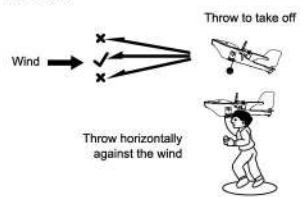

Push up the throttle stick halfway, and then throw the drone forward horizontally, the drone will climb slowly after being thrown.

Tip: If the drone flies too fast during flight, you can slowly pull down the throttle lever to reduce the power of the drone. If the drone starts to fall during flight, you can slowly push up the throttle lever to increase the power of the drone.

3

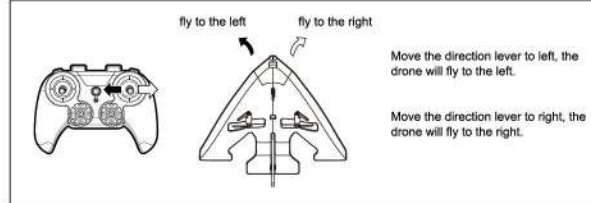


Tip: Please note that the remote control will sound a beep when the drone is about to fly out of the signal range or the drone is low in battery in the signal range.

## HOW TO TRIM THE DRONE

When the drone lifts-off the ground, you can use the trim to correct the action if the drone leans in the wrong direction.

If the drone drifts to left, hold down the right trim button as shown in Diagram 4, the remote control will sound a beep. Trim it to right until it stops drifting. If the drone drifts to right, hold down the left trim button as shown in Diagram 4, the remote control will sound a beep. Trim it to left until it stops drifting.

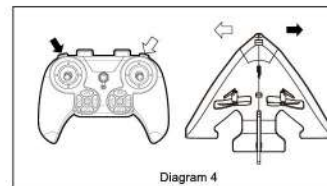

## LIGHT CONTROL

Press the light control button to turn on / turn off the lights of drone.



4

## WARNING

- Please follow the instructions for correct installation and use. Some parts require assembly by an adult.
- This product contains small parts and is a choking hazard.
- Do not touch the hot motor and batteries.
- Do not touch working propellers.
- Do not fly towards yourself or other people.
- Adult supervision is required.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix old and new batteries or batteries of different types.
- Do not short circuit the battery or put the battery in fire.
- Do not leave the toy unattended while charging it.
- When the battery is low, please return the drone and recharge it.
- Charge the toy on non-flammable surfaces and keep it away from flammable items.
- Turn the charger off when the toy's battery is charged, and always unplug it from the toy.
- If the toy has been damaged, immediately stop use, unplug, and safely move the toy away from flammable materials.
- Follow the manufacturer's instructions for charging the toy. Do not charge longer than recommended.
- Do not use the product for a long time. Remove the battery after use.
- To avoid injury, do not touch the rotating parts.
- Do not impact or drop the drone or remote control.
- Please use a clean soft cloth to clean the product.
- The user is responsible for ensuring that the product will not cause harm to themselves or others.
- The manufacturers and dealers accept no responsibility for injuries or damage to property caused by improper use.
- The packaging and instructions contain important information of products, please keep for future reference.
- Only fly during the day and keep your drone within visual line-of-sight. This means being able to see the drone with your own eyes (rather than through a device) at all times.
- Do not fly your drone higher than 120 metres (400ft) above the ground.
- Keep your drone at least 30 metres away from other people.
- Do not fly your drone over or near an area affecting public safety or where emergency operations are underway (without prior approval). This could include situations such as a car crash, police operations, a fire and associated firefighting efforts, and search and rescue.
- Only fly one drone at a time.
- Do not fly over or above people. This could include beaches, parks, events, or sport ovals where there is a game in progress.
- Keep at least 5.5km away from controlled aerodromes if your drone weighs more than 100g. Flying within 5.5km of a non-controlled aerodrome or drone landing site (HLS) is possible, but only if no manned aircraft are operating to or from the aerodrome. If you become aware of manned aircraft operating to or from the aerodrome/HLS, you must manoeuvre away from the aircraft and land as soon as safely possible.
- Do not operate your drone in a way that creates a hazard to another aircraft, person or property.
- Respect personal privacy, do not record or photograph people without their consent - this may breach state laws.

5