



6374-AU Spectrum_Instruction Sheet

English Translation

Size :A4

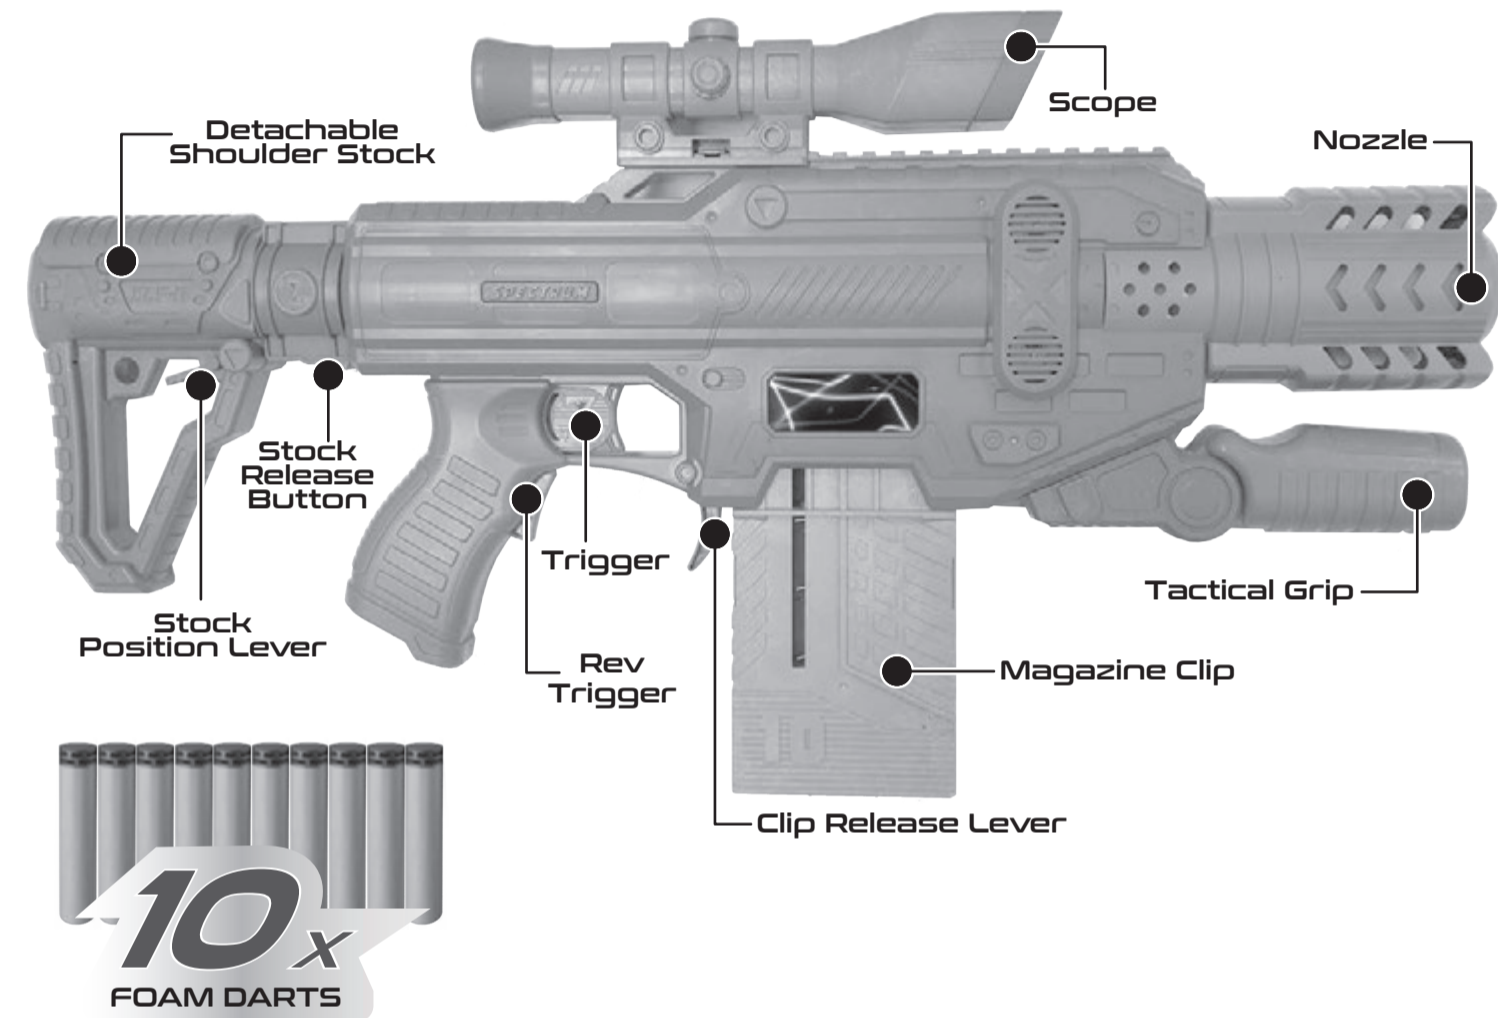


Set-up Instructions:

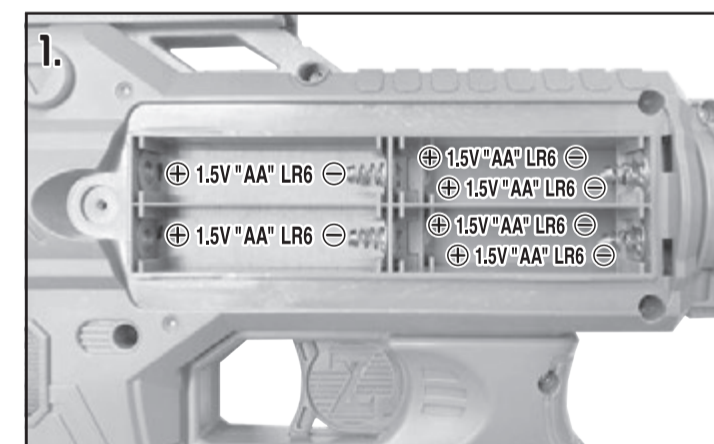

1. Loading Batteries


- Loosen Battery Cover screws with a Philips/cross-head screwdriver (not included).
- Lift Cover, and insert 6 x 1.5V AA batteries (not included). Follow the polarity instructions (see diagram). Note that one part of the battery box has a double layer of batteries.
- Close the Battery Cover, and replace the screws.

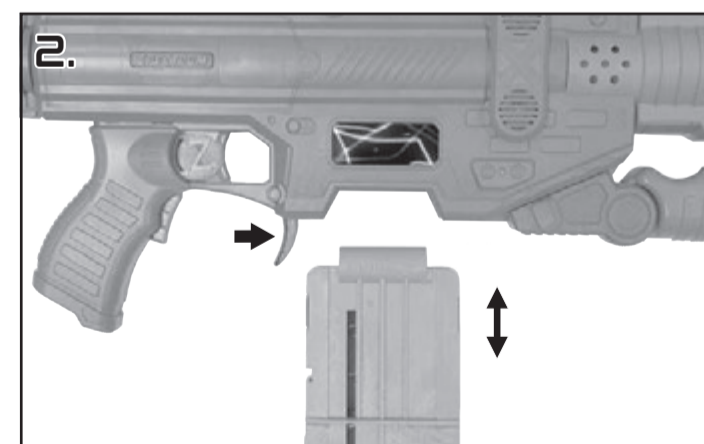

2. Loading Darts


- Your Clip can hold 10 Darts
- Remove Clip by pushing the Clip Release Lever forward, and pulling the Clip downwards.
- Insert 10 Darts in the Clip; ensuring that you follow the directional arrow.
- Replace Clip by pushing it back into the cavity.

PRIME TIME	Item Description: 6374-AU Spectrum_IM	Version:	Pkg Size: 420mmW x 297mmH	Purposes/Remark: Kmart ver.
	Client: Brand: DZ	Supplier:	Pkg Type: ---	
		File Name: 6374-AU Spectrum_IM_02-09-24		
	Responsible by:	Prepared by: Kenji	Approved by:	Issue Date: 02-09-2024

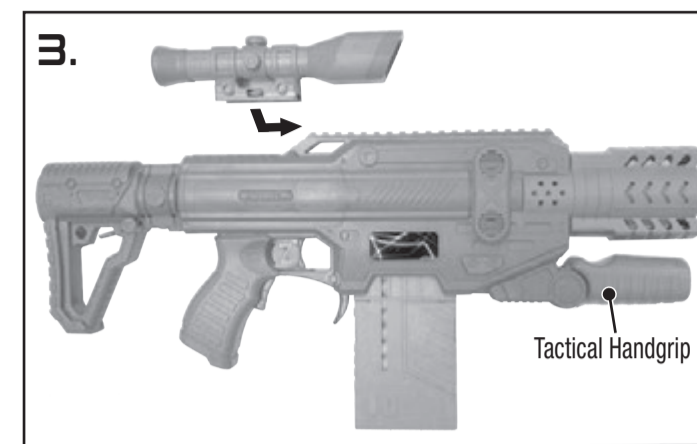


3. Attaching Scope

- Slide Scope onto tactical rail from either the front or the rear.
- Adjust position for your target.

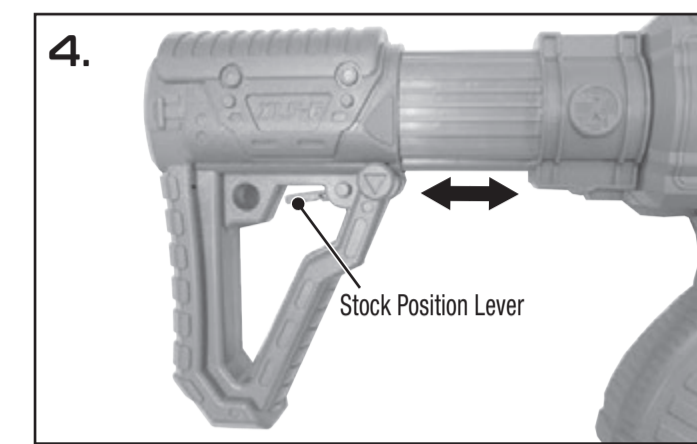


4. Adjusting Shoulder Stock

- Pull up on Stock Lever and slide the Stock backwards, or forwards, to find your most comfortable fit.
- Release Lever to lock your Stock in position.

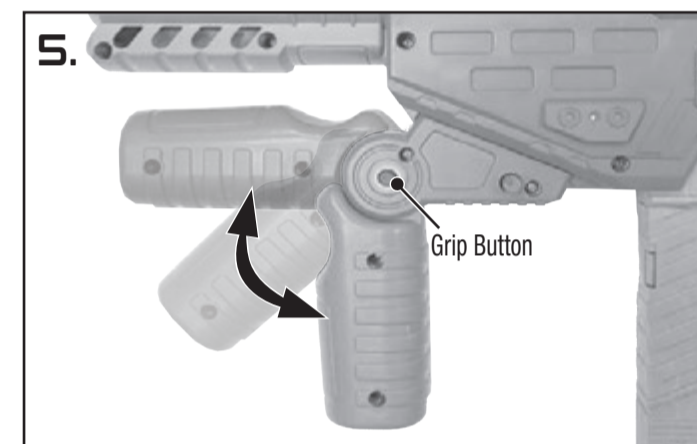

5. Adjusting Tactical Grip

- Your Tactical Grip can function in either a horizontal or vertical position. Depress the Grip Button to convert from one to the other (see diagram).

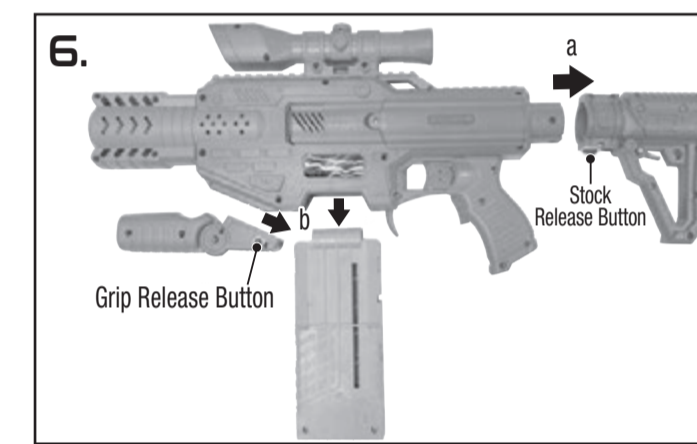

6. Converting into Tactical Blaster Mode

- Depress Stock Release Button and slide the entire Stock out (see diagram).
- Remove Dart Clip, and press down on the Grip Release Button to slide the Grip out (see diagram).



7. Removing Jammed Darts

- Slide back the Safety Door. This will cut off all electricity, and the motors will stop.
- Reach in and remove the jammed Dart. Close the Safety Door.



8. Launching Darts

- Depress the Rev Trigger continuously, and pull the Trigger (Releasing the Rev Trigger will cut off all electricity).
- Each pull of the Trigger will launch one dart.

Trouble Shooting:


Problem	Suggestion
Pressed Trigger: No Response	<ul style="list-style-type: none"> Check that batteries have been inserted in the correct polarity. Ensure that the Rev-Trigger is depressed; to activate the motors. Ensure Safety Door is closed.
Darts travel only a short distance	<ul style="list-style-type: none"> Replace the worn Batteries Rapid depressing and releasing of the Rev-Trigger does not give the motors sufficient time to rev up. Hold down the Rev Trigger for a longer period before pulling the Trigger.

Battery Safety Information:

- Batteries are to be inserted with the correct polarity and always follow the product and battery manufacturers' instructions.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Only batteries of the same equivalent type as recommended are to be used.
- Do not use RECHARGEABLE batteries, unless specified.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Always remove exhausted or dead batteries from the product.
- Remove batteries from the product before storage.
- The supply terminals are not to be short-circuited.
- Batteries may explode or leak if misused.
- Battery/Batteries should be installed by an adult only.
- Dispose of batteries responsibly. Do not dispose of in fire.
- AA/LR6 Batteries may present a choking hazard.
- Keep away from young children.

WARNING:

- Not suitable for children under 3 years of age. Small Parts. Choking Hazard.
- Do not aim at eyes or face.
- Do not launch at self or animals.
- Do not look directly into the barrel.
- Do not use damaged or modified darts.
- Do not modify this product or any of the included components.
- Do not use projectiles other than those supplied with this product.
- Colours and contents may vary from items shown.
- Remove all packaging before giving this product to your child.
- Please keep packaging for future reference.

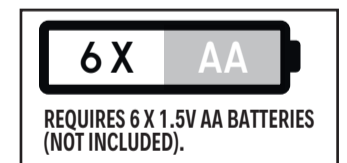

MADE IN CHINA

Customer Service:

Kmart AU: 1800 124 125


Kmart NZ: 0800 945 995

Target AU: 1300 753 567


K: 43386857 | T: 69581298

BLASTERS AND DARTS DESIGNED BY DART ZONE®, DART ZONE®, SPECTRUM® ARE REGISTERED TRADEMARKS OF PRIME TIME TOYS LTD. INTERNATIONAL PATENTS AND OTHER PATENTS PENDING. ALL RIGHTS RESERVED.

P1

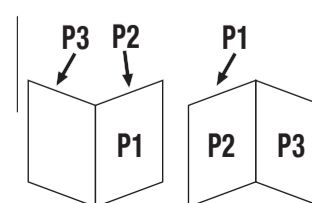

P2

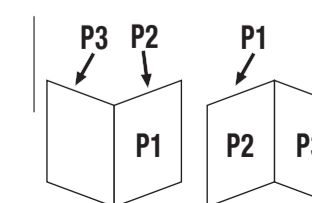

P3

KM-6374-AU-0124