

anko

ROTARY GRILL

Instruction Manual



Model No.: AGRK1

Rev 01

To ensure the proper operation of this device, please read this instruction manual carefully before use and keep them for future reference.

General Information and Safety Instructions



Read all instructions thoroughly before first use, even if you are familiar with this type of product. The safety precautions mentioned in this manual reduce the risk of burns, fire, electric shock, and injury when correctly followed. Keep this manual in a safe place for future reference, along with the purchase receipt and packaging. If applicable, pass these instructions onto the next owner of this appliance.



WARNING

This signal term indicates a moderate risk, which, if not avoided, may result in death or severe injury.



CAUTION

This signal term indicates a low risk, which, if not avoided, may result in minor or moderate injury.

NOTE

This signal term warns you of potential damage.

When using electrical appliances, to reduce the risk of personal injury or damage to property, basic safety precautions must be observed, including the following:

- Read carefully and save all the instructions provided with this appliance.
- Always turn the power off at the power outlet socket before you insert or when removing supply the plug. Remove by grasping the plug – do not pull on the cord.
- Only connect the appliance to a power outlet socket of the same voltage (AC only) as that marked on the Rating Plate of the appliance.
- Do not use the appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Never leave the appliance unattended while in use.
- Close supervision is necessary when any appliance is used by or near children.
- Turn the power off and unplug from the power outlet when not in use, before attaching or removing parts and before cleaning.
- Do not use the appliance for any purpose other than its intended use.
- Do not place the appliance on or near flammable or hot objects.
- Avoid contact with moving parts.
- Do not operate any electrical appliance if the power cord is damaged or after the appliance has been dropped or damaged in any way. If damage is suspected contact Kmart/Target customer service for further advice.
- Do not operate the appliance with wet hands.
- Do not use outdoors.
- Do not let the power cord of the appliance hang over the edge of a table or bench or touch any hot or sharp surfaces.
- Some appliances are “sealed” using tamperproof screws to avoid tampering by unskilled or unqualified persons and for safety reasons.
- Do not attempt to repair, disassemble, or modify the appliance.
- Do not use chemicals, steel wool or abrasive cleaners to clean the non-stick surface or the outside of the appliance as these will scratch the surface.
- Never cover the appliance when it is in operation.
- This appliance is for household, indoor use only.
- Only use the appliance for domestic purposes, not designed for commercial use.

- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Always operate the appliance on a flat, level, heat resistant and stable surface.
- Do not submerge the unit in water or other liquids as this may cause an electric shock and damage to electrical parts.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without adult supervision.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Oversized food or metal utensils must not be inserted in the appliance as they may cause a fire or electrical shock.
- Always disconnect the appliance from the wall socket and allow to cool down completely before cleaning and storing.
- For the detail of cleaning and maintenance please refer to the section “**cleaning and maintenance**”.



CAUTION ! Hot surfaces.

 **WARNING**

Do not cover the appliance when it is in operation.

- **NOTE:** The first time the appliance is used a slight odour may develop. This is entirely harmless and will soon dissipate after few minutes of use. Ensure there is adequate ventilation when using the appliance.
- Do not operate the appliance near curtains, blinds, drapes or in the bathroom.
- To disconnect, grip the power supply cord plug and pull it out from the power outlet socket. Never pull by the cord.

 **CAUTION**

Modifications to the appliance by the user/s may cause, electric shock, fire, property damage and injury to persons. Any modifications to the product will be deemed as not in accordance with the instruction manual and no liability for damages will be accepted.

 **WARNING**

If the supply cord is damaged, it must be replaced by qualified electrical person only or the product must be disposed.

 **CAUTION**

HOT SURFACE! The surfaces are likely to get hot during use.

WARNING:


- To reduce the risk of electric shock, do not immerse or expose the product, flexible cord or plug to rain, moisture, or any liquid.
- Do not use the product near baths, basins or other vessels containing water or other liquids, or when standing in or on damp or wet surfaces.
- In the event that the appliance is dropped into water, turn off the power at the power outlet socket and remove the plug immediately.

DO NOT REACH INTO THE WATER TO RETRIEVE THE PRODUCT UNTIL IT HAS BEEN DISCONNECTED FROM THE MAINS POWER OUTLET SOCKET.

- It is important to note that the appliance will have to be inspected by a qualified technician before using it again.

SAVE THESE INSTRUCTIONS

Parts Guide

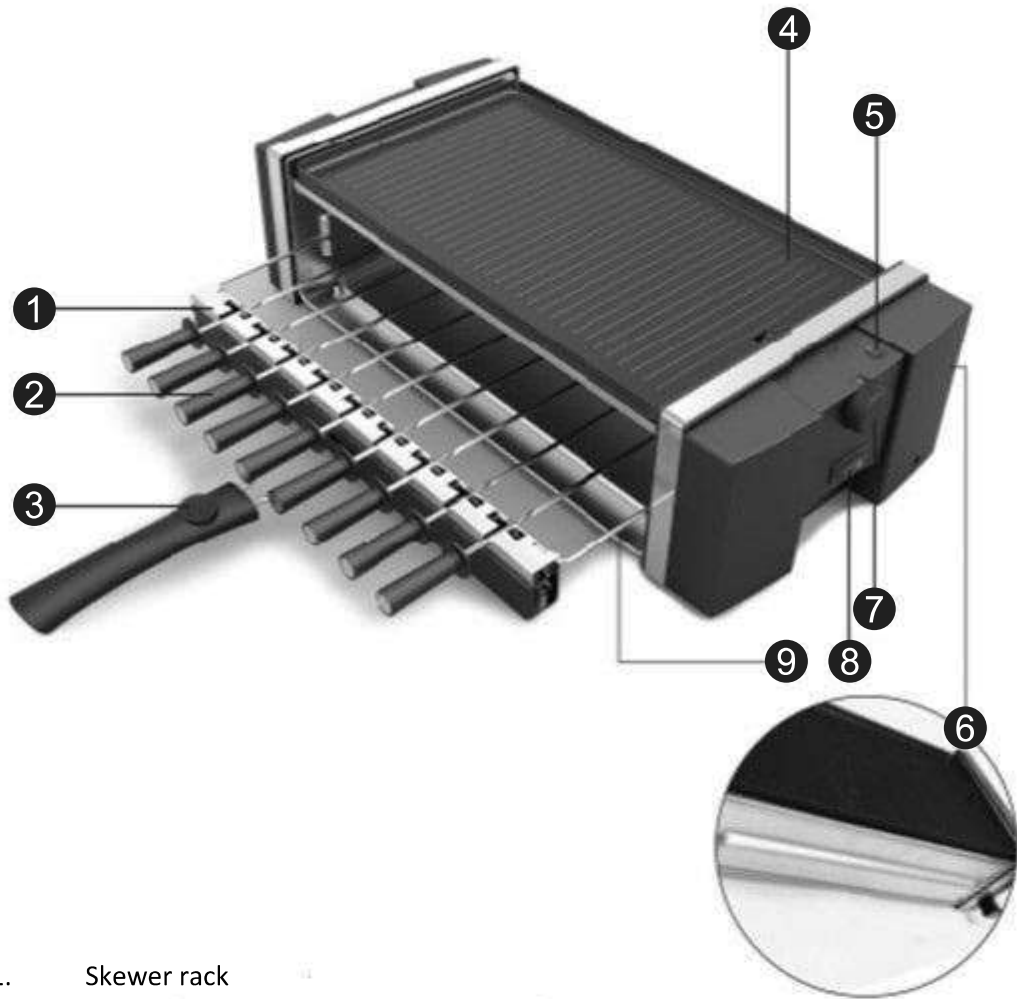

1. Skewer rack
2. Skewers
3. Skewer rack handle
4. Reversible grill/griddle plate
5. Power indicator light
6. Cord storage
7. Temperature control dial
8. Skewer rotation control switch
9. Drip tray

Instructions

GETTING STARTED

Carefully unpack the appliance and remove any packaging. This includes any packaging tape that has been used. Check to ensure that all components are included. If any components are missing, please contact Kmart/Target customer service.

- Unwind the cord to its full length and inspect the cord and plug for any damages. Do not use the product if these parts are damaged. In the case of damage, contact customer service.
- Place the unit on a level, dry and heat resistant surface. Ensure that you read all instructions carefully and keep them for future reference.
- Wipe the reversible grill/griddle plate (4) with a damp cloth, not wet, so they are clean and free of any manufacturing oils that may have been left on the surface.
- **NOTE:** Do not use any abrasive cleaners as these may scratch the reversible grill/griddle plate (4).
- The reversible grill/griddle plate (4) needs to be conditioned and seasoned. Wipe a small amount of butter or margarine onto them with a paper towel.
- Wipe off any excess.
- The grill is now ready to use.
- **NOTE:** The first time the grill is used, a slight odour may develop. This is entirely harmless and will soon dissipate. Ensure there is adequate ventilation when using the grill.

Using the Party Grill.

1. Place the reversible grill/griddle plate (4) onto the base with the side you wish to use facing up. Ensure that it is placed securely into the base.
2. Slide the drip tray (9) into the base.
3. Insert the skewer rack handle (3) by following the guide below:
 - Insert one side of the hook around 45° into the hole as per below (Fig. 1).



Fig. 1

- Squeeze the hook to one side until the other hook can be inserted into the other hole. (Fig. 2).



Fig. 2

- Once both hooks are inside the holes, push the handle towards the rack (Fig. 3).



Fig. 3

- Slide in the skewer rack onto the side rail (Fig 4).



Fig. 4

NOTE: It is advised not to remove the skewer rack handle (3) once it has been inserted.

- Plug the cord into the power outlet. You are now ready to begin cooking.

PREHEATING

1. The power indicator light (5) will illuminate indicating the thermostat is operating.
2. Adjust the temperature control dial (7) to the temperature required to cook the food you desire.
3. Allow 10-15 minutes for the grill to heat to the set temperature.
4. Adjust the temperature control dial (7) whilst cooking if required.

CAUTION

The handles will become hot during use. Always use oven mitts or gloves when touching any part of the grill when cooking. The grill/girdle plate (4) should not be removed from the base while hot. Allow the unit to cool for at least 30 minutes before handling.

CAUTION

Take care around hot surfaces. Steam will escape from all around the grill during cooking.

CAUTION

Never leave the appliance unattended while in use.

REVERSING THE GRILL/GRIDDLE PLATE

1. Turn the temperature control dial (7) to "MIN".
2. Unplug the appliance from the mains power outlet socket.
3. Allow the unit to cool down completely.
4. Remove the reversible grill/griddle plate (4) from the unit.
5. Thoroughly clean the reversible grill/griddle plate (4). (Refer to "Cleaning and Maintenance").
6. Return the reversible grill/griddle plate (4) to the unit with the desired surface facing up.
7. Reconnect the power cord plug into the mains power outlet socket.

TIPS

- The ribbed surface is designed for grilling meat, seafood, and vegetables.
- The flat surface is perfect for frying bacon, eggs, pancakes, and sandwiches.

USING THE KEBAB SKEWERS

1. Assemble the unit with the reversible grill/girdle plate (4) and drip tray (9) in the proper position.
2. Slide the skewer rack (1) into place.
3. Turn the temperature control dial (7) to the maximum setting "5".

NOTE: The reversible grill/griddle plate (4) must be on the unit when using the skewers.

4. Prepare the food and slide the food onto the skewers (2).

5. Pull the skewer rack (1) halfway towards you. (Fig. 5).



Fig. 5

6. Place the skewers (2) into the skewer slots so that the star-like shape at the handle end of the skewers is inserted into the gear slots in the front end of the skewer rack (Fig. 6.).



Fig. 6

7. Slide the skewer rack (1) back into place (Fig. 7).



Fig. 7

NOTE: When using large cubes of meat or fish, you may only be able to cook up to five kebabs at a time. Do not use more than 100 grams of food on each skewer.

8. Once all the skewers (2) are in position, press the skewer rotation switch (8) to “**ON**” (Fig. 8.).



Fig. 8

9. To check if your kebabs are cooked, press the skewer rotation control switch (8) to “**OFF**” to stop the skewers (2) from rotating and remove a kebab. If more time is needed, return the skewer (2) and press the skewer rotation control switch (8) to “**ON**” to resume cooking.

TIPS

NOTE: The below should be used as a guide only as personal preference can be taken into consideration.

1. If cooking hot dogs or sausages, lightly toast hot dog buns on the reversible grill/griddle plate (4) for two minutes before cooking has finished. Cut the rolls in half and spread melted butter on them, then place them on the grill.
2. Brush any oil or lard directly onto the food, not onto the reversible grill/griddle plate (4).
3. The reversible grill/griddle plate (4) can be lined with parchment paper to cook fish if desired. (Ensure that it is suitable for heating/cooking purposes).
4. Make sure that the reversible grill/griddle plate (4) is hot before placing any food on it.
5. To create the criss-cross effect on your food, turn the food 90° halfway through cooking on each side.
6. When grilling fish, use a large flat spatula to turn it over.

NOTE: Only use plastic or wooden heat proof utensils as these should not damage the non-stick cooking surface.

COOKING GUIDE

Refer to the below table for recommended cooking times.

NOTE: Times are approximate. Times can vary depending on the size, thickness, and quantity of the recipe. Adjusting the temperature will also change the cooking times. Always monitor the cooking process.

Meat

1. Meat should be cut into 25mm cubes if cooking kebabs.
2. Marinate less tender meats such as rump steak before grilling.
3. Meat is best cooked from room temperature.

Meat	Size	Approximate cooking times (turn once)
Steak	25mm	Rare: 3-4 minutes Medium: 6 minutes Well Done: 8 minutes
Fillet Steak	35mm	Rare: 8 minutes Medium: 10 minutes Well Done: 12 minutes
Pork Chops		15 - 20 minutes
Lamb Chops		15 - 20 minutes
Lamb Cutlets		10 minutes

SEAFOOD

1. Pat dry seafood with kitchen paper before placing it on the grill.
2. Coat seafood in flour before placing onto the grill.

Fish	Thickness	Approximate cooking times (turn once)
Whole		10 – 20 minutes
Fillet		7 – 9 minutes
Steaks	Approx. 17mm	9 – 10 minutes
Raw king prawns	Approx. 25mm	2 – 4 minutes

VEGETABLES

1. Cook either on grill or skewers.
2. Wash and dry vegetables before cooking.
3. For best results, par boil potatoes, carrots, and beetroot before grilling.

Vegetable	Approximate cooking times (turn once)
Capsicum	8 -10 minutes
Mushrooms	7 minutes
Asparagus	4 minutes
Zucchini	7 minutes
Eggplant	7 minutes
Pineapple	4 minutes
Red Onions	6 – 8 minutes

Troubleshooting

PROBLEM	SOLUTION
The grill is not turning on, the indicator light is not illuminating.	Check that the power has been turned on at the wall outlet.
The grill is not heating up.	Check that the thermostat dial has been set and increase it to a higher temperature.
The skewers are not rotating.	Check that the skewer rotation control switch has been turned to the "I" position.

Cleaning and Maintenance

CAUTION: Unplug the appliance and allow it to cool down completely before performing any cleaning or maintenance.

1. Remove the drip tray (9), empty and wash in warm, soapy water, then dry thoroughly with a paper towel or cloth.
2. Use a damp cloth (not wet) to wipe the non-stick surfaces.
3. Do not use chemical, steel wool or abrasive cleaners to clean the non-stick surfaces as these will scratch the non-stick surfaces.
4. Do not use chemical, steel wool or abrasive cleaners to clean the outside of the appliance as these will scratch the surface.
5. Do not place this appliance in the dishwasher.
6. Make sure that the appliance is completely dry before storing.
7. Never store the appliance whilst it is still hot or plugged in.
8. Never wrap the cord tightly around the appliance. Do not put any stress on the cord where it enters the appliance as this could cause it to fray and break.
9. Store in a cool dry place.

WARNING! Do not immerse the appliance, plug, or cord in water or any other liquid.

STORAGE

- Ensure that the product is disconnected from mains power, it has been cleaned and dried thoroughly before storing.
- Store in a cool and dry place away from direct sunlight and out of reach of children.

Other Useful Information

Correct disposal of this product



This marking indicates that this product should not be disposed with other household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable recycling of material resources. Contact the local council waste management authority for recycling facilities available in your area.

Technical Specifications

Model Number	AGRK1
Power Supply	220-240V~ 50/60Hz
Rated Power	1200W
Protection Class	ON (this appliance must be earthed)

12 MONTH WARRANTY

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

The warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed with the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/-Customer Service Centre 690 Springvale Road, Mulgrave VIC 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, VIC, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us