

# anko

## Vortex Circulator Fan User Manual



Model No.: HEG22AC  
Rev 1


**Note:** The specifications and/or components of this appliance are subject to change without prior notice.



<b>1</b>	<b>Safety Instructions</b>	<b>4</b>
<b>2</b>	<b>Components</b>	<b>6</b>
<b>3</b>	<b>Instructions for Use</b>	<b>7</b>
3.1	Remote Control	7
3.2	Fan	8
<b>4</b>	<b>Care and Cleaning</b>	<b>9</b>
<b>5</b>	<b>Storage</b>	<b>9</b>
<b>6</b>	<b>Warranty Against Defect</b>	<b>11</b>

# 1 Safety Instructions

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Carefully read this instruction manual before using appliance. 
- Keep appliance out of reach of young children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Ensure children and babies do not play with plastic bags or any packaging materials.
- Do not disassemble the appliance. There are no user serviceable parts inside.
- **VERY IMPORTANT:**  
Ensure that appliance does not get wet (water splashes etc.).  
Do not use appliance with wet hands.  
Do not immerse appliance in water or other liquids or use near sinks, baths, or showers.  
**DO NOT** run the power cord under the stand.
- Always operate the appliance from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
- Position the power supply lead properly so that they will not be walked on or pinched by items placed on or against them.
- Use appliance only for its intended use. Appliance is intended for household use only and not for commercial or industrial use.
- Do not use appliance if it has been dropped or any part of appliance (including cord or plug) has been damaged.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- The use of accessories not intended for use with this appliance may cause injuries to the user or damage to the appliance.
- Do not install the unit on other appliances, on uneven surfaces or where it could be subject to heat sources (e.g. radiators or stoves), direct sunlight, excessive dust, or mechanical vibrations.

- Appliance should not be used outdoors, placed near a hot gas or electrical burner, or placed in a heated oven.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- Do not operate appliance underneath or near flammable or combustible materials (e.g. curtains). Keep at least 300mm clearance around sides, back, front, and top.
- Unplug this appliance during lightning storms or when unused for long periods of time.
- Do not block any ventilation openings.
- Turn off and unplug before cleaning or storing.
- For cleaning, refer to section “Care and Cleaning” in this instruction manual.
- Any type of servicing, apart from ordinary cleaning, must be carried out by qualified electrical person only. There are no user serviceable parts in this appliance.
- If this appliance is used by a third party, please supply the instruction manual with it.
- Do not misuse the cord. Never carry the appliance by the cord or pull to disconnect it from the outlet. Instead, grasp the plug and pull to disconnect.
- Do not insert or allow foreign objects to enter the grille openings as this may cause damage to the appliance and/or injury to the user.
- No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling of appliance.


## **Additional Safety Instructions**

If using an extension cord:

- The technical specifications of the extension cord must match or exceed the technical specifications of this appliance.
- Do not allow the cord to hang over the edge of the work surface or to come into contact with stoves or other hot surfaces.
- If the cord or plugs are worn or damaged, do not use.
- Unplug from the power socket by grasping the plug body - Do Not pull on the cord.

## **Read and Save These Instructions**

# 2 Components

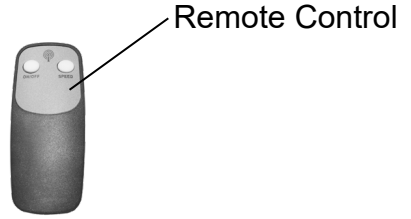

# 3 Instructions for Use

## 3.1 Remote Control

### Important

- non-rechargeable batteries are not to be recharged.
- batteries are to be inserted with the correct polarity.
- exhausted batteries are to be removed from the appliance and safely disposed of.
- the supply terminals are not to be short-circuited.
- **Do Not** mix new and old batteries, or batteries of different types. (e.g., Alkaline with Non-Alkaline) in the remote control.
- To prevent corrosion, remove the batteries if the remote control will not be used over a lengthy period.



**Note:** 2 x AAA batteries are not included.

The Fan comes with a remote control for your convenience.

The functions on the remote control are the same as the buttons on the Fan.

- To install the batteries, first remove the back of the remote control by pressing down on the Thumb Grip, then sliding the battery cover down and lift off as shown.
- Insert the batteries inside the battery compartment matching polarity icons with those in the battery compartment and then refit the cover securely by sliding back on.

Battery Type: "1.5V 2 x AAA"




## 3.2 Fan

Remove the cable tie and unravel the power cord before operation.

**DO NOT run the power cord under the stand.**

Plug the power cord into the mains power point and switch on.

The Red Power Indicator light on the Fan's control panel will illuminate.

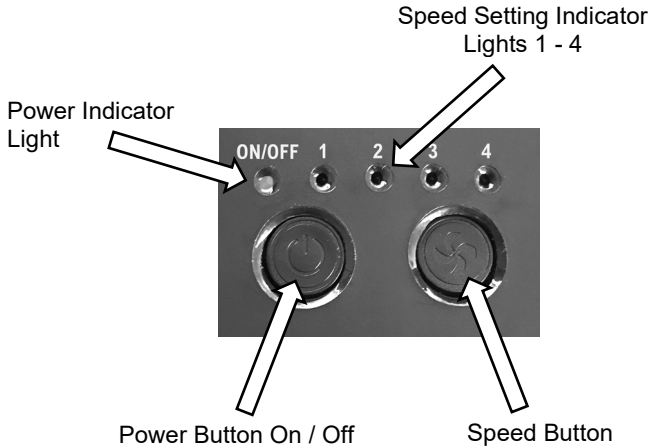

Tilt the fan head up or down to your desired position.

Press the On / Off button on the control panel or on the remote control.

The fan will start at default speed 3.

Press the Speed Button and the fan speed will increase to position 4 (high Speed).

Press the Speed Button again and the fan speed will cycle around to position 1 (Low Speed).

Press the Speed Button again and the fan speed will increase to position 2.

Press the Speed Button again and the fan speed will increase to position 3, and so on.

To turn the fan off, press the On / Off button.

**Note:** If the fan is left powered on, the next time you start the fan, it will start at the last speed setting.

If the fan is switched off at the power point or unplugged, the next time you start the fan, it will default to speed setting 3.



## 4 Care and Cleaning

- Turn off and unplug the unit from the power source before cleaning.

**IMPORTANT:** Never spray with liquids or submerge the unit in water or any other liquid.

- **Do Not** use flammable liquids, chemicals, abrasive creams, steel wool or scouring pads for cleaning.
- Wipe the unit over with a damp (not wet) cloth with fresh clean lukewarm water and mild detergent.
- Wipe over again to remove any detergent residue and thoroughly dry before reusing.
- **Do not** let the Control Buttons or Indicator lights wet or splashed.
- If the Fan grilles are dusty, you can use a vacuum cleaner with a “non-rotating” brush attachment to gently vacuum the dust away.
- **IMPORTANT: Do Not** poke any objects into the fan grille slots for any reason.

## 5 Storage

- Switch off and unplug the fan.
- Coil the cable loosely. Do not kink or pull the cable tight.
- Store your fan in a cool, dry location.
- The remote control can be stored in the rear of the base if desired as shown:





## 6 Warranty Against Defect

### 12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre, 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a>	Target Australia Pty Ltd. C/- Customer Service Centre, 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a>

**IMPORTANT! For all technical queries or difficulties in operating the product and for spare parts, contact H.E. Group customer service 1300 105 888 (Australia) and 09 8870 447 (New Zealand).**

