




Disney FROZEN Mirror Dressing Table

INSTRUCTIONS

3+ years

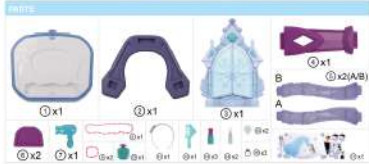

 HOW TO ASSEMBLE

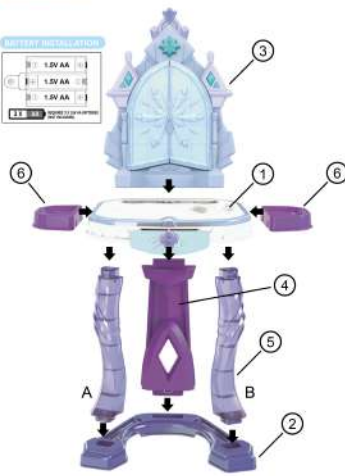

HOW TO STICK



HOW TO USE



WARNING: CHOKING HAZARD
 SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC WRAPPERS BEFORE GIVING THIS TOY TO YOUR CHILD.

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY IS RECHARGEABLE AND NOT TO BE RECHARGED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. HANDLE BATTERIES RESPONSIBLY. DO NOT INGEST OR INHALE.

WARNING: DO NOT LET OFF OF STAND ON THE WALL. THIS IS FOR WALL PLUGS USE AS PROVIDED. ADULT SUPERVISION REQUIRED.

WARNING: ASSEMBLY AND DISASSEMBLY MUST BE DONE BY AN ADULT ONLY.

WARNING: THIS TOY PRODUCES PLASTIC THAT MAY TRIGGER EPILEPSY IN SUSCEPTIBLE INDIVIDUALS.

MADE IN CHINA

CUSTOMER SERVICE:
 SHIPWAY AND 800 551 1515
 SHIPWAY 601 550 551 1515