

Lights & Music Play Gym Instruction Manual


3+
months



THE ILLUSTRATIONS SHOWN IN THIS MANUAL ARE FOR REFERENCE ONLY. ACTUAL PRODUCT MAY VARY SLIGHTLY. THE MANUFACTURER RESERVES THE RIGHT TO CHANGE ANY SPECIFICATION OR FEATURE WITHOUT FURTHER NOTICE. PLEASE READ CAREFULLY BEFORE USE AND KEEP FOR FUTURE REFERENCE.

Lay and Play

1. Feed the play arch with lights through the loop of the 2nd play arch. (a)
2. Attach the links of each play arch to the loops underneath the base. (b)
3. Attach the hanging toys to the loops of the play arch. (c)

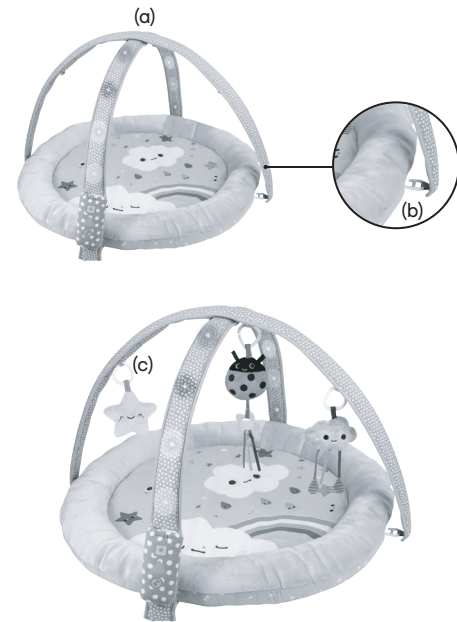


FUNCTION

The item can be turned on or off via the on/off button located at the back of the battery compartment.

	Press once to turn on the lights.
	Press again to turn off the lights.
	Three levels of volume. Volume sequence for every press:
	low to medium to high to medium to low. The volume will change gradually.
	Press once for first lullaby.
Press twice for second lullaby.	Press five times to play all four lullabies.
Press three time for third lullaby.	

Battery installation and replacement:

- Requires 3 x 1.5V AAA Batteries (not included).
- Switch off the power of the unit from the battery compartment.
- Loosen the screw to open the battery compartment door.
- Insert/Replace the new batteries in the proper direction indicated on the product.
- Close the compartment and screw shut securely.

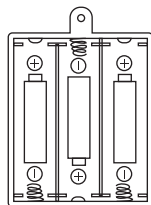

Battery notice:

- Batteries are to be inserted with the correct polarity.
- Do not mix different types of batteries or new and used batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before being charged.
- The supply terminals are not to be short-circuited.
- Remove batteries from the toy when not in use for extended time or when batteries become exhausted.
- Dispose of batteries responsibly.
- Do not dispose of in fire.
- Batteries must be installed and replaced by an adult.
- This toy produces flashes that may trigger epilepsy in sensitised individuals.

Care and maintenance:

- Keep the product out of direct sunlight and away from any direct heat source.
- If the toy suddenly stops working or the sound seems weak, the problem may be low battery power. If this is the case, install a new set of batteries before use.
- Surface clean only. Wipe with a damp cloth. Air dry.

Warning!

- To prevent entanglement injury, never place the play mat in a crib or playpen. Use only on a flat, horizontal floor. Never add strings, ties, straps or other products to the play mat.
- To ensure your child's safety, this product must be assembled by an adult.

Important!

- To ensure your child's safety, please follow the instructions below carefully and ensure the final assembly is correct. Check frequently.
- Product should be used with adult supervision.
- Inspect the play mat before each use.
- Never leave a baby unattended on the play mat.
- Babies should not be allowed to sleep unsupervised while laying on this play mat.
- Do not lift or attempt to move the play mat with baby on it.
- Do not use this play mat as a blanket.
- Use this product only on the floor.
- Never use on any elevated surfaces.
- Keep away from fire and strong heat sources.

K:43-391-691 | T:69-321-504

MADE IN CHINA

CUSTOMER SERVICE:
 KMART AU: 1800 124 125
 KMART NZ: 0800 945 995
 TARGET AU: 1300 753 567