# **INSTRUCTION MANUAL**

43398393

[CRE096]

43398393\_MAN\_True Wireless Earphones with LED Display\_v2

Artwork Proof Date: 03.06.2024

### PAPER:

80gsm


Bright white uncoated paper

### PRINT COLOURS:



### **PRINT FINISH:**

Double sided Z Fold

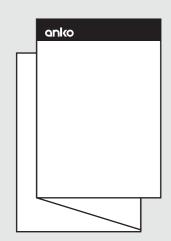

## CHANGE LOG CREST INTERNAL USE ONLY

V: revised "note" phrase

ARTWORK SHOULD NOT BE AMENDED WITHOUT PRIOR AGREEMENT FROM CREST. ALL ARTWORK MUST BE APPROVED BY CREST PRIOR TO MASS PRODUCTION.

IF THERE ARE QUERIES ABOUT THIS ARTWORK PLEASE CONTACT: EMAIL: design@crest.com.au

THANK-YOU.



## For QA reference only

6.5mm 3.5mm

Specifications
Bluetooth Version 5.4
Driver Size: 10mm
Impedance: 16Ω±15%
Sensitivity: 10008 ± 3dB at 1 kHz
Transmission Distance: 10m
Chamilae Methods D.C. 6.01(16) Charging Voltage: DC 5.0V/1A

Charging Vortage: DC 5.00/1A Charging Port: USB-C Earphones Battery Capacity: 30mAh Charging Case battery Capacity: 180mAh Charge Time (Earbuds): 1 hour Charge Time (Charging Case): 1.5 hours

### 12 Month Warranty

12 Month Warranty
Thank you for your purchase.
Your new product is warrantied to be
free from defects in materials and
workmanship for the period stated
above. from the date of purchase,
provided that the product is used in
accordance with accompanying where
your rights under the Australian
Consumer Low.
For New Zealand customers, this
warranty is in addition to statutory

rights observed under New Zealand legislation

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse,

result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as Isted below, for the entity you purchased this product from, for any difficulties with your product. Warronty dailins and claims for expenses incurred in returning this product and he addressed to the respective Customer Services Centre. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for

a major failure and compensation for a major failure and compensation for any other reasonably foreseeable loss or damage. You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases

CF-Customer Service Centre 590 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au Contact for Target purchases

Target Australia Pty Ltd C/- Customer Service Centre C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 302 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us Note: Please charge the earbuds and

The Bluetooth® word mark and logos are gistered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence. iPhone, iPad and Mac is a trademark of Apple Inc., registered in the U.S. and other anko



50mm

K: 43-398-393 | T: 69-316-371

### CAUTION

The batteries in this product are not replaceable. > During use, storage or transportation of the battery should not be subjected to

- extremely low temperatures. or low air pressure at high If the battery is exposed to
- extremely high temperatures it could result in an explosion or the leaking of flammable liquid or gas.
- Please take care when disposing of the unit; disposal in a fire, oven, mechanicallu crushing or cutting machine could cause explosion.

### Product overview





### Earphone Function Operation

Pause: Press either O button Play: Press either O button Next Track: Press and hold the right O Previous Track: Press and hold the left





Volume Up: Press the right O button

twice in quick succession Volume Down: Press the left O button twice in quick succession

Answer Call: Press either O button

Reject Call: Press and hold either O button for 2 seconds

End Call: Press and hold either O

# Activating Phone Assistant: Press either O button three times in a quick

### Power ON/OFF and Pairing Take both earbuds out from the charging case to turn the earbuds

- Once the earbuds are powered ON, they will automatically sync and enter into pairing mode with the LED indicators flashing blue
- the LED indicators flashing blue and red. Search the Bluetooth list for pairing name anko43398393. Select to pair with your Bluetooth device. LED indicators will

automatically turn off until the earbuds are successfully

- connected.

  Put the earbuds into the charging case to turn them OFF.

  Manually Power ON/OFF earbuds without the charging case by pressing the earbuds button for 5

- Charging the Case
  Connect the USB-C charging
  cable into the charging case. Make
  sure you connect the USB-A into a
  standard USB 5V Max. 3A output
- to avoid any damage.

  White LED indicator will flash while the case is charging. Steady white indicator showing 100% on the screen when case is fully charged.

- Charging the Earbuds
  Place both earbuds into the charging case, ensuring charging pins fully connected.
  LED indicator will stay red while

earbuds are charging, L or R ear indicator on the screen will flash green. LED indicators will turn off when fully charged.

- wiren rusij charged.

  Safety instructions

  We recommend you fully charge the contracts before first use. The contracts before first use. The contract is the contract of the contract of the contract of the contract for the contr
- pairing process.
  The earbuds can be used with the provided charging case only