

INSTRUCTION MANUAL

43398478

[KMT096]

43398478_MAN_Portable Bamboo Speaker_v

1

Artwork Proof Date: 09.05.2024

Designer:AQ

PAPER:

80gsm

Bright white uncoated paper

PRINT COLOURS:

BLACK

C:0 M:0
Y:0 K:100

PRINT FINISH:

Double sided

Folded in the centre



CHANGE LOG CREST INTERNAL USE ONLY

V:

ARTWORK SHOULD NOT BE AMENDED WITHOUT PRIOR AGREEMENT FROM CREST.
ALL ARTWORK MUST BE APPROVED BY CREST PRIOR TO MASS PRODUCTION.

IF THERE ARE QUERIES ABOUT THIS ARTWORK PLEASE CONTACT:
EMAIL: design@crest.com.au

THANK-YOU.

anko

Bluetooth® Portable Bamboo Speaker



Includes:

- ▶ Bluetooth® bamboo speaker
- ▶ USB-C charging cable
- ▶ audio cable (3.5mm AUX cable)
- ▶ user manual



K: 43-398-478 | T: 69-316-388
MODEL: 43398478

Specifications:

Model No: 43398478

Input Voltage: 5V-1A

Speaker Power Output: 2 x 3W

Bluetooth Version: 5.3

Battery Capacity: 3.7V/1200mAh

Charging Time: 3 Hours

Charging by USB-C Cable

(cable included)

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations for instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Services Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 670 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Rendal Street, Williams Landing, Vic. 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by K-MART AUSTRALIA is under licence.


WARNING Do not dispose of unit in fire or water. ▶ Never attempt to disassemble and reassemble. ▶ Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. ▶ Check with your local authority for recycle advice. ▶ Keep your device and all accessories out of the reach of children and animals. ▶ Small parts may cause choking or serious injury if swallowed. ▶ Avoid exposing your device to very cold or very hot temperatures below 0°C or above 45°C. ▶ Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. ▶ Do not allow your device to get wet—liquids can cause serious damage. ▶ Do not handle your device with wet hands.

148.5mm

Safety Instructions

1. Do not disassemble this product.
2. The speaker must not be exposed to dripping or splashing and objects filled with liquids.
3. Do not expose speaker to water while charging. It may result in permanent damage to the speaker or power source.
4. Keep the speaker away from direct sunlight, fire flames or other heat sources and high voltage equipment.
5. Working temperature: -10°C ~ 40°C.
6. To prolong battery lifespan, fully charge at least once every 3 months. Battery life will vary due to usage patterns and environmental conditions.
7. Disposal of this speaker, and the battery should be in accordance with local government requirements.
8. Battery cannot be subjected to extreme high or low temperatures, low air pressure at high altitude during use, storage or transportation.
9. Replacement of a battery with an incorrect type can result in an explosion or leakage of flammable liquid or gas.
10. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
11. Leaving a battery in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid or gas.
12. A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.
13. This product must not be connected to power supply source exceeding PS1 (5V d.c. 3A).
14. The rating label is located on the bottom of the speaker.

Function Overview

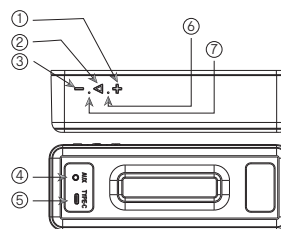

1. Volume Up/Next Song
2. Power ON/OFF or Play/Pause
3. Volume Down/Previous Song
4. AUX-IN Port
5. USB-C Charging Port
6. Microphone
7. LED indicator

How to use this product

Function Operation

Play: Press ▶ button

Pause: Press ▶ button

Next Song: Press and hold + button

Previous Song: Press and hold - button

Volume Up: Press ▶ button

Volume Down: Press - button

Power ON/OFF: Press and hold ▶ button

Bluetooth Pairing

Press and hold the Power ▶ button until LED indicator flashes rapidly, indicating it is ready to pair with a Bluetooth device.

In the Bluetooth menu on the media device, search for "anko43398478" and connect.

You will hear a prompt sound once the speaker is connected successfully.

AUX Function

Use the included 3.5mm audio cable to connect your device through the ④ AUX-IN port. Select the music from your media device and play.

Bluetooth connection will be disconnected

Receiving and Ending Calls

The speaker will pause the playback when there is an incoming call.

To answer/hang up the call, press ▶ button. To reject the call, press and hold ▶ button for 2 seconds.

Press ▶ button twice to dial last call.

TWS Pairing

TWS pairing will not work if either is already connected to a Bluetooth device. Please disconnect all speakers first before TWS pairing.

Switch on two speakers, press and hold + & - on either of the speakers for TWS pairing, you will hear sound prompt once paired successfully. The blue indicator on both units will stay on when paired. After successful TWS pairing connection, you can search for Bluetooth pairing name "anko43398478" and connect.

Press and hold + & - button of either speaker to disconnect TWS pairing.

Charging

This speaker is powered by a rechargeable battery. Please use included USB-C charging cable for charging.

Plug the USB-C cable end to the unit and other USB-A end into a wall charger or 5V charging device.

FOR QA REFERENCE ONLY

6.5mm
3.5mm



105mm