

 
anko

Alarm Clock with Wireless Charger

User Manual

What's Included:


- › Alarm clock x 1
- › Instruction Manual x 1
- › USB-C cable x 1

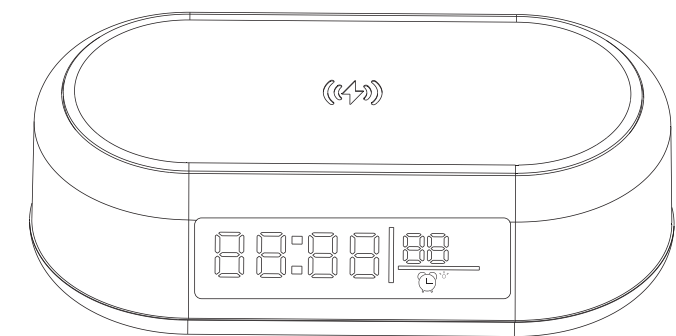

K: 43-398-508 | T: 69-318-757 (Model: JLR-79003)

Date setting:

 
1. After entering date setting, the Year number flashes, press the / buttons to increase or decrease the value, or press and hold / buttons to skip through the values quickly.

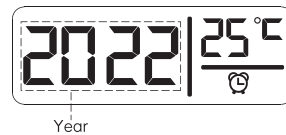

2. Press the button to enter the Month format, the Month begins to flash.



 3. Press the / buttons to increase or decrease the value, or press and hold / buttons to skip through the values quickly.

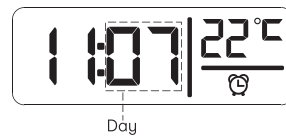

4. Press button to enter the Day format, the Day begins to flash.

5. Press the / buttons to increase or decrease the value, or press and hold / buttons to skip through the values quickly.

Note: It will automatically exit and save if there is no operation within 10 seconds.

Alarm clock function:

- › Press and hold button for more than 2 seconds to turn on and off the alarm clock function.
- › Alarm sound rings (beep sound) for 25 seconds, stops for 10 seconds, then rings for 25 seconds; it will automatically turn off after a total of 2 rounds.
- › When the alarm clock rings, short press the key to turn off the alarm clock.

Light function:

- › Press button to turn on the ambient light and adjust the brightness, 3 levels brightness control: 100%-75%-25%.

Note: The default brightness is 100%.

Specification

- › **Input:** 5V/3A, 9V/3A
- › **Wireless Charger Output:** 5W/7.5W(iPhone)/10W/15W (for input at 9V/3A only)
- › **Battery:** 2 x AAA batteries (not included)
- › **Wireless Charging Transmission Distance:** ≤5mm

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability, dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

 
WARNING › Do not dispose of unit in fire or water. › Never attempt to disassemble and reassemble. Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. Chec with your local authority for recycle advice. › Keep your device and all accessories out of reach of children and animals. Small parts may cause cho ing or serious injury if swallowed. › Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 40°C). › Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. › Do not allow your device to get wet, liquids can cause serious damage. Do not handle your device with wet hands.



Warning

- › Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- › Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- › Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
- › Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- › Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- › A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- › The marking located on the bottom of the apparatus.
- › Do not expose the device to direct sunlight, heat, or flame.
- › Device may become warm while charging.
- › Make sure the product has plenty of ventilation.
- › Do not press the buttons too hard as it could damage the product.
- › Do not use chemicals on this product.
- › Never try to repair this product yourself, take it to a certified technician. Trying to remove panels or repairing the unit yourself could lead to electric shock. When the unit is not in use, make sure it is correctly turned off and stored in a cool dry place.
- › Do not insert foreign objects into the product.
- › Avoid dropping the product, as harsh impacts could damage the product.
- › Cut off the power before cleaning the clock with a soft cloth.
- › Damage, shock, and/or injury can occur if these warnings are not heeded.

Function Overview

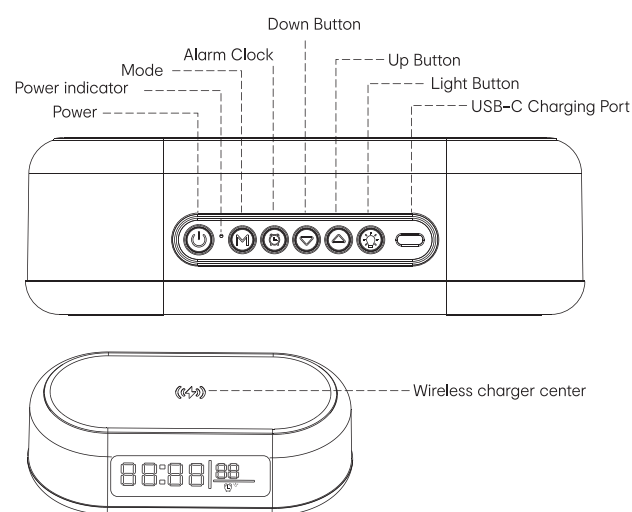

Power Supply:

- › Please use provided USB-C cable, insert the USB end of the charging cable into the power adapter, the USB-C port into the product, and the red power indicator lights up.
- › The product enters the normal working state and enters the standby state after the display lights on, the time default is 06:00.
- › The temperature detection starts to work, and the temperature value is displayed, display degrees Celsius(°C) and Fahrenheit (°F), long press key for 2 seconds to switch.
- › Insert 2xAAA batteries(not included) only for time memory when power off. Battery is not for using to power the unit.
- › *20W QC wall charger needs to buy separately, please use the connector to adapter according to your wall charger USB output port.

Wireless Charging:

- › Place your smart phone with wireless charging function on the top of the unit. The wireless charging indicator on the display will light up green colour.
- › Indicator light display mode:
 - When using wireless charging: the green light is always on.
 - Foreign object detection: the green light flashes.
- › This unit support 5W/7.5W(iphone)/10W/15W(for the supported Android phones) wireless charging.



How To Set This Product

Power on/off function:

- › Press and hold the button for more than 2 seconds to turn on/off.

Note: The wireless charger still works during power off.

12/24h switch:

- › Press buttons to switch 12H/24H.



Time/Alarm clock/Date setting:

- › Press and hold button to enter the time/alarm/date setting, looping, and automatically exit and save if there is no operation within 10 seconds.

Time setting:

1. Press and hold button to enter setting, the hour begins to flash, enter the hour format.
2. Press the / buttons to set the hours, or press and hold / buttons to skip through the values quickly.



3. Press button to enter the minutes format, the minutes begin to flash.



4. Press the / buttons to set the minutes, or press and hold / buttons to skip through the values quickly.

After time setting, continue to press the to enter alarm clock setting.

Alarm clock setting:

1. After Enter the Alarm clock setting, the hour begins to flash, enter the hour format.
2. Press the / buttons to set the hours, or press and hold / buttons to skip through the values quickly.



3. Press the button to enter the minutes format, the minutes begin to flash.



4. Press the / buttons to set the minutes, or press and hold / buttons to skip through the values quickly.
- After alarm clock setting, continue to press the to enter date setting: