

INSTRUCTION MANUAL

43398515

[KMT096]

43398515_MAN_Cloud Alarm Clock_v

1

Artwork Proof Date: 08.05.2024

PAPER:

80gsm
Bright white uncoated paper


PRINT COLOURS:

BLACK

C:0 M:0
Y:0 K:100

PRINT FINISH:

Double sided
Folded in the centre

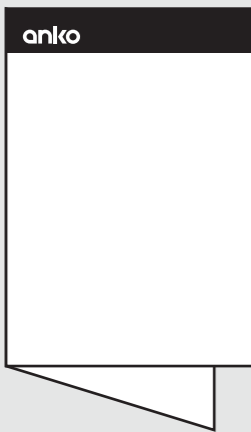

CHANGE LOG CREST INTERNAL USE ONLY

V:

ARTWORK SHOULD NOT BE AMENDED WITHOUT PRIOR AGREEMENT FROM CREST.
ALL ARTWORK MUST BE APPROVED BY CREST PRIOR TO MASS PRODUCTION.

IF THERE ARE QUERIES ABOUT THIS ARTWORK PLEASE CONTACT:
EMAIL: design@crest.com.au

THANK-YOU.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic. 3170 Customer Service: 1800 124 126 (Australia) or 0800 145 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic. 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us



WARNING: BUTTON CELL BATTERIES ARE HAZARDOUS (NEW OR USED). KEEP AWAY FROM CHILDREN. BUTTON CELL BATTERIES CAN CAUSE SEVERE OR FATAL INJURIES IN 2 HOURS OR LESS IF THEY ARE SWALLOWED OR PLACED INSIDE ANY PART OF THE BODY. IF YOU SUSPECT YOUR CHILD HAS SWALLOWED OR INSERTED A BUTTON CELL BATTERY, CALL THE 24-HOUR POISONS INFORMATION CENTRE IN AUSTRALIA ON 131126 OR IN NEW ZEALAND 0800 764 766 OR CONTACT YOUR COUNTRY'S EMERGENCY DEPT. USED BATTERIES MUST BE DISPOSED ON IN THE GARBAGE OR A BATTERY RECYCLE FACILITY.



THIS PRODUCT CONTAINS
BUTTON CELL BATTERIES
SCAN THE QR CODE FOR
MORE INFORMATION.

12 Month Warranty

Thank you for your purchase.
Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations for instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.
For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Services Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



WARNING Do not dispose of unit in fire or water. Never attempt to disassemble and reassemble. Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. Check with your local authority for recycle advice. Keep your device and all accessories out of the reach of children and animals. Small parts may cause choking or serious injury if swallowed. Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. Do not allow your device to get wet—liquids can cause serious damage. Do not handle your device with wet hands.

anko

Alarm Clock Cloud Operating instructions

- Includes:
- alarm clock
 - USB-C power cable
 - user manual




K: 43-398-515 | T: 69-316-418
MODEL: 43398515

74mm

105mm

222mm

Function Overview

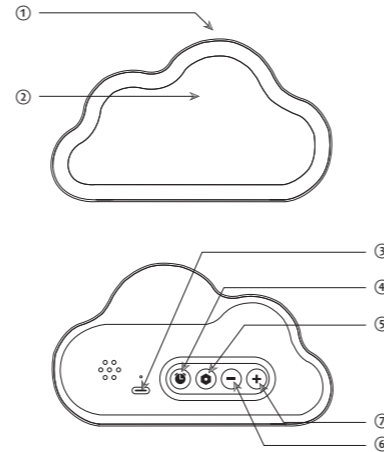

- Snooze
- LCD display
- Power input port
- Alarm ON/OFF button
- Set button
- Down button
- Up button

How to use this product

Connecting to Power

- Insert provided USB-C power cable into the ③ port and connect the other USB-A end to an appropriate power source.

Display Mode

- Two display modes: DP1 and DP2; Press + button to select Display Mode 1 (DP1) or Display Mode 2 (DP2).
- DP1 mode: Automatically cycle through Time, Date, Temperature, will show Time for 10 seconds, then show the Date for 2 seconds and Temperature for 2 seconds.
- DP2 mode: Displays either time, alarm time, date or temperature. Press ● to select one of the four options.

Note: You can only change to DP1 while time is displayed.

12H/24H Setting

- Time displays on the screen, press - button to select 12H/24H mode.



Time Setting

- Press ● button to select Time display, Press and hold ● button to enter Time setting.
- Press + or - to set Hour. Press ● button to confirm Hour. Press ● button to enter Minute setting.
- Press + or - to set Minute. Press ● button to confirm Minute setting.

Alarm Setting

- Press ● button to turn alarm ON, alarm symbol will stay on bottom left side of display.



- Press ● button to select alarm display, the alarm symbol will display on screen.
- Press and hold ● button to enter alarm setting.
- Press + or - to set Hour. Press ● button to enter Minute setting.
- Press + or - to set Minute. Press ● to confirm setting.
- Press any button to switch off the alarm when it goes off.

Date Setting

- Press ● button to select Date display, then press and hold ● button to enter Date setting, year number will flash.
- Press + or - to set the Year. Press ● button to confirm year setting then to enter Month setting.
- Press + or - to set Month. Press ● to confirm Month setting then to enter date setting.
- Press + or - to set date. Press ● to confirm date setting.

Snooze Mode

- When alarm clock rings, press SNOOZE to enter snooze mode, alarm symbol flashes, the alarm will sound again after 5 minutes.
- Press and hold SNOOZE to switch off snooze for the current alarm.

Temperature Display

- Press ● to select Temperature display, press - button to switch C° or F° then press ● to confirm setting and back to default display.
- Note: This alarm clock has memory function and can save last data, will adjust to current environment temperature after one hour standing.
This alarm is not high precision temperature meter, acceptable error range ± 1°C.

Specifications:

Model No.: 43398515
Input Voltage: 5V=1A
NON-REPLACEABLE CR-2032
Button cell battery for for time memory function

For QA reference only

6.5mm

