

# KMT说明书 折页 128g双铜 尺寸: 89\*127mm

**anko**

K : 43-398-607 | T : 69-316-432  
Model No.: TS589B

## TWS EARPHONES User manual

Package contents:

- Type-C charging cable
- User manual
- S/M/L size silicone eartips



### 12 month warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

#### WARNING:

- Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- This product shall not be connected to power supply source exceeding PS1 . Rated 5V d.c. 1A .
- Marking information is located at back of the unit.
- Please note the product working temperature is : 0-40 C .

### Product Specification:

- Bluetooth version: V 5.3
- Bluetooth range: ≤10M
- Unit driver: 13mm
- Earphone battery capacity: 30mAh
- Charging case capacity: 230mAh
- Charging port: Type-C
- Charge time for earbud: 1Hr.
- Charge time for charging case: 2Hrs
- Playing time: approx. 6 Hrs. (at 80% volume)

### Function Description:

Function	How to do
Power on/off (Automatic)	Take earbuds out of the case to power on Put the earbud into the case to power off
Power on/off (Manual)	Long press Left/Right earbud for 3 seconds to power on/off
Play/pause	Single tap Left/Right earbud (While playing music)
Increase volume	Double tap Right Earbud
Decrease volume	Double tap Left Earbud
Next track	Long press Right Earbud
Previous track	Long Press Left Earbud
Activate voice assistant	Triple tap Left/Right Earbud (When music is not played)
Reject Incoming call	Long press Left/Right earbud for 2-3 seconds
Answer/Hang up the call	Single tap Left/Right earbud (During call)

Indicator Light Status	Mode (earbud )
Flash Blue & red light	Bluetooth pairing mode
Flash red light for 5 seconds	Low battery (below 20%)
Solid Red light	Charging
Solid Blue light for 3 seconds then turn off	Fully charged
Indicator Light Status	Mode (Charging case )
LED starts to blinking	Charging case is charging
LED light is steady on	Charging case fully charged

### Operating Instruction

#### Charging

1. Plug the Type-C end of the charging cable into the Type-C connector port on the earbud case.
2. Plug the other end into a USB wall charger/computer/power bank that is powered on.

**NOTE: Before powering On for the first time, please charge fully for good battery life.**

#### Pairing

Connecting any Bluetooth Device:

1. Once the earbuds are removed from the case, the earbuds are in Bluetooth pairing mode automatically.
2. Open the Bluetooth settings on any Bluetooth device and search for device with name **anko43398607** and connect.

**NOTE: Earbuds will automatically re-pair with the last paired device whenever it is within range. You should Bluetooth unpair the earbuds from the last device before connecting to a new device.**

#### Mono Mode Operation

When only one earbud is required, the user can use either of the earbuds. Keep one earbud inside the the charging case , then the other can be used as solo earbud.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under license.