 
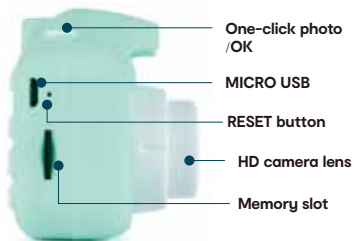 


# anko

Mini Digital Camera  
User Manual

K: 43-398-744 | T: 69-318-528  
(Model No.: 43276509, 43276516)

## Appearance

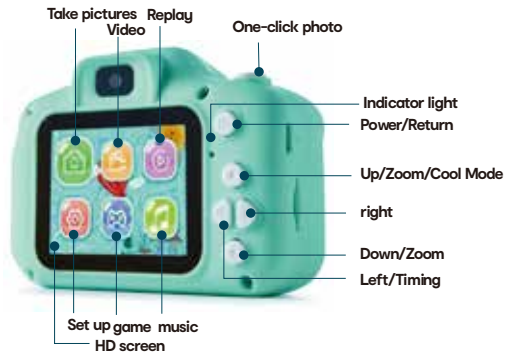

## Start to use

### 1.Charging

Use Micro-USB cable to charge if it is low battery. As shown

in the figure below.

### 2.How to use the memory card

2.1.Properly insert the TF card into the card holder as per the instructions near the card holder.

2.2.To remove the TF card, press the end of memory card gently, the card will be ejected.

#### NOTE

› The camera has built-in memory, you can take 50 photos without TF card, but these photos can only be viewed on the camera and cannot be retrieved (such as reading through the computer). If you want to take photos that can be read in the computer, you must insert TF card before taking photos.


Please insert TF card before taking video.

› If you want to read the photos or video of the TF card through computer, please retrieve it on the computer through a card reader.

›To achieve the best photo / video taking experience, it is suggested to use with high speed TF card (Write: 20-35MB/s; Read: 40-80 MB/s)



### 3. Power on/off

 
3. 1.Power on : Long-press the power Button  the screen will be on and the camera will be started.

# anko

Mini Digital Camera  
User Manual

K: 43-398-737 | T: 69-318-511  
(Model No.: 43276509, 43276516)

## Appearance

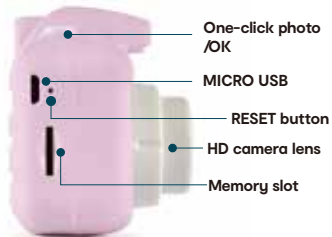

## Start to use

### 1.Charging

Use Micro-USB cable to charge if it is low battery. As shown

in the figure below.

## 2.How to use the memory card

2.1.Properly insert the TF card into the card holder as per the instructions near the card holder.

2.2.To remove the TF card, press the end of memory card gently, the card will be ejected.

### NOTE

› The camera has built-in memory, you can take 50 photos without TF card, but these photos can only be viewed on the camera and cannot be retrieved (such as reading through the computer). If you want to take photos that can be read in the computer, you must insert TF card before taking photos.


Please insert TF card before taking video.

› If you want to read the photos or video of the TF card through computer, please retrieve it on the computer through a card reader.

›To achieve the best photo / video taking experience, it is suggested to use with high speed TF card (Write: 20-35MB/s; Read: 40-80 MB/s)



## 3. Power on/off

3. 1.Power on : Long-press the power Button  the screen will be on and the camera will be started.




3.2.Power off : Hold on Power Button for 3 seconds when the camera is in the idle state to turn it off.

3.3.Auto screen off : The screen will be turned off automatically when the time that the camera is in the idle state for automatic screen off to save power.


3.4. Power off when the camera is lack of electricity. When electrical quantity of the battery is very low, an icon will be displayed on the LCD screen, prompting you to charge it in time. When the icon flickers the camera will be turned off automatically.

#### 4.Video mode,take pictures mode,replay mode,game mode,music mode and set up mode

##### 4.1.Video mode

When you turn on your camera,you are in main menu, find icon , short-press  will enter video recording mode, short-press  to start video recording; short-press it again to stop shooting.

Tips:If you want return menu , kindly short-press power button .





4. 1.1. Short-press left or right botton  to choice color effect of images.There are seven kinds of color effects, such as normal, black and white, retro, negative, red, green, blue.


4. 1.2.Short-press page down button  to switch front and rear shot.

4. 1.3 Short-press page up button  to choice fast or slow motion.



**Note:** Some TF cards may have slow writing speed. It is strongly recommended to take a single video with duration no more than 15 mins. If record a video for more than 10 mins, suggest to wait for 1 min before taking the next video.

##### 4.2.Take picture mode

4.2.1.When you turn on your camera,you are in main menu, find icon , short-press the take photos button  to enter photo mode, short-press the button  to capture your photo. Then short-press page up button  to turn on/off time photo function.



 


Tips:If you want return to menu or exit, kindly short-press power button .



4.2.2.Short-press left or right botton  to join different frames or vibrato effects mode (28 photo stickers, 10 special effects and 6 filters).



4.2.3. You can long-press page up botton  or page down botton  to magnify or minify focal length (2-3-4 times).


Tips: You can set timed photo function at setting menu,there are three kinds of model: 2S,5S,10S.

##### 4.3.Replay mode

4.3.1. Enter main menu, find icon , short-press  into playback mode,short-press  again to stop playback,you can short-press left  or right  button to see the photos and videos you took.

4.3.2. Short-press up button  to delete one photo or video( you can see Execute and Cancel, short-press right or left button to choose, short-press  to confirm.)


4.3.3. Short-press down button  to delete ALL photos or videos (you can see Execute and Cancel, short-press right or left button to choose, short-press  to confirm.)




Tips: If you want return to menu or exit,stop playing the video, kindly short-press power button .


**Note:** If the camera is locked during replay mode, corrupted file(s) may be written to the TF card during photo / video taking.

1. Remove the TF card from camera and backup the taken photos and videos in computer using the provided TF card reader;
2. Format the TF card in computer;
3. Press RESET button to restart the camera;
4. Insert the formatted TF card into the camera.




##### 4.4.Game mode:

Enter main menu, find icon , short-press  into game mode, you


can short-press  or right  button to choice, then short press  to confirm. ( 5 games: Hit plane, Push Box,Snake,Maze,Guess number)

Tips:If you want return to menu or exit, kindly short-press power button .

##### 4.5.Music mode



Enter main menu, find icon , and short-press  and play music, short-press  again and pause it.

Short-press page up button  to turn volume up, and short-press page down button  to turn down the volume.

Short-press left button or right button  to select songs.

Supported file format: MP3.

##### 4.6.Set up mode

› Enter main menu, find icon , short-press  into setting mode.

More functions as below:

› Size: 2M~3M~5M~8M~12M~16M~18M~20M~40M

› Capture timer: Off, 2S, 5S,10S

› Resolution: 1080P, 720P, VGA

› Time stamp: on,off

› Language: Chinese,English,German,French,Spanish,Danish,Dutch, Portuguese,Czech,etc.(12 Languages)

› LCD off: off, 1min, 2 min, 3 min (to save power when you do not use)

› Auto off: off,3min,5min(To conserve battery power.The camera will shut off if no key are pressed within the selected time)

› Volume: level 0-7

› Format: execute,cancel (Erase all data on the TF Card)

› Date: Year/Month/Day (setting the date and time of the cameras)

› System reset:execute,cancel (Reset settings of the camera to factory default)

**WARNING! MEMORY CARD IS SMALL PART WHICH MAY BE A CHOKING HAZARD DO NOT PUT INTO THE MOUTH.**

**WARNING! ADULT SUPERVISION REQUIRED AT ALL TIMES.**




3.2.Power off : Hold on Power Button for 3 seconds when the camera is in the idle state to turn it off.


3.3.Auto screen off : The screen will be turned off automatically when the time that the camera is in the idle state for automatic screen off to save power.

3.4. Power off when the camera is lack of electricity. When electrical quantity of the battery is very low, an icon of will be displayed on the LCD screen, prompting you to charge it in time. When the icon flickers the camera will be turned off automatically.

#### 4.Video mode,take pictures mode,replay mode,game mode,music mode and set up mode

##### 4.1.Video mode

When you turn on your camera,you are in main menu, find icon  , short-press  will enter video recording mode, short-press  to start video recording; short-press it again to stop shooting.

Tips:If you want return menu , kindly short-press power button .





4. 1.1. Short-press left or right button  to choice color effect of images.There are seven kinds of color effects, such as normal, black and white, retro, negative, red, green, blue.


4. 1.2.Short-press page down button  to switch front and rear shot.

4. 1.3 Short-press page up button  to choice fast or slow motion.



**Note:** Some TF cards may have slow writing speed. It is strongly recommended to take a single video with duration no more than 15 mins. If record a video for more than 10 mins, suggest to wait for 1 min before taking the next video.

##### 4.2.Take picture mode

4.2.1.When you turn on your camera,you are in main menu, find icon , short-press the take photos button  to enter photo mode, short-press the button  to capture your photo. Then short-press page up button  to turn on/off time photo function.





Tips:If you want return to menu or exit, kindly short-press power button .



4.2.2.Short-press left or right button  to join different frames or vibrato effects mode (28 photo stickers, 10 special effects and 6 filters).



4.2.3. You can long-press page up button  or page down button  to magnify or minify focal length (2-3-4 times).


Tips: You can set timed photo function at setting menu,there are three kinds of model: 2S,5S,10S.

##### 4.3.Replay mode

4.3.1. Enter main menu, find icon , short-press  into playback mode,short-press  again to stop playback,you can short-press left or right  button to see the photos and videos you took.

4.3.2. Short-press up button  to delete one photo or video( you can see Execute and Cancel, short-press right or left button to choose, short-press  to confirm.)

4.3.3. Short-press down button  to delete ALL photos or videos (you can see Execute and Cancel, short-press right or left button to choose, short-press  to confirm.)

Tips: If you want return to menu or exit,stop playing the video, kindly short-press power button .


**Note:** If the camera is locked during reply mode, corrupted file(s) may be written to the TF card during photo / video taking.

1. Remove the TF card from camera and backup the taken photos and videos in computer using the provided TF card reader;
2. Format the TF card in computer;
3. Press RESET button to restart the camera;
4. Insert the formatted TF card into the camera.




##### 4.4.Game mode:

Enter main menu, find icon , short-press  into game mode, you

can short-press  or right  button to choice, then short press  to confirm. ( 5 games: Hit plane, Push Box,Snake,Maze,Guess number)

Tips:If you want return to menu or exit, kindly short-press power button .

##### 4.5.Music mode


 
Enter main menu, find icon , and short-press  and play music, short-press  again and pause it.

Short-press page up button  to turn volume up, and short-press page down button  to turn down the volume.

Short-press left button or right button  to select songs.

Supported file format: MP3.

##### 4.6.Set up mode

› Enter main menu, find icon , short-press  into setting mode.

More functions as below:

› Size: 2M~3M~5M~8M~12M~16M~18M~20M~40M

› Capture timer: Off, 2S, 5S,10S

› Resolution: 1080P, 720P, VGA

› Time stamp: on,off

› Language: Chinese,English,German,French,Spanish,Danish,Dutch, Portuguese,Czech,etc.(12 Languages)

› LCD off: off, 1min, 2 min, 3 min (to save power when you do not use)

› Auto off: off,3min,5min(To conserve battery power.The camera will shut off if no key are pressed within the selected time)

› Volume: level 0~7

› Format: execute,cancel (Erase all data on the TF Card)

› Date: Year/Month/Day (setting the date and time of the cameras)

› System reset:execute,cancel (Reset settings of the camera to factory default)

**WARNING! MEMORY CARD IS SMALL PART WHICH MAY BE A CHOKING HAZARD DO NOT PUT INTO THE MOUTH.**

**WARNING! ADULT SUPERVISION REQUIRED AT ALL TIMES.**