 


Pop Up Disc Golf Set


keycode 43403394

How to use:

1. Expand the legs of the tripod base, tighten using the side knob.

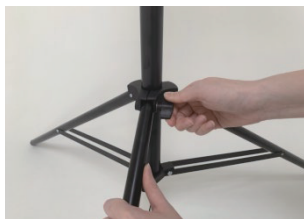


2. Expand the center pole and tighten to secure.

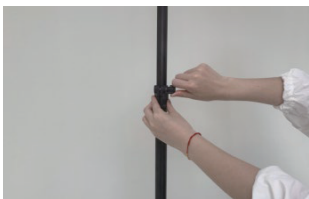

3. Open the net and lower over the center pole.



4. Secure in place with the topper target.

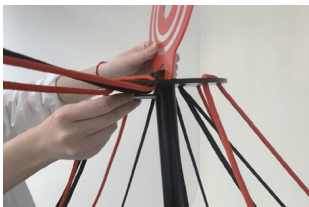

5. Aiming for the net and the topper target.

