

100mm

100mm

127mm

FACIAL CLEANSER

K:43417322 T:69636042




User Manual

SAFETY CAUTION

Note: READ THE INSTRUCTION MANUAL before use
Please read manual carefully before use. The user manual contains not only the instructions of use for the device but also all safety precautions. If concerned seek advice from your MEDICAL PROFESSIONAL PRIOR TO USE.

PRODUCT DESCRIPTION

1. Main Unit
2. Charging Port
3. Switch ON/OFF
4. Low intensity
5. High intensity
6. Cleansing side
7. Massaging side

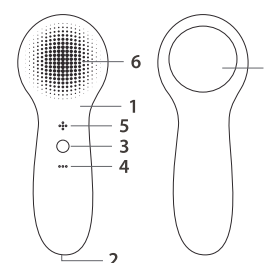

HOW TO CHARGE

- Turn the cleanser off.
- Plug the USB charging cable into a USB out put source and other end into the charging port on the facial cleanser.
- When charging LED is flashing it indicates that it is charging, when charging LED is off device is fully charged.

Li-ion Battery safety instructions: Monitor device while charging. Charge battery in an isolated area. Keep away from flammable materials. Do not expose to direct sunlight. Do not disassemble, modify, heat, or short-circuit the battery. Do not drop or subject to strong impacts. Only charge the battery with the charging cable provided. In the unlikely event of leakage or explosion use sand or chemical fire extinguisher for the battery. Battery must be recycled or disposed of properly.

USAGE

Apply suitable cleansing product to face, turn on device, gently move device around face. Adjust intensity to suit individual preference. Avoid eye area. Do not use for more than 3 minutes at one time.

12 month warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

PRODUCT SPECIFICATIONS

Input: 5V/1A
Water resistant
Battery Capacity: 602040 350mAh 3.7V Lithium-ion battery
Packing list: cleanser *1 instruction manual *1 USB cable *1

Precaution

Results may vary depending on individual skin conditions. Keep out of reach of children. If you are susceptible to one or more of the conditions listed below, please seek advice from a healthcare professional prior to use:

- Skin allergies
- Sunburn
- Broken skin
- Epilepsy
- Itchy or irritated skin
- Pregnant or breastfeeding
- Severe acne or active breakouts

WARNING

- Do not use this appliance under the following conditions:
 - When pregnant
 - Should you have skin allergies
 - On areas where epilation or plastic surgery has been performed
 - Do not use if you are allergic to silicone
- Immediately stop using if your skin becomes irritated or you become unwell and seek medical assistance
- Do not use the massager for more than 3 minutes at a time.
- Always clean device after use with water and mild soap and rinse clean. Pat dry with lint-free cloth/towel.
- Avoid leaving in direct sunlight. Do not expose to extreme heat or boiling water.
- Do not submerge in water.
- Do not use on eyelids.
- Discontinue use if discomfort or irritation occurs. If you have a skin condition, please consult with dermatologist before using.
- Always switch the appliance off after use.
- Do not use if you are allergic to silicone.
- Do not place the appliance in a hot or humid environment for a prolonged period of time.
- Not suitable for Children.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance should not be used by persons with reduced physical, sensory or mental abilities (including children), or persons having insufficient skills or knowledge, without supervision or instruction of a person responsible for their safety.

FACIAL CLEANSER

K:43417315 T:69620072




Instruction Manual

SAFETY CAUTION

Note: READ THE INSTRUCTION MANUAL before use
Please read manual carefully before use. The user manual contains not only the instructions of use for the device but also all safety precautions. If concerned seek advice from your MEDICAL PROFESSIONAL PRIOR TO USE.

PRODUCT DESCRIPTION

1. Low intensity
2. On/Off button
3. High intensity
4. Cleansing area
5. Charging port

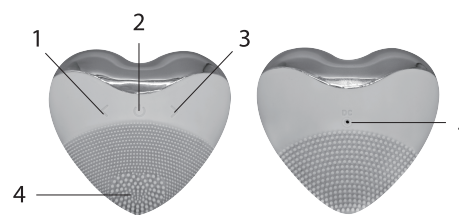

HOW TO CHARGE

- Turn the cleanser off.
- Plug the USB cable into a USB power source and the other end into the charging port on the facial cleanser.
- When charging LED is flashing it indicates that it is charging, when charging LED is off device is fully charged.

Li-ion Battery safety instructions: Monitor device while charging. Charge battery in an isolated area. Keep away from flammable materials. Do not expose to direct sunlight. Do not disassemble, modify, heat, or short-circuit the battery. Do not drop or subject to strong impacts. Only charge the battery with the charging cable provided. In the unlikely event of leakage or explosion use sand or chemical fire extinguisher for the battery. Battery must be recycled or disposed of properly.

USAGE

Apply suitable cleansing product to face, turn on device, gently move device around face. Adjust intensity to suit individual preference. Avoid eye area. Do not use for more than 3 minutes at one time.

12 month warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

PRODUCT SPECIFICATIONS

Input: 5V/1A
Water resistant
Battery Capacity: 602040 350mAh 3.7V Lithium-ion battery
Packing list: cleanser *1 instruction manual *1 USB cable *1

Precaution

Results may vary depending on individual skin conditions. Keep out of reach of children. If you are susceptible to one or more of the conditions listed below, please seek advice from a healthcare professional prior to use:

- Skin allergies
- Sunburn
- Broken skin
- Epilepsy
- Itchy or irritated skin
- Pregnant or breastfeeding
- Severe acne or active breakouts

WARNING

- Do not use this appliance under the following conditions:
 - When pregnant
 - Should you have skin allergies
 - On areas where epilation or plastic surgery has been performed
 - Do not use if you are allergic to silicone
- Immediately stop using if your skin becomes irritated or you become unwell and seek medical assistance
- Do not use the massager for more than 3 minutes at a time.
- Always clean device after use with water and mild soap and rinse clean. Pat dry with lint-free cloth/towel.
- Avoid leaving in direct sunlight. Do not expose to extreme heat or boiling water.
- Do not submerge in water.
- Do not use on eyelids.
- Discontinue use if discomfort or irritation occurs. If you have a skin condition, please consult with dermatologist before using.
- Always switch the appliance off after use.
- Do not use if you are allergic to silicone.
- Do not place the appliance in a hot or humid environment for a prolonged period of time.
- Not suitable for Children.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance should not be used by persons with reduced physical, sensory or mental abilities (including children), or persons having insufficient skills or knowledge, without supervision or instruction of a person responsible for their safety.