



SETTING THE NUMBER COMBINATION

THE DEFAULT NUMBER COMBINATION IS 0-0-0-0.

1. OPEN THE LOCK.
2. TURN THE "SET" - BUTTON 90° CLOCKWISE.
3. TURN THE NUMBER WHEELS TO YOUR FAVOURITE NUMBER COMBINATION, REGARDING THAT THE NUMBERS HAVE TO BE ALIGNED WITH THE POINTER.
4. RETURN THE "SET" - BUTTON TO THE STARTING POSITION ANTI-CLOCKWISE.