

## Instructions

### BATTERY INSTALLATION

**(EN)** Use 2 x 1.5v type AAA batteries. Take care to fit batteries observing the plus & minus markings. Replace all used batteries at the same time. Do not mix used and new batteries, rechargeable, different types (alkaline or carbon zinc), or different brands of batteries. Only use batteries of the same type. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are to be removed from the product before being charged. Rechargeable batteries are only to be charged under adult supervision. The supply terminals are not to be short-circuited. Exhausted batteries are to be removed immediately. Unscrew battery cover and insert batteries, observing polarity guide. Ensure battery cover is securely screwed in place before use. The crossed out wheeled-bin symbol on this product is to remind you that waste electrical and electronic products, batteries and accumulators should not be disposed of with household waste. If you are unable to re-use or recycle your article it should be disposed of at a civic amenity site/local authority recycling facilities. Packaging (and instructions if included) must be kept since they contain important information.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

**MADE IN CHINA**

**CUSTOMER SERVICE:**

**KMART AU:** 1800 124 125  
**KMART NZ:** 0800 945 995  
**TARGET AU:** 1300 753 567

**K:** 43-422-043  
**T:** 69-549-649 18/24



TEL: +44 (0)1273 230037

WORKING TITLE: ICON LIGHT INSTRUCTIONS

DATE OF CREATION: 09/02/2024

THIS IMAGE REMAINS THE INTELLECTUAL COPYRIGHT OF PALADONE PRODUCTS LTD 2020

#### PANTONE REFERENCES / FINISHES:

 1C PRINT  
(BLACK)

#### CUTTERGUIDE INFORMATION:

 INDICATES CUT

FLAT DIMENSIONS:

149MM (W) X 100MM (H)