

INSTRUCTION MANUAL

43430611

[KMT104]

43430611_MAN_KARAOKE VOICE MOD SPEAKER_v

2

Artwork Proof Date: 25.07.2024

PAPER:

 
80gsm
Bright white uncoated paper

PRINT COLOURS:



PRINT FINISH:

Double sided
Z Fold

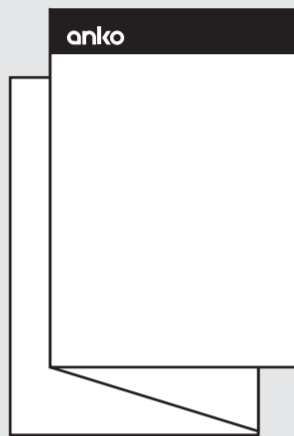

CHANGE LOG CREST INTERNAL USE ONLY

v2: Updated text under Microphone Function Operation.

ARTWORK SHOULD NOT BE AMENDED WITHOUT PRIOR AGREEMENT FROM CREST. ALL ARTWORK MUST BE APPROVED BY CREST PRIOR TO MASS PRODUCTION.

IF THERE ARE QUERIES ABOUT THIS ARTWORK PLEASE CONTACT:
EMAIL: design@crest.com.au

THANK-YOU.

© The Crest Company 2024. All rights reserved.

For QA reference only



Specification

K: 43-430-611 | T: 69-721-960
Input Voltage: 5V=1A dc
Speaker Power Output: 5W
Bluetooth Version: 5.3
Speaker Battery: 1200mAh
Wireless Microphone Battery: 400mAh
Charging by USB-C cable (cable included)

12 Month Warranty

Thank you for your purchase.
Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations for instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.
For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.
This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Services Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

 
The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.



WARNING Do not dispose of unit in fire or water. > Never attempt to disassemble and reassemble. > Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. > Check with your local authority for recycle advice. > Keep your device and all accessories out of the reach of children and animals. > Small parts may cause choking or serious injury if swallowed. > Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 40°C). > Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. > Do not allow your device to get wet—liquids can cause serious damage. > Do not handle your device with wet hands.

Contact for Kmart purchases
Kmart Australia Ltd.
C/- Customer Service Centre
690 Springvale Road, Mulgrave Vic 3170
Customer Service: 1800 124 125 (Australia)
or 0800 945 995 (New Zealand)
or via Customer Help at kmart.com.au

Contact for Target purchases
Target Australia Pty Ltd
C/- Customer Service Centre
2 Kendall Street, Williams Landing, Vic, 3027
Customer Service: 1300 753 567
or via Customer Help at target.com.au/help/contact-us

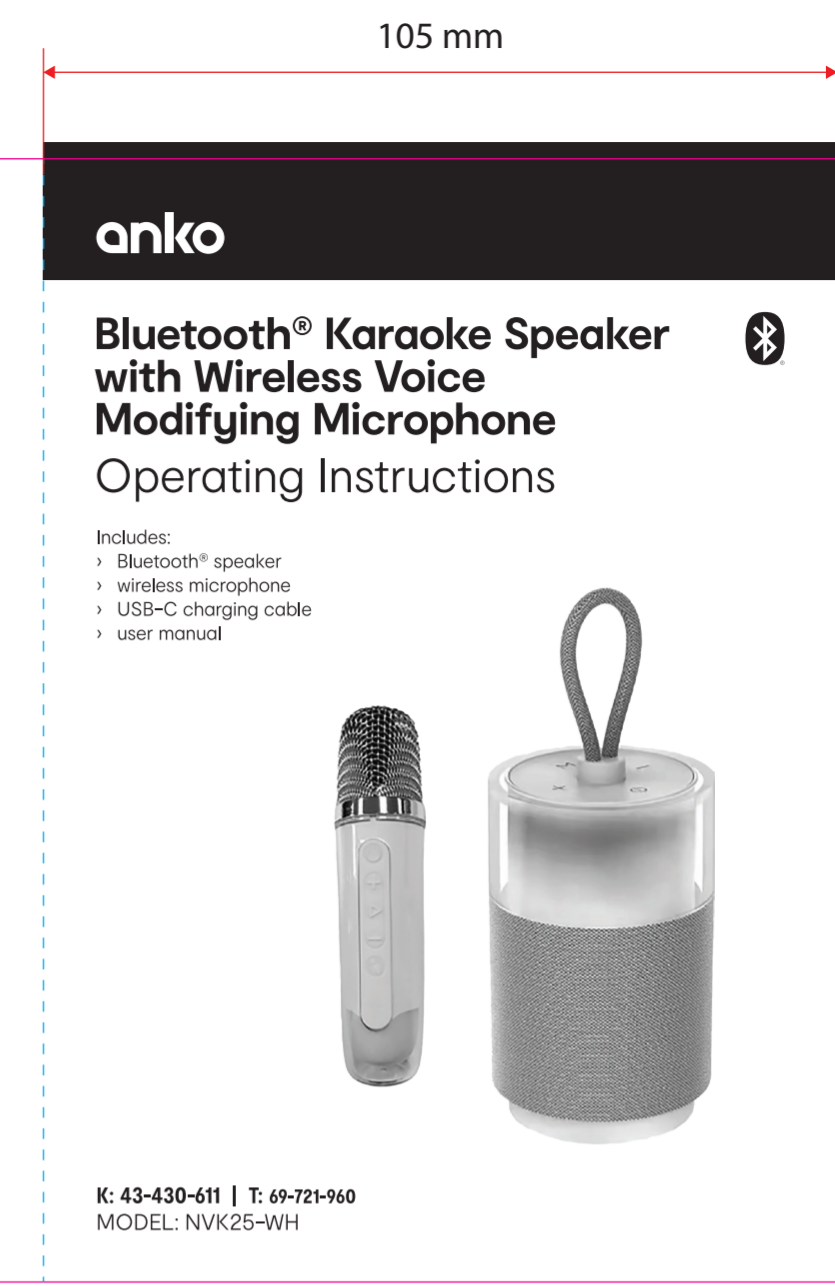

anko

Bluetooth® Karaoke Speaker with Wireless Voice Modifying Microphone Operating Instructions

- Includes:
- > Bluetooth® speaker
 - > wireless microphone
 - > USB-C charging cable
 - > user manual




K: 43-430-611 | T: 69-721-960
MODEL: NVK25-WH

Safety Instructions


- Do not disassemble this product.
- The speaker shall not be exposed to dripping or splashing and objects filled with liquids.
- Do not expose speaker to water while charging. It may result in permanent damage to the speaker or power source.
- Keep the speaker away from direct sunlight, fire flames or other heat sources and high voltage equipment.
- Working temperature: -10°C ~ 40°C.
- To prolong battery lifespan, fully charge at least once every 3 months. Battery life will vary due to usage patterns and environmental conditions.
- Disposal of this speaker, and the battery should be in accordance with local government requirements.
- Battery cannot be subjected to extreme high or low temperatures, low air pressure at high altitude during use, storage, or transportation.
- Replacement of a battery with an incorrect type that can result in an explosion or leakage of flammable liquid or gas.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- This product must not be connected to power supply source exceeding PS1 (5V d.c. 3A).

Speaker Function Overview

 - Mode Switch / LED Lights
- Volume Down / Previous Track
- Power ON/OFF, Play / Pause
- Volume Up / Next Track

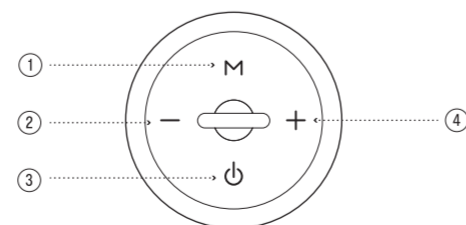

 - USB-C Charging Port
- TF Card Slot
- USB Port
- 3.5mm Headphone Jack

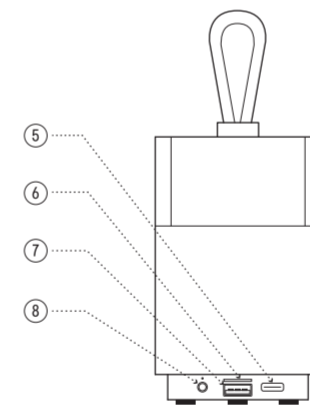

Speaker Function Operation

Play: Press **⏪** button
Pause: Press **⏩** button
Bluetooth Disconnected: Press **⏪** button twice
Next Track: Press and hold **+** button
Previous Track: Press and hold **-** button
Volume Up: Press **+** button
Volume Down: Press **-** button
Power ON/OFF: Press and hold **⏪** button
Lights ON/OFF: Press **M** button twice
Light Colour Change: Press and hold **M** button
Mode Switch: Press **M** button to toggle between USB/TF/Bluetooth

Bluetooth Pairing

Press and hold the **⏪** button until LED light turns on and you will hear a prompt sound, indicating it is ready to pair with a Bluetooth device.
In the Bluetooth menu on the media device, search for "anko43430611" and connect. You will hear a prompt sound once the speaker is connected successfully.

TF Card Mode

Insert TF card (up to 32GB) into **Ⓜ** TF card slot. It will play audio track automatically.

 
USB Mode

Plug in USB drive (up to 64GB) to the **Ⓡ** USB port. It will play audio track automatically.

Note: When both USB and TF card plug in, it will read USB first

Microphone Function Overview

- Power ON/OFF
- Volume Up / Next Track (varies different Mic volume mode)
- Volume Mode Switch, Microphone Mute / Unmute
- Volume Down / Previous Track (varies different Mic volume mode)
- Magic Voice Switch
- USB-C Charging Port

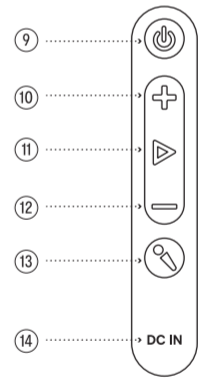

Microphone Function Operation

The microphone will automatically pair with the speaker when both are turned on. When using the microphone, do not hold the microphone too close to the speaker to prevent interference. Try to stay at least 1m apart.

Microphone Power ON/OFF: Press and hold **⏪** button
Volume Mode: Press **▶** to switch between Mic, Music or Reverb Volume Mode
Volume Up: Press **+** to increase respective volume under different volume model
Volume Down: Press **-** to decrease respective volume under different volume model
Next Track: Press and hold **+** button
Previous Track: Press and hold **-** button
Microphone Mute/Unmute: Press and hold **▶** button
Magic Voice: Press **🎤** button to switch to magic voice (4 different magic voices)
Vocal ON/OFF: Press and hold **🎤** turn vocal ON/OFF

Charging

This speaker & wireless microphone are powered by rechargeable battery. Please use provided USB-C charging cable for charging.
Plug the USB-C cable end to the unit and other USB-A end into a wall charger or other 5V charging devices.