INSTRUCTION MANUAL

43430628

[KMT104]

43430628_MAN_Foldable Mini Fan with charger_v1

Artwork Proof Date: 25.06.2024

PAPER:

80gsm


Bright white uncoated paper

PRINT COLOURS:



PRINT FINISH:

Double sided Single Fold 105 x 149mm Folded Size

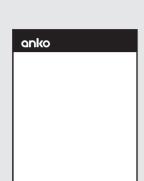

For QA reference only

6.5mm



CHANGE LOG CREST INTERNAL USE ONLY

V:

ARTWORK SHOULD NOT BE AMENDED WITHOUT PRIOR AGREEMENT FROM CREST. ALL ARTWORK MUST BE APPROVED BY CREST PRIOR TO MASS PRODUCTION

IF THERE ARE QUERIES ABOUT THIS ARTWORK PLEASE CONTACT EMAIL: design@crest.com.au

THANK-YOU

Crest © The Crest Company 2024. All rights reserved.

Specification

K: 43-430-628 | T: 69-722-295 Model: NVF25-RG, NVF25-MG, NVF25-PK Foldable Mini Fan with Charger Input rating: 5V=1A USB-A charging output: 5V-1A Battery: 2000mAh

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above. from the date of purchase, provided that the product is used in accordance with accompanying recommendations for instructions where provided. This warranty is in addition to your rights

under the Australian Consumer Law.
For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Services Centre.

Our goods come with guarantees that cannot be excluded under the $\,$ Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major



Contact for Kmart purchases

Kmart Australia Ltd. 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au


Contact for Target purchases

Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-u

anko

Foldable Fan with Charger

Operating Instructions

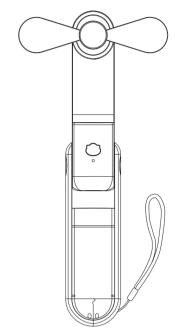

m m

149

Includes:

→ mini fan

carry strap
USB-C charging cable user manual

K: 43-430-628 | T: 69-722-295 MODEL: NVF25-RG, NVF25-MG, NVF25-PK

Safetu Instructions


When using any electrical appliance, basic safety precautions should always be followed including the following:

WARNING: Be careful with moving blades! Do not switch on the fan unless it is fully unfolded from the case.

- Read this instruction manual carefully before using the appliance
- 2. If this appliance is used by third party, please supply the instruction
- 3. Do not disassemble this product.
- 4. Working temperature: $-10^{\circ}\text{C} \sim 40^{\circ}\text{C}$
- 5. The appliance shall not be exposed to dripping or splashing and objects filled with liquids.
- 6. Do not expose to water or rain.
- Do not expose the appliance to water while charging. It may result in permanent damage to the unit or power source.
- 8. Keep the appliance from fire flame, or other heat source and high voltage
- 9. Dispose of this appliance, the battery should be in accordance with local government requirements.
- 10. Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage, or transportation.

 11. Replacement of a battery with an incorrect type that can result in an
- explosion or leakage of flammable liquid or gas. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- 13. Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or aas.
- 14. A battery subjected to extremely low air pressure that may result in an
- explosion or the leakage of flammable liquid or gas.

 15. Do not stop the fan blades while the power is turned on. Avoid the blade contact with any body parts.
- 16. If the fan is not being used for a long time, please fully charge the battery and store in cool and dry place.
- 17. This product must not be connected to power supply source exceeding

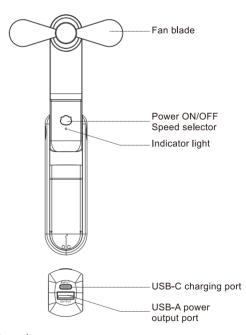

Function Operation:

1st speed (low), press POWER button once to turn the power ON.

2nd speed (medium), press POWER button twice.3rd speed (high), press POWER button three times.

Press the POWER button four times to turn the fan OFF.

The portable fan is powered by a rechargeable battery. Please use provided USB-A to USB-C cable for charging.
Plug the USB-C end to the unit and the other USB-A end into a

wall charger or other 5V charging devices.

Power Bank Function:

You can charge other devices via the USB-A host port. Included cable can be used to charge supported devices.