

210x290mm



12 Month Warranty

Thank you for your purchase.
Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.
We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period.

The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/-Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/-Customer Service Centre 2 Kendall Street, Williams Landing, Vic 3027 Customer Service: 1300 753 567 Or via Customer Help at target.com.au/help/contact-us

WARNING Do not dispose of unit in fire or water. Never attempt to disassemble and reassemble. Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. Check with your local authority for recycle advice. Keep your device and all accessories out of the reach of children and animals. Small parts may cause choking or serious injury if swallowed. Avoid exposing your device to very cold or very hot temperatures (below 0 °C or above 45 °C). Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. Do not allow your device to get wet-liquids can cause serious damage. Do not handle your device with wet hands.

MAKEUP BAG WITH LED MIRROR Instruction Manual

Includes:
Makeup bag with LED mirror
Brush bag
EVA dividers
USB cable



K:43-430-758 | T:69-725-722 Model No.: 202816

Specifications:

Size: 26*23*12CM

Color: Black

Material: PU+glass+HIPS+PP+EVA+PVC+copper

Light: 22pcs cold white LED+23pcs warm white LED

Lighting: cold light-warm white-natural white

Input: 5V DC 1A

Rechargeable battery: 3.7V 1000mAh (non-replaceable) Li-ion battery

Product overview:



How to use this Makeup bag with LED mirror:

1. Open the makeup bag by pulling the zipper.
2. Peel off the plastic film from the mirror before use.
3. Short touch the switch on the mirror to turn on and off the light and change the light mode.
4. Long press and hold the button to adjust the brightness of the light.
5. Additional brush bag for your brushes easy carry.
6. The mirror is removable, there is a piece of velcro tape on the back of the mirror.
7. Turn off the switch when the product is no longer use.

Warning:

1. Use a dry microfiber cloth to clean the makeup bag.
2. Operate and store carefully to ensure the product does not incur damage by being dropped.
3. Do not leave the product in excessive heat or high temperatures as it can cause the product to malfunction.
4. The strip light is non-replaceable.
5. For indoor use only.
6. The light source of this luminaire is not replaceable; when the light source reaches its end of life, the whole luminaire shall be replaced.
7. This appliance contains batteries that are non-replaceable.
8. 5V DC SELV adaptor (not included)

How to charge:

1. Before connect to the power supply by using the USB type C cable, take the mirror from the makeup bag firstly. When the type C end plugged, DO NOT push back the mirror into makeup bag, this will cause the type C end damaged/broken.
2. The built-in charging red indicator light beside the charging port will light up when charging, and the indicator light changes to green when full charged.



Safety instructions for Li-ion battery:

1. Monitor device while charging.
2. Charge battery in an isolated area.
3. Keep away from flammable materials.
4. Do not expose to direct sunlight.
5. Do not disassemble, modify, heat, or short-circuit the battery.
6. Do not drop or subject to strong impacts, only charge the battery with charging cable provided, in the unlikely event of leakage or explosion use sand or chemical fire extinguisher for the battery.
7. Battery must be recycled or disposed of properly.