

anko

User Manual

Over Shoulder Light Up Fan

K: 43430987 | T: 69733772

Model: SHH-NF01



Safety instructions:

Please read all safety instruction warnings carefully before using this product.

Improper use of this product may result in damage to this or attached products.

To ensure the **product** works well, please never use this in the following conditions:

1. Moist or underwater conditions.
2. Conditions near heater or high temperature service.
3. Conditions with direct and strong sunshine.
4. Do not use chemical solvent on cleaning this product.
5. This product shall be supplied by 5V/1A power source (not included).
6. To avoid being involved by the motor, please keep your hair away from the fan blade cover
7. KEEP FAN AWAY FROM HAIR AND JEWELLERY

Product Parameters:

Product Size: 190*230*30mm

Power (W):4W

Voltage (V):DC5V 1A (Max)

Working Time: 1-4hours

Charging Time: around 4hours




Fan



USB charging cable

Key Description:

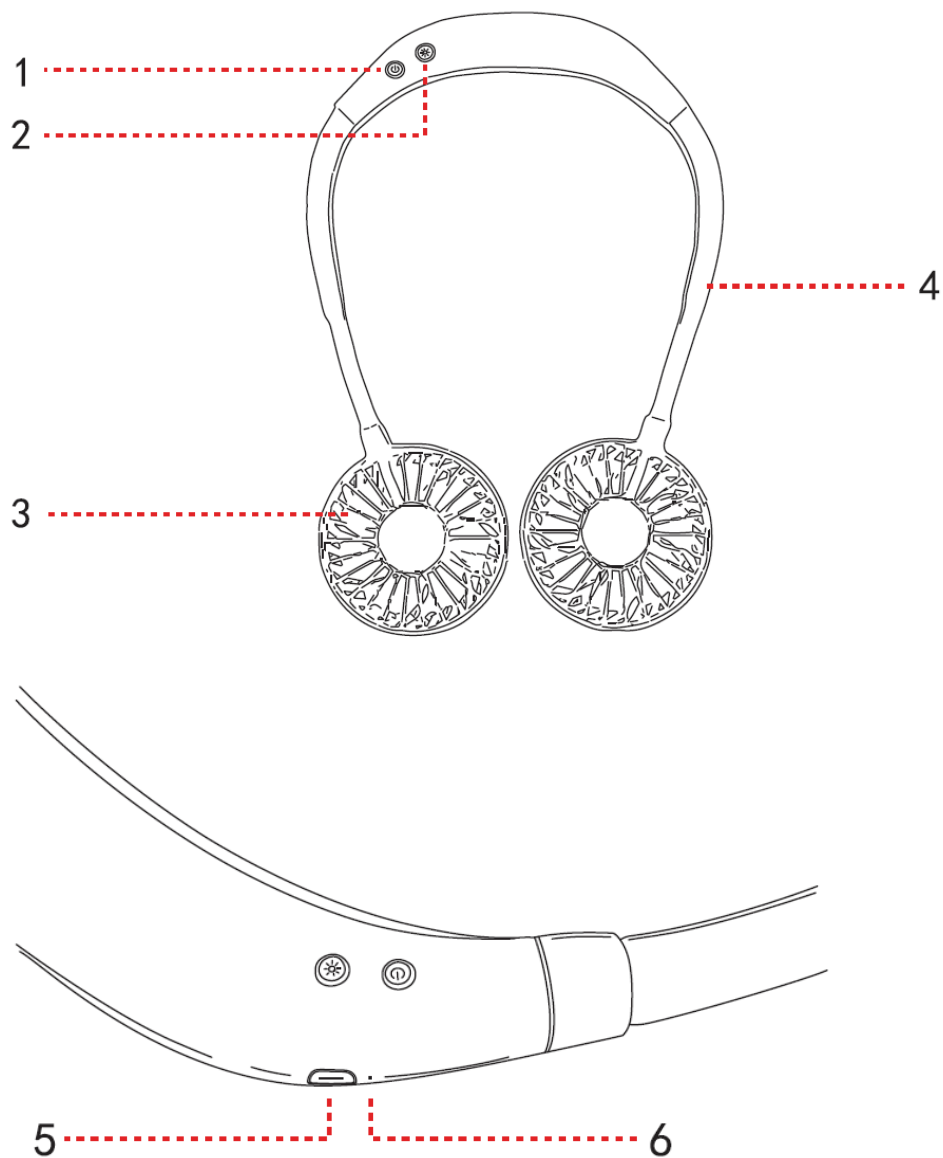

1: Power button:

- . 1st press: Power on, Low
- . 2nd press: Medium
- . 3rd press: High
- . 4th press: Power off

2: Light On/Off button:

- . 1st press: Light on, color change mode
- . 2nd press: Fixed Light
- . 3rd press: Light off

3: fan blades

4: Silicone wrapped metal hose

5: Charging interface

6: Indicator:

Red light on when charging; Blue light when full charging.

Caution

- Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

| Contact for Kmart purchases | Contact for Target purchases |
|--|---|
| <p>Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au</p> | <p>Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us</p> |