

anko

Keycode: 43431069 (Model: JLR-79336)

Roll Up Electronic Drum

 
Instruction Manual

Notice:

Please read user manual carefully before any operations, and keep it for records.



Operation control panel

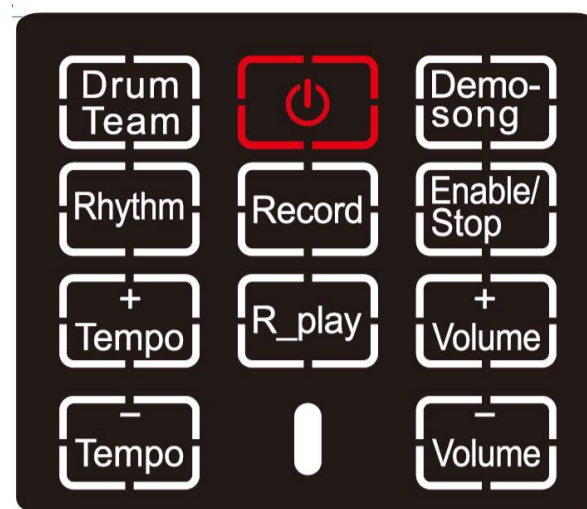

1. On/off

Press this button to enable the device. The led light will turn to red color

2. Drum team

Press this button to select 5 different types of drum kits

3. Rhythm

Press this button to play, it built 10 sets of accompaniment. When the rhythm is playing, the button is used to change the rhythm. You can press Enable/stop to start or pause the rhythm.

4. Tempo+

Press this button to increase speed of rhythms and demo songs.

5. Tempo-

Press this button to decrease speed of rhythms and demo songs.

6. Record

Press this button to record song. It can record about 700 drums. It will emit two beeps when recording is full.

7. R_play

Press this button to play the record drum song.

8. Demo song

Press this button to play Demo song. It built in 10 songs. Press this button again to stop song, press twice this button to next song.

9. Enable/stop

Press this button to start or pause rhythm

10. Volume+

 
Press this button to increase volume

11. Volume-

Press this button to decrease volume

Press the volume+ and volume- at the same time will return to default volume setting.

Drum Map

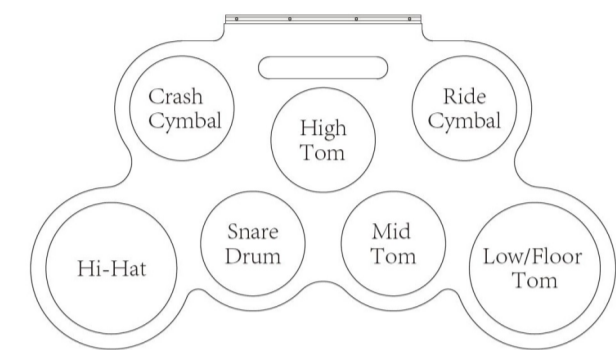

1- Crash cymbal

2- High Tom

3- Ride cymbal

 
4- Hi-Hat

5- Snare Drum

6- Mid Tom

7- Low/Floor Tom

Device interface function

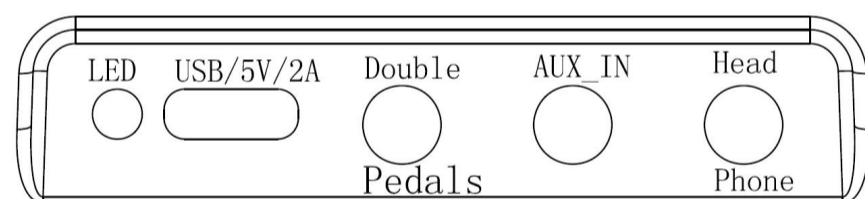

8- Led indicator

The led indicator will turn red while charging. Once fully charged, the red led will turn to green.

9- Charging port

The drum set are powered via an integrated rechargeable battery. The battery cannot be removed or replaced. Upon initial use, the battery should be charged fully to ensure optimal performance and battery life.

Charge the device with the included USB charging cable. Plug the USB-C end of the charging cable into the DC charging port and the USB-A into a suitable USB port on your computer or a USB wall charger with DC5V.

The led indicator will turn red while charging. Once fully charged, the red led will turn to green. Charging time approx. 2-3 hours.

10- Double pedals

Bass drum and pedal Hi-Hat. The double pedals can enrich the sense of rhythm and speed of percussion instruments.

11- Aux in

Stereo sound source input. It can be connected to mobile phones, MP3, CD. Etc.

12- Headphone

Audio signal output interface. You can connect headphone practice without disturbing anyone. It also can be used as a sound source output to external audio equipment, such as direct equipment, high-fidelity audio amplifiers and multimedia speakers.

Bluetooth Playing

1. Turn on your drum set
2. Choose "anko43431069" on your Bluetooth device to connect the drum set
3. When successfully paired and connected, a beep will issue from the unit.
4. The LED indicator will turn to green
5. You only can use your Bluetooth device to control music volume

After initial pairing, the unit will stay paired unless unpaired manually by the user.

NOTE:

1. Only one Bluetooth device can be connected at one time.
2. Should your device become unpaired or you are not able to connect it, repeat the above

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within

the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us