

anko

Instruction manual

K: 43-435-098 | T: 69-783-982

Model No.: 43303557

LED Disco Ball

Instructions:

1. Please read this product manual carefully.
2. Read all warnings and follow all instructions in this product manual.
3. Use only a microfiber and dry cloth for cleaning the product.
4. Operate carefully to not cause any damage by dropping or physical shocking it.
5. Do not leave the product in excessive heat, high temperatures can cause the product to malfunction.
6. The light source of this luminaire is not replaceable.
7. When the light source reaches its end of life, the whole luminaire shall be replaced.
8. For indoor use only.
9. Supplied cable is only suitable for use with K: 43-435-098 | T: 69-783-982 led disco ball product.

1. Production Specification

USB Input Power: DC 5V 1A

Power supply mode: USB plug

2. Accessories Quantities:

USB Cable x1, Disco ball light x1

3. Connecting the light:

1. Plug the USB cable into a free USB port or USB wall changer with 5V 1A output.
2. You can turn on/off the light by the switch.
3. You can hang the handle on a hook or put on the desk (Installation pack is not included).
4. You can adjust the lamp head angle as you want.

