


anko

Thermal Bluetooth Printer

Instruction Manual




K: 43437771 | T: 69834394 Model: JLR-79430

Please read all the information carefully before you use the product and keep the manual for future reference as it contains important information.

Packing list:

- 1 pc thermal Bluetooth printer
- 1 pc manual
- 1 pc USB-C cable
- 1 roll of thermal print paper

1. Product structure



Single long click: Power button
Double short click: Print key

Print Ramp
Print Exit
charging port
paper slot

On/Off button
Single long click: switch on / switch off the printer
Double short click: print the system information (see below)

- Function use and can print.
- Print Density from light to dark.
- Show App name (WalkPrint), BT name (YHK-XXXX), BT address (BT:XXXX) and Software code (XXXXXXXX).
- Battery capacity percentage.

2. Product Specification:

Product size: 8.5cm*8cm*4cm
Built-in Battery: 1200mAh, 3.7V
Input Rating: 5V/1A
Compatible with Android 4.0, iOS8.0 or later
Roll Print Paper: [works well with anko K: 43-423-804 | T: 69-607-653 (sold separately)]

3. Power indicator status

| | | |
|--|------------------------------|--------------------------------|
| | Blue light is always on | Bluetooth connected / Printing |
| | Red light is always on / off | Charging / Charging completed |
| | Blue light flashing | Pending connecting |

Warm Tips:

Please charge it before use. It takes around 2 hours to fully charge. Only use the cable provided to charge the product.

4. Install Printing Paper

- Open the paper slot
- Install the print paper
- Show App name (WalkPrint), BT name (YHK-XXXX), BT address (BT:XXXX) and Software code (XXXXXXXX)
- Close the paper face down

When printing blank or paper jam, please check whether the paper roll is installed backwards.



1
2
3
4


Warm Tips:

- When you need to open the paper slot, please try it open in the direction indicated. Do not use brute force to avoid damaging the machine.
- When printing blank or paper jam, please check whether the paper roll is installed backwards.

Correct installation of printing paper, please refer to picture 2 above.
It need to open the paper slot to leave the roll paper 1 inch outside before first printing as above picture shown, then it can print automatically.

5. Download WalkPrint

Search **WalkPrint** on "Google play" or "Apple Store" to download the App.




6. How to connect Bluetooth printer

6.1 iOS connection method

- Enable Bluetooth connection on your mobile device, turn on WiFi or GPS and thermal Bluetooth printer.
- Open the **WalkPrint** APP as shown, Select the "Profile" option.
- Select the "My printer" option and proceed to the next step.
- In the list of Bluetooth, select the Bluetooth device named "YHK-XXXX", where XXXX can be combination of digits and letters. Click to connect and the device can be used after successfully connected.


Warm Tips:

It must work with WiFi or GPS, or else it can't print.

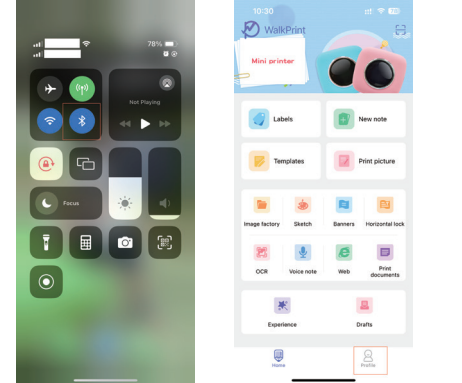

6.2 Android connection method


- Enable Bluetooth connection on your mobile device, turn on WiFi or GPS and thermal Bluetooth printer
- Open the **WalkPrint** APP as shown, Select the "Mine" option.

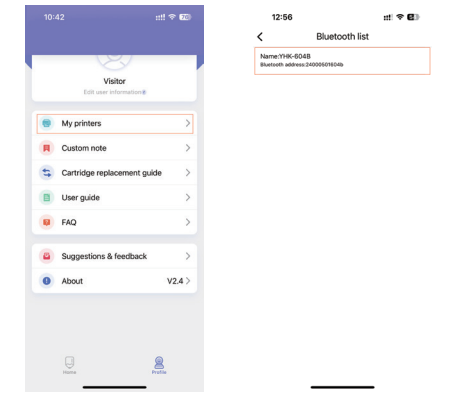

- Select the "My printer" option and proceed to the next step.
- In the list of Bluetooth, select the Bluetooth device named "YHK-XXXX", where XXXX can be combination of digits and letters. Click to connect and the device can be used after successfully connected.

Warm Tips:


It must work with WiFi or GPS, or else it can't print.

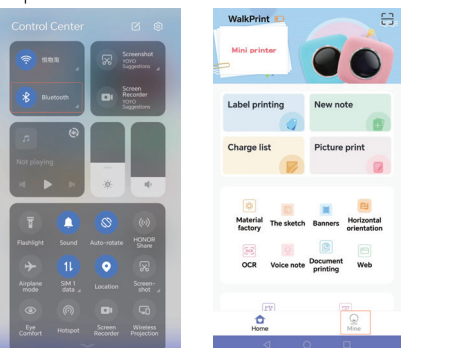


7. How to Print Image

7.1 Apple phone interface as shown in the picture

- On the Homepage of the APP, select "Print picture" to enter the printing process.

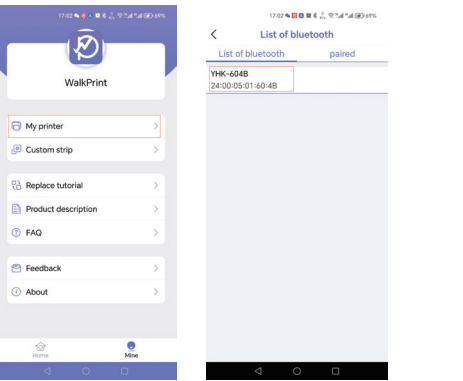


- After entering "Print picture", you can click "Take a photo" option to take a photo directly print or click "Photos" to select from your phone's photo albums to print.
- After importing the image, you can adjust the size according as you need, and then select in the upper right corner to proceed next step.
- After entering the print preview, you can adjust the image density according to your needs (iOS: default medium density is 20), and then select to print (upper right corner).
- The printer will automatically print out images after receiving printing instructions.
- On the Homepage, you can click to scan QR and print the content you scanned.

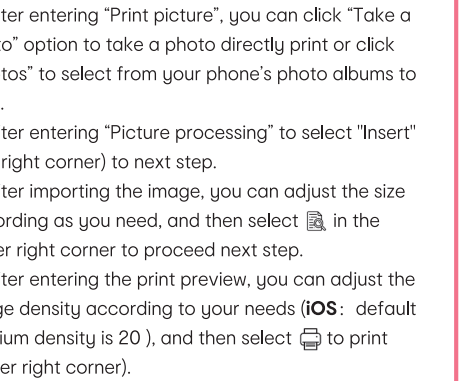



7.2 Android phone interface as shown in the picture

- On the Homepage of the APP, select "Picture print" to enter the printing process
- After entering "Picture print", you can click "Taking pictures" option to take a photo directly print or click "Photo album" to select from your phone's photo albums to print.
- After importing the image, you can adjust the size according as you need, and then select in the upper right corner to proceed next step
- After entering the Preview, you can adjust the image density according to your needs (Android: default medium density is 25), and then select to print (upper right corner).
- The printer will automatically print out images after receiving printing instructions.
- On the Homepage, you can click to scan QR and print the content you scanned.

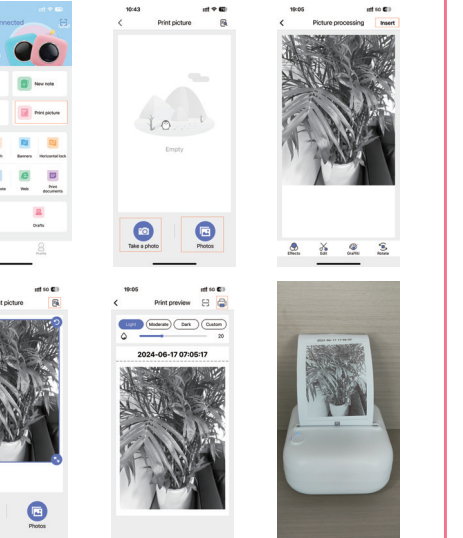

8.1 Apple phone interface as shown in the picture

- Select to enter the New Note interface to print text messages.

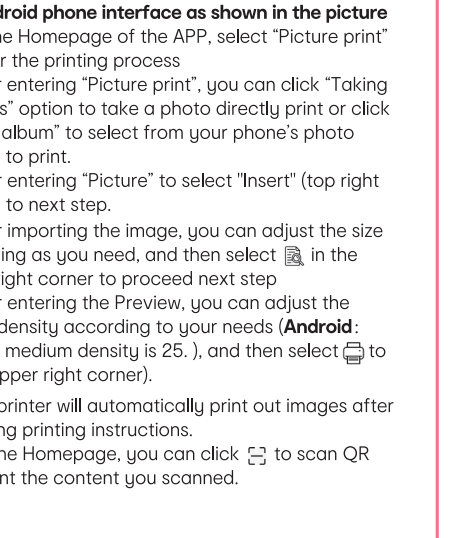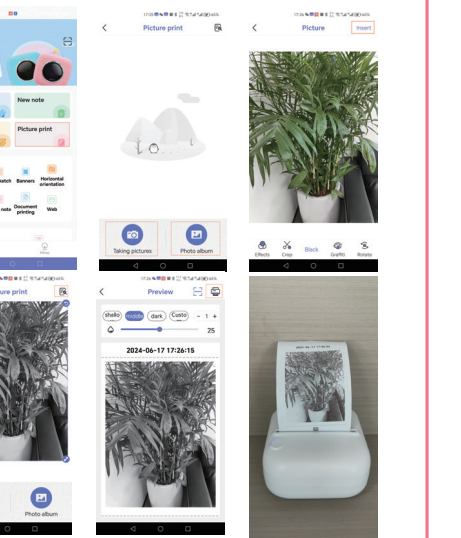Warm Tips:


- Please do not open the paper slot during the printing process or just after printing. Let the print head cool down sufficiently before replacing the printing paper.
- Do not pull out the print paper when the paper slot is closed as this may damage the printer.
- Please keep the printing paper clean and dry to avoid dust or stains affecting the printing effect.
- This printer contains a roll of printing paper, so it will make noise when you shake or move the printer, but this does not affect the quality of the product, so please feel free to use it.
- If the machine works continuously or spasmodically for a long time, it may cause when the temperature of the motor gets too hot. After resting for a period of time, it can work again. **Duty cycle: printed 7 papers, have a rest for 30mins.**

8.2 How to use the New Note Function

8.1 Apple phone interface as shown in the picture


- Select to enter the New Note interface to print text messages.

- Edit and input the text or select more content (e.g.: picture/sticker/more) that needs to be printed, click to next step (upper right corner).
- After entering the printing "Print preview", you can adjust the font density as needed (iOS: default medium density is 20).
- Adjust the font density and click to print (top right corner).
- The printer will automatically print out text after receiving printing instructions.

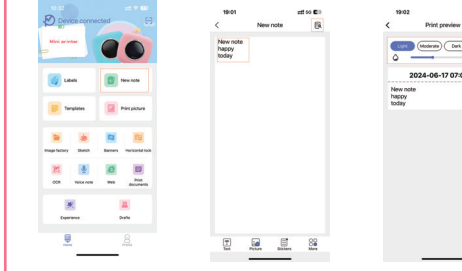


8.2 Android phone interface as shown in the picture

- Select to enter the New Note to print text messages
- Edit and input the text or select more content (e.g.: picture/sticker/more) that needs to be printed, click to next step (upper right corner).
- After entering the printing interface, you can adjust the font density as needed (Android: default medium density is 25).
- Adjust the font density and click to print (top right corner).
- The printer will automatically print out text after receiving printing instructions.

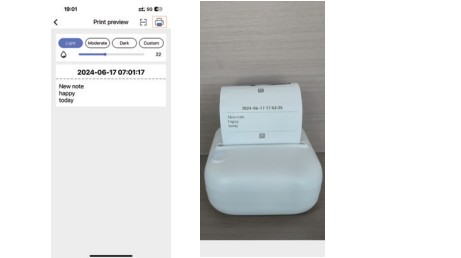


- Enter the "Templates" option.
- Select frame from Festive/To do list/Fun/Frame to print as you need.

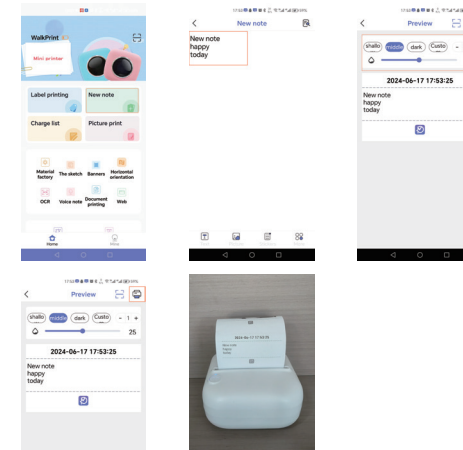

9 How to Print with Templates/Charge list



9.1 Apple phone interface as shown in the picture

- Enter the "Templates" option.
- Select frame from Festive/To do list/Fun/Frame to print as you need.

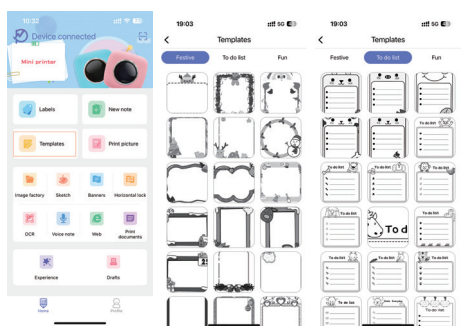

9.2 Android phone interface as shown in the picture

- Enter the "Charge list" option
- Select frame from Festive/To do list/Fun/Frame to print as you need.

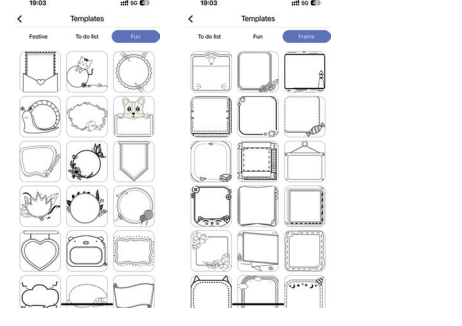10. How to use Labels/Label printing

10.1 Apple phone interface

- Open Homepage and enter "Labels" interface
- Select "Labels" from Home/Life style/Decoration to print as you need.

| | Type of labels | | | | | |
|------------|---------------------------|----------------------|----------------------|--------------------|---------------------|---------------------------|
| Home | Storage Labeling | Medication Labeling | Folder Labeling | Container Labeling | Electronic Labeling | Kitchen Material Labeling |
| Life style | Dried Goods Labeling | Ingredients Labeling | Plant Labeling | Skin Care Labeling | | |
| Decorat on | Diary/ Scrapbook Labeling | Present Labeling | Photo Album Labeling | | | |
| Mom & Kids | Storage Labeling | Item Labeling | | | | |
| Medicine | Medication Labeling | | | | | |

10.2 Android phone interface

- Open Homepage and enter "Label printing" interface.
- Select "Label printing" from Home/Life style/Deco-ration to print as you need.

| | Type of labels | | | | | |
|------------|---------------------------|----------------------|----------------------|--------------------|---------------------|---------------------------|
| Home | Storage Labeling | Medication Labeling | Folder Labeling | Container Labeling | Electronic Labeling | Kitchen Material Labeling |
| Life style | Dried Goods Labeling | Ingredients Labeling | Plant Labeling | Skin Care Labeling | | |
| Decorat on | Diary/ Scrapbook Labeling | Present Labeling | Photo Album Labeling | | | |
| Mom & Kids | Storage Labeling | Item Labeling | | | | |
| Medicine | Medication Labeling | | | | | |

11 Other functions:

11.1 Apple phone interface

| Images factory | Click image option to select Emoji/ LineArt / Transportation/ Anime/ Lovely/ Kinglist/ Stickers options to print |
|-----------------|--|
| Sketch | 1. Take a photo to print by sketch effect 2. Choose from photo album to print by sketch effect 3. Select from image library to print by sketch effect |
| Banners | Click Banners option, input and edit content to print as you need |
| Horizontal lock | Click Horizontal lock option, input and edit content to print as you need |
| OCR | Take photo directly or select photo from photo album to scan and convert to words/numbers to print |
| Voice note | 1. Click Voice note 2. Record audio up as you want and it can up to 60 seconds 3. Convert it into a QR code and print it out. 4. Use in the App to scan it to play. |
| Web | Click web option, input the website to print current page or whole page as you need |
| Print documents | Print other documents(All/word/pdf/txt) by this app 1. Open the file (word/pdf/txt/others) which you want to print 2. Select "Open in other app" 3. Select "WalkPrint" to print as you need Note: The file will be saved in All after you printed by this App and you can select the file to open/delete as you need. |
| Experience | Click experience to select the picture you want to print. |
| Drafts | To Print/Edit/Delete all the photos you saved |

11.2 Android phone interface

| Material factory | Click image option to select Emoji/ LineArt / Transportation/ Anime/ Lovely/ Kinglist/ Stickers options to print |
|------------------------|--|
| The sketch | 1. Take pictures to print by sketch effect 2. Choose from photo album to print by sketch effect 3. Select from image library to print by sketch effect |
| Banners | Click Banners option, input and edit content to print as you need |
| Horizontal orientation | Click Horizontal orientation option, input and edit content to print as you need |
| OCR | Take photo directly or select photo from photo album to scan and convert to words/numbers to print |
| Voice note | 1. Click Voice note 2. Record audio up as you want and it can up to 60 seconds 3. Convert it into a QR code and print it out. 4. Use in the App to scan it to play. |
| Document printing | Print other documents(All/word/pdf/txt) by this app 1. Open the file (all/txt/pdf) which you want to print 2. Select "Open in other app" 3. Select "WalkPrint" to print as you need Note: The file will be saved in "All" after you printed by this App. Select "Manage" can delete the file you want. |
| Web | Click web option, input the website to print current page or whole page as you need |
| Experience pavilion | Click experience pavilion to select the picture you want to print. |
| Historical note | To Print/Edit/Delete all the photos you saved |

Power supply

The power adapter should use the specified 5V / 1A , and other types of adapters may conflict with this product.

Regular charging the product for every month is to ensure the life of the product, while pro-longed period of idle or low battery level may lead to battery life issue.

Only use the charging cable provided to charge the camera.

Built-in battery is not removable and replaceable, if damaged should contact service and repair.

Safety instruction

Keep the appliance away from all hot surfaces and naked flames.

Always put the appliance on a level, stable, clean, dry surface.

Protect the appliance from extreme heat and cold, dust, direct sunlight, humidity and drops or jets of water.

Do not immerse the appliance in water or in other liquids.

Do not open the housing under any circumstances. Do not introduce any objects into the interior of the housing.

Please wipe the surface stains with dry cloth. When cleaning this product, ensure that the charger is disconnected.

Regular checking cables and product in case it's damaged. If it is damaged, stop using immediately. It contains small parts, not suitable for use of the child under the age of three!

Guardians should keep watch over children while they play.

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You

are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

| Contact for Kmart purchases |
|---|
| Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic. 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au |
| Contact for Target purchases |
| Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing. Vic. 3007 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us |