

PLASMA BALL SLR-23094

IMPORTANT SAFETY INSTRUCTIONS:

The following safety precautions should always be followed, to reduce the risk of electric shock, personal injury or fire. It is important to read all of these instructions carefully before using the product, and to save them for future reference or new users.

1. This product must only be used as intended in accordance with the enclosed operating instructions.
2. Keep out of reach of less than 14 years old children and pets. This product has not been designed for use by children or pets.
3. CAUTION: Electric shock hazard. The external flexible cable and adaptor of this product cannot be replaced. If any of these parts are damaged, disconnect from mains power. The product should be destroyed!
4. For indoor use only. Not for use in wet locations. Don't mount over or near a sink, bathtub or other source of water. Keep cord well away from water.
5. As with any plug-in appliance, if cord or fixture comes in contact with water, remove fuse or turn off circuit breaker powering the electrical outlet. Then remove transformer from wall outlet. Reposition cord and fixture well away from water.
6. Ensure the appliance is switched OFF before connecting to the mains power supply.
7. Unplug the product when leaving the home, sleeping for the night, or if left unattended.
8. Operate product on flat and stationary surfaces which are at room temperature.
9. This product may break if it is dropped, knocked over, or subjected to any form of sudden impact.
10. The product periodically be examined for conditions that may result in the risk of fire, electrical shock, or injury to persons. In an event such conditions, the product should not be used until properly repaired.
11. Always ensure that hands are dry before operating or adjusting any switch on the product or touching the plug and mains supply connections.
12. To disconnect, first ensure that all controls are in the OFF position, then remove the plug from the electrical supply.
13. If the appliance stops unexpectedly or appears to malfunction, switch off the power supply, unplug from the mains and stop using immediately. Seek professional advice to rectify the fault or make repairs.

CAUTION:

Do not place product near sources of heat or cold, such as gas or electric heaters, air conditioners. Or open flames such as fireplaces or candles.

Do not let the lamp rest on the supply cord or on any wire.

Do not use this product for other than its intended use.

Do not hang ornaments, or other objects from cord, wire or light string.

Do not cover the product with paper, cloth, or any material not part of the product when in use.

Do not close doors or windows on the product as this may damage the wire insulation.

Never use excessive force on the plasma ball, the glass ball can break and cause serious injury.

If the glass ball is broken or cracked, handle with extreme care, sharp glass can cause serious injury.

Do not use outdoors or exposed to direct sunlight.

Product specification


- Input: 100-240V~ 50/60Hz
- Output: 12V DC 500mA Max. 6W

The plasma ball should be powered by the provided adaptor only!

The provided adaptor is located at the bottom of the color box.

The millennium ball contains a mixture of gases. The base has a device producing high frequency electronic magnetic waves. High cause the gases to turn into color streaks. The ions thus produced emit energy around the globe and appear in colored streaks.

1. Setting up: Plug the adaptor pin into the adaptor act provide on the base unit and plug the adaptor supplied here with into the AC power supply.
2. Slide the switch to "ON", the colored streaks are attracted towards the fingers as they get close to the unit a slight tickle is experienced due to the vibration caused by the electronic strike on the surface of the sphere.
3. Slide the switch to "SOUND", it will emit light along with the heavy rhythm of playing music.

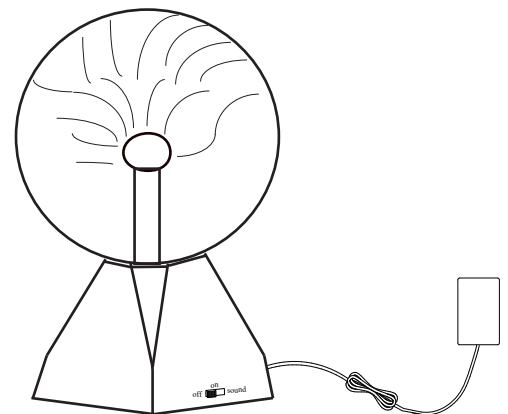

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us