

INSTRUCTIONS FOR STICKY GOLF SET

Keycode: 43441372

WARNING! Keep the instructions for future reference.

WARNING! Requires adult assembly only.

WARNING! Always check equipment and accessories before use.

WARNING! Do not aim to eyes or faces.

WARNING! Choking hazard. Small parts. Small balls. Not for children under 5 years.

Indoor Play & Outdoor Play:

Play this game anywhere. This golf game set mat is suitable for playing indoors or outdoors on a variety of surfaces, complete with ground stakes, and suitable for placement on grass and sand. It can also be hung on the wall as a ball toss and dart game(hooks not included). You can also hang it on an outdoor fence, garage beam or ball net.



Game rules:

1. different colored balls can be used to group up to four groups.
2. assemble adjustable golf club:
 - a. screw and tighten handle&head to be golf club for kid.
 - b. screw and tighten handle&middle&head to be golf club for adult.
3. put the ball on the golf hitting mat, swing the club to target the mat.
4. use the scoreboard to record each person's score.