

60cm (2FT) MINI FLOCKED LIGHT UP **CHRISTMAS TREE**

KEYCODE K: 43442423 T: 70037753



- Tree body
 Plastic stand included

How to Assemble:

- Slide the three plastic stabilising legs into the base of the tree trunk until they are firmly secured.
- 2) Shape the branches by gently pulling them down and away from the trunk and then separate the individual tips.
- 3) Shape the branches for a natural look. Shift the branches to fill any gaps. Slightly upsweep all branch tips for a uniform look. Your Christmas tree is now ready for you to decorate

and enjoy.




Conditions of use

- 1) This product is for indoor use only.
- 2) keep product away from fire and other heat sources
- 3) Recommend saving instructions for future reference.

Packaging up and storage Tips

- 1) Remove all ornament.
- 2) press branches against stem before placing in carton.
- 4) pack carton and store in a dry and damp free area.
- 5) DO not place product in direct sunlight or in an area where temperatures exceed 40 degrees.

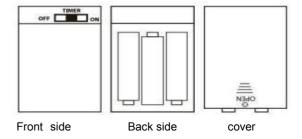

ON/OFF/Timer Function operation

REQUIRES 3X1.5V AA BATTERIES NOT INCLUDED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. **OPERATING AND CARE INSTRUCTIONS NEVER MIX DIFFERENT TYPES OR OLD AND NEW BATTERIES** DO NOT SHORT CIRCUIT SUPPLY TERMINALS OR DISPOSE OF BATTERIES IN FIRE REMOVE BATTERIES DURING LONG PERIOD OF NON-USE FOR DECORATION ONLY.THIS IS NOT A TOY.KEEP AWAY FROM CHILDREN AND PETS.

*Timer will start once the switch is set to the "timer" position. Lights will stay on for 6 hours and then turn off for 18 hours.

Cycle will repeat automatically unless switched to off position or batteries are exhausted.