

anko

Hot Air Styler Set

KPCH994

Instruction Manual



To ensure proper operation of this device, please read this instruction manual carefully before using the device and keep it for further reference.

IMPORTANT SAFEGUARDS

To prevent electrical shock, personal injury or property damage, read and follow all instructions and warnings.

Warning:

When the hair dryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hair dryer is switched off. When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

DANGER-As with most electrical appliances, electrical parts are electrically live even when the switch is off. To reduce the risk of death by electric shock:

- Always unplug it immediately after using.
- To avoid danger of electrocution, do not store or leave the appliance in a position where it might fall into a bath-tub, basin or other vessel containing water, even when the appliance switch is in the off position. Remove the plug from the socket - outlet when the appliance is not being used.
- Do not use the appliance near bathtubs, sinks or any other recipient containing water or any other liquid. Never use the appliance in the shower. This appliance is for indoor use only.
- Do not place or drop into water or other liquid.
- If an appliance falls into water, "unplug it" immediately. Do not reach into the water.

For additional protection, the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your electrical contractor for advice.

**WARNING-TO REDUCE THE RISK OF BURNS,
ELECTROCUTION, AND FIRE, OR INJURY TO PERSONS.**

- Burn hazard. Keep appliance out of reach from young children, particularly during use and cool down; when the appliance is connected to the power supply, never leave it unattended; always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.
- An appliance should never be left unattended when plugged into a power outlet.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given close supervision or instruction concerning use of the appliance by a person responsible for their safety. This appliance is not a toy. Children should be supervised to ensure they do not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by this instruction manual.
- Do not operate any appliance with a damaged cord or plug after the appliance malfunctions, or is dropped or damaged in any manner.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agents or similarly qualified persons in order to avoid a hazard.
- Never block the air openings of this hair styler or place it on a soft surface, such as a bed or couch, where the air openings may become blocked. Keep the air openings free of lint, fluff and hair.
- The air inlet and outlet openings should never be obstructed. If however, the airflow is inadvertently obstructed during use, the built-in thermal cut out will automatically switch off the appliance.
- Handle the appliance with care. Some parts of the appliance could reach very high temperatures, even after its use, and could cause injuries in the skin, eyes, face and other parts of the body. Avoid any direct contact with your body. Never leave the appliance on hot-sensitive surfaces.

- To protect from possible overheating, this appliance is equipped with a safety thermostat. Should it cycle ON & OFF during use, turn the main switch to “0” and let it cool down before using the appliance again.
- Do not use on people who are sleeping.
- Never drop or insert any object into any opening of this appliance.
- Do not use outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
- Do not direct hot air towards the eyes or other heat sensitive areas.
- Attachments, where provided, may be hot during and after use. Allow them to cool before handling.
- Switch off and remove the plug from the power outlet before cleaning or when not in use. To unplug, grasp the plug and pull from the power outlet. Never pull cord. Never carry the appliance by the cord.
- When using the appliance, keep your hair away from the air inlet grille, Do not let your hair get drawn into the appliance.
- When drying your hair in rollers, do not allow any clips, hairpins etc. to project more than 10mm (finger width) so as to ensure that they cannot come into contact with the live parts inside the appliance.
- Do not use any appliance for anything other than its intended use. This product is intended for household use only.
- Do not attempt to repair or disassemble the appliance. There are no user serviceable parts.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.
- Do not leave the appliance unattended when in use.
- Avoid the addition of heat from other sources, e.g., from direct sunlight, heating appliances, other devices, etc.
- Do not use an extension cable. In the event of danger, the plug must be quickly and easily accessible.

- Use this appliance to brush human hair only. Do not use this appliance on artificial hair or animals. The appliance may have different results depending on the hair type. Therefore, we recommend to do a trial at a hidden spot before first use. The hair styler is not recommended for damaged or bleached hair.
- The instructions for hair straighteners and curling irons shall include the substance of the following:
 - Burn hazard. Keep appliance out of reach from young children, particularly during use and cool down;
 - When the appliance is connected to the power supply, never leave it unattended;
 - Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.

SAVE THESE INSTRUCTIONS

CAUTION: Risk of Burning! The appliance gets very hot! Take care to avoid contact between the hot surfaces of the unit and the skin, paying particular attention to the face, neck and hands.



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

FEATURES OF YOUR HOT AIR STYLER SET



In/Out Brush – used for quick & easy curling



Curling Iron– used for tight and formed curls



Straightening Brush – used to straighten hair



Vent Softer Brush – used for bouncy blow dry's



Half Brush– used to dry hair and reduce frizz



Small Tower Brush – used to create volume close to roots



Concentrator Nozzle – used for classic hair drying

GETTING TO KNOW YOUR HOT AIR STYLER SET

Congratulations on the purchase of your new Hot Air Styler Set. Before using your new hair styler, it is important that you read and follow the instructions in this Use & Care booklet, even if you feel that you are quite familiar with this type of appliance. Find a place and keep this booklet handy for future reference. Attention is particularly drawn to the section dealing with “Important Safeguards”.

This appliance has been designed to operate from a standard domestic power outlet. It is not intended for industrial or commercial use.

• Ionic function

When you use the hair styler, ion will be produced and released by the air flow. The Ionic Function generates a cloud of negative ions that can help to reduce frizz. Generally, flyaway, frizzy hair bears positive charge; the negative ions generated can neutralize the positive charge, eliminate static electricity and contribute to shine.

USING YOUR HOT AIR STYLER SET

Before first use

- Carefully unpack the hair styler and the accessories, and remove all packaging material.
- Make sure that your hair styler and the accessories are clean and undamaged.

Fitting and Removing the accessories

To attach, align the unlock sign on the accessory and the indentation underneath with the accessory release button. Push the accessory down onto the hot air styler and rotate clockwise until it clicks into place.

To remove, press and hold the accessory release button, turn the accessory anti-clockwise and pull it away from the hot air styler.

When attaching or removing accessories, make sure the hot air styler is disconnected from the mains power outlet socket and has cooled down after use.

Note: When fitting and removing the accessories, please make sure to hold them by the lower part. Do not hold the middle or top parts of the accessories, which may cause damage to them. Please refer to the following picture:



Accessories

The Hot Air Styler Set offers convenience for both drying and styling your hair with a single tool, featuring seven accessories for tasks like curling, straightening, shaping, smoothing, and volumising.

The seven accessories are introduced below:

Concentrator:

The concentrator helps direct the airflow to a concentrated area for quicker drying and preparing the hair for styling.

In/Out Brush:

The in/out brush creates natural-looking curls of varying sizes while offering ease of use and flexibility. Once the hair has been set into a style, the bristles are retractable for easy removal. You may press down on the top of the brush and rotate it to retract the bristles into the barrel; to extend the bristles, repeat the steps.

Curling Iron:

The curling iron produces consistent and well-defined curls, providing a more controlled and structured styling option.

WARNING: DO NOT touch the hot thermal plates.

Straightening Brush:

The straightening brush straightens the hair.

WARNING: DO NOT touch the hot thermal plates.

Vent Soften Brush:

The vented soft brush, featuring gentle bristles, both dries and shapes the hair, resulting in a naturally effortless style. The added curling power from the heated barrel enhances the overall effect. Style the hair until it feels warm to the touch for optimal results.

Half Brush:

The half brush with firm bristles creates gentle tension to reduce frizz as the hair dries.

Small Tower Brush:

Use the small tower brush to create volume and fullness close to the roots. Insert the brush into the hair, starting as close to the roots as possible. Lift the hair 4-5 centimeters from the scalp to achieve desired volume. When finished, gently slide the brush out of the hair.

OPERATION

Tips:

- Before styling, brush or comb your hair to ensure that it is not entangled.
- When styling, your hair should remain damp and moist. When your hair is wet after a wash, it should be normally dried, i.e. by a normal hairdryer. When the hair is dry, slightly dampen it with water.
- Prevent the hair from becoming too dry: this may result in frizzy hair which is hard to style.

Avoiding Hair Tangles:

If your hair gets caught in one of the accessories, do not panic.

- Immediately slide the power switch to the OFF (0) position.
- Unplug the ionic hot air styler.
- Depending on the situation, you may want to detach the accessory or leave it on for better manageability. Always exercise caution when dealing with hot accessories.
- To untangle hair from the accessory, try loosening it first and then gently unwind it. For stubborn tangles, using the end of a tail comb can sometimes be helpful.
- Avoid twisting the accessory up and down, as this may worsen the tangles.

- When using the In/out brush or vent soften brush, make sure not to wrap the hair around the brush more than twice to prevent tangling.
1. Fully unwind the mains cable. Plug the appliance to the electrical supply. Make sure the power switch is set at the 0 (off) position.

2. Attach the desired accessory to the air outlet.

CAUTION: The accessories can be detached after use, but allow them to cool before removing.

3. Switch on the hair styler to the desired setting. When the hair styler is on, the power indicator lights up in red. The switch setting is as shown below:

0 = OFF

* = Cool air

I = Low airflow speed, low heat

II = High airflow speed, high heat

Use the high heat setting for initial drying, and the low heat setting as the hair begins to dry and for styling.

Use the cool setting to set the style for longer lasting results after drying and styling.

Ionic function will be auto ON during styling.

4. When finished drying or styling, switch the appliance OFF, unplug the appliance and allow it to cool before putting it down/storing.

CAUTION: The appliance may stay hot even after its use. Wait until it cools down completely before handling or storing it.

NOTE: This hair styler is equipped with a thermostat that will cycle OFF if the temperature exceeds the comfort level due to partially blocked air inlet or air outlet openings. In the event that the hair styler stops during use, turn off all switches and allow the hair styler to cool down, at which time the thermostat will automatically reset. Before using again, check that the air inlet and air outlet openings are not blocked. Unplug the hair styler and clean the openings if necessary. During use, do not block the air openings or let your hair be drawn into the hair styler.

CARE AND CLEANING

Cleaning

Before cleaning or storing the hot air styler, unplug it from the electrical outlet and wait until it cools down completely.

- Be particularly sure to check that the air inlet and air outlet are free from dust, hairs and fluff.
- Wipe the hot air styler and the accessories with a slightly damp cloth.

STORAGE

When the hot air styler is not in use, always remember to unplug it from the power outlet. Allow the hot air styler to cool before storing it in a safe, dry place, out of the reach of children. Avoid wrapping the power cord around the hot air styler, as this can lead to premature wear and breakage. Handle the cord with care to ensure its long life, and refrain from jerking, twisting, or straining, especially at the plug connections. If the cord becomes twisted during use, periodically straighten it. For added convenience, utilize the hang loop to store the hot air styler within easy reach, ensuring it is protected from water splashes.



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

TECHNICAL SPECIFICATIONS

POWER SUPPLY : AC 220-240V ~ 50Hz

POWER CONSUMPTION: 600W

NOTE: As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated from the packaging.

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us



Cat. No. KPCH994
June 2024