

anko

Mini Dipping Pot NSC-6 User Manual



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS


When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE.


Read and understand all instructions before using this product and follow all warnings and cautions in the manual.

- To protect against risk of electrical hazards, do not immerse the appliance, power cord or plug in water or any other liquid.
- Extreme caution must be used when moving an appliance containing hot food or liquid.
- For electrical safety, if the supply cord is damaged, it must be replaced by a qualified electrician only or the product must be disposed of.
- Place the cord in such a way that pulling or tripping over it is not possible.
- Always place and operate the appliance on a flat, solid, clean, dry and heat-resistant surface.
- The power socket must be readily accessible so that the appliance can be unplugged in an emergency.
- This appliance is intended to be used indoors in household and similar applications such as: staff kitchen areas in shops, offices and other working environments, farmhouses, by clients in hotels, motels and other residential type environments, bed and breakfast type environments.
- The appliance is intended for household use only. Do not use outdoors or for commercial purpose. Any other use will void the warranty.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always unplug from the mains supply when not in use and allow the appliance to cool down before taking off parts and cleaning.
- Do not operate the appliance if damaged or malfunctions.
- Do not touch hot surfaces. Only use the handles or knobs.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use an extension cord with this appliance.
- Do not dismantle and repair the appliance by yourself. **DANGER OF AN ELECTRIC SHOCK AND/OR FIRE!**
- Do not allow this appliance to touch curtains, wall coverings, clothing, dish towels or other flammable materials during use.
- **IMPORTANT! Do not leave the appliance unattended when in use or when connected to mains power.**
- Do not operate your appliance inside cabinet or under a wall cabinet. When storing in a cabinet, always unplug the unit from mains power.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.

-  **Caution, hot surface. Care must be taken. The surfaces will get hot during and immediately after use.**
- CAUTION: To prevent damage to the appliance, do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.
- Warning: potential injury from misuse.
- The heating element surface is subject to residual heat after use.
- For cleaning, please refer to section “Cleaning and Maintenance”.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

KNOW YOUR MINI DIPPING POT

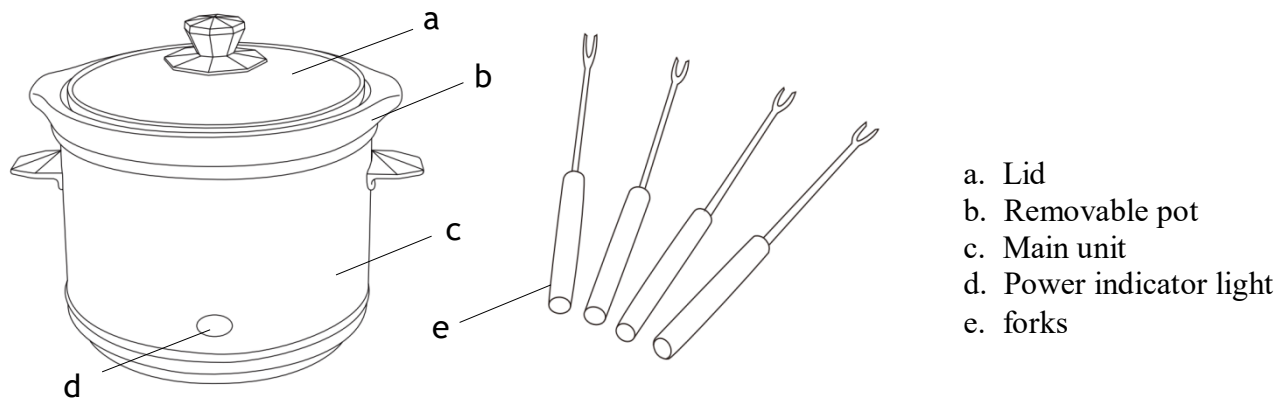

BEFORE FIRST USE

IMPORTANT! Always place and operate the appliance on a flat, solid, clean, dry and heat-resistant surface.

IMPORTANT! Place the appliance on a heat resistant surface only. Some kitchen bench top surfaces are sensitive to heat and may be damaged due to heat. Placing the appliance on a heat resistant mat is recommended.

- Unpack the appliance and check if all parts are there and undamaged.
- Clean the inside and outside of the appliance with a damp cloth or sponge. Wipe dry with a soft dry cloth.
- **WARNING!** Do not immerse the appliance in water or any other liquid to clean.

HOW TO USE YOUR MINI DIPPING POT

- Place the appliance on a flat, heat resistant stable surface and ensure a minimum of 10cm free space around the appliance. Do not operate your appliance inside a cabinet or directly under a wall cabinet.
- Plug the appliance into an electrical power outlet, the power indicator lights up, the appliance starts heating.
- Note: Make sure the voltage indicated on the appliance matches the local voltage before connecting the appliance to mains power. Rated voltage: 220-240V~ 50-60Hz.

WARNING! DO NOT touch the removable pot, it is extremely hot!

Always wear oven mitts or use a potholder while using the pot to prevent burns.

- Allow appliance to preheat for about 5 minutes.
- Add chocolate sauce or chocolate bar to the pot. You may place up to 570g of chocolate sauce or 400g chocolate bar in your pot.

- Stir sauce regularly with a wooden spoon or heat resistant spatula.
- When the sauce is ready to serve, use your dipping forks to dip your snacks. BE CAREFUL as sauce will be hot.

NOTE: Different recipes and food will have different cook times.

If melted chocolate is too thick, remove some of the melted mixture as there may be too much in the pot.

Do not add water to chocolate. If you prefer a smoother consistency, add 1 tablespoon of vegetable oil.

- Unplug the appliance and allow to cool after use.
- Once the appliance is cool, empty any remaining sauce into a bag or trash receptacle. Follow the directions in the Cleaning & Maintenance section to clean your appliance.

CLEANING AND MAINTENANCE

This appliance should be cleaned after each use.

CAUTION: Do not immerse the main unit in water or any other liquid or in a dishwasher!

- Always unplug the appliance from the mains power supply before cleaning or during maintenance.
- Ensure that the appliance has completely cooled down before cleaning, as it gets very hot during use.
- Clean the inside and outside of the main unit with a damp cloth or sponge. Wipe dry with a soft dry cloth.
- Wash the removable pot, lid and forks in warm, soapy water, then rinse and dry thoroughly. Use caution when handling the forks as the tips are very sharp.

STORAGE

1. Unplug the mini dipping pot from mains power.
2. Allow the appliance to cool down completely.
3. Clean and dry the appliance.

WARNING! Do not wrap the power cord around the appliance.

4. Store the appliance in a clean dry location and out of the reach of children.

TECHNICAL SPECIFICATIONS

Voltage: 220-240V~ 50-60Hz

Power: 70W

MAX capacity: 570g chocolate sauce

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us