


K: 43446186 T: 70061734

# anko

## PROJECTION STAR TREE TOPPER

K: 43446186 T: 70061734

Model number: BOTT0001F-SPA

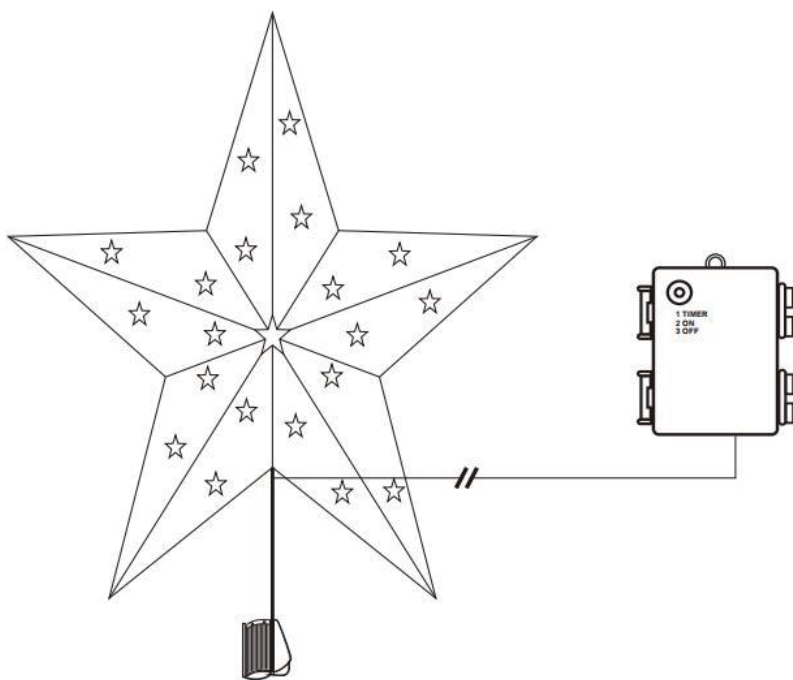

### Installation and usage instructions:

1. Carefully remove all parts from the box and remove them from the package before assembling.
2. Make sure you don't cut any wires.
3. Require 4 x 1.5V AA batteries (not included).
4. Insert the batteries by following the polarity marking on the battery compartment.
5. When you 1<sup>st</sup> press the button on the battery box of lights, will default to the timing mode of 6 hours lights ON 18 hours lights OFF, repeat every 24 hours.
6. When you 2<sup>nd</sup> press the button on the battery box of lights, will enter no timing model, the lights will be ON all day until the battery runs dead.

### Care instruction

REQUIRES 4 X 1.5V AA BATTERIES NOT INCLUDED.

BATTERY INSTALLATION BY AN ADULT IS REQUIRED.

NEVER MIX DIFFERENT TYPES OR OLD AND NEW BATTERIES

DO NOT SHORT CIRCUIT SUPPLY TERMINALS OR DISPOSE OF BATTERIES IN FIRE

REMOVE BATTERIES DURING LONG PERIOD OF NONUSE

NON- REPLACEABLE LED

FOR DECORATION ONLY. THIS IS NOT A TOY. KEEP AWAY FROM CHILDREN AND PETS