

INSTALLATION

(EN) Warning! Unsuitable for children under 3 years. Misuse of transformer can cause electrical shock. The USB cable and power supply used with the toy is to be regularly examined for damage to the cord, plug, and other parts, and in the event of such damage, they must not be used until the damage has been repaired. Under the environment with electrostatic discharge this device may malfunction. If this happens, you will need to reset the device by turning it off/on again. This product is not to be directly connected to the mains supply. This item can be used with a compatible mains powered transformer. This must be a short-circuit proof safety isolating transformer according to IEC 61558-2-16 or a toys transformer according to IEC 61558-2-7. The transformer is not a toy. Max rated output: 5V DC. The light can be powered by batteries or by USB-C. When the USB-C cable is connected to the base the batteries will be bypassed. LEDs are not replaceable. The crossed out wheelee-bin symbol on this product is to remind you that waste electrical and electronic products, batteries and accumulators should not be disposed of with household waste. If you are unable to re-use or recycle your article it should be disposed of at a civic amenity site/local authority recycling facilities. Use 3 x 1.5 V type AAA batteries. Take care to fit batteries observing the plus & minus markings. Replace all used batteries at the same time. Do not mix used and new batteries, rechargeable, different types (alkaline or carbon zinc), or different brands of batteries. Only use batteries of the same type. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are to be removed from the product before being charged. Rechargeable batteries are only to be charged under adult supervision. The supply terminals are not to be short-circuited. Exhausted batteries are to be removed immediately. To insert / replace batteries: Unscrew battery cover and insert batteries, observing polarity guide. Ensure battery cover is securely screwed in place before use. Packaging (and instructions if included) must be kept since they contain important information.

Wall mount instructions:

CAUTION! Check that the wall/mounting surface is suitable for this type of installation before commencing. Unfamiliarity with the tools and processes can be dangerous. If you are uncomfortable or inexperienced working on these instructions, then consult a professional. The following tools will be required for wall mounting: - Pencil - Tape Measure - Electric Drill - Spirit Level - 2 Wall Mounting Screws & 2 Fixings (please consult your local hardware store for advice on which type is required). Select a suitable location for hanging. Ensure the power cable can reach the power supply. Hold it against the wall and draw a faint outline with a pencil. On the back measure from the top & bottom edges to the centre of the wall mount fixtures. Transfer these measurements onto the wall and mark where the holes need to be drilled. Use a spirit level to check the holes are level. Drill two holes using a suitable size and type of drill bit. Install the suitable wall fixings into the holes and screw in your mounting screws. Mount onto the wall by matching the screws with the wall mount fixtures. Use the spirit level again to check the item is level.

The toy is only to be connected to equipment of Class II marked on the equipment with:




Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

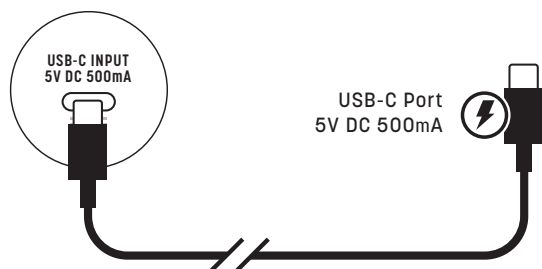

FUNCTIONS

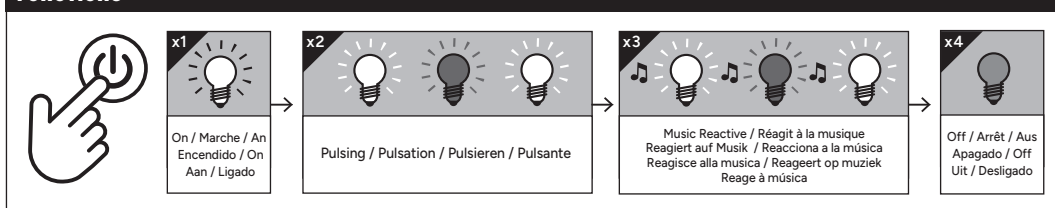

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567



USB-C INPUT
5V DC 500mA

K: 43-449-460
T: 69-961-540 24/24

DESIGNED IN THE UK.
PALADONE[®]

TEL: +44 (0)1273 230037

WORKING TITLE: DUAL POWERED LIGHT W/ WALL MOUNT

DATE OF CREATION: 05/24

THIS IMAGE REMAINS THE INTELLECTUAL COPYRIGHT OF PALADONE PRODUCTS LTD 2022

PANTONE REFERENCES / FINISHES:



BLACK

CUTTERGUIDE INFORMATION:

INDICATES CUT

CUTTERGUIDE INFORMATION:

148MM (W) X 210MM (H)