


anko

Mini LED Cooler User Manual

Read and Save These Instructions

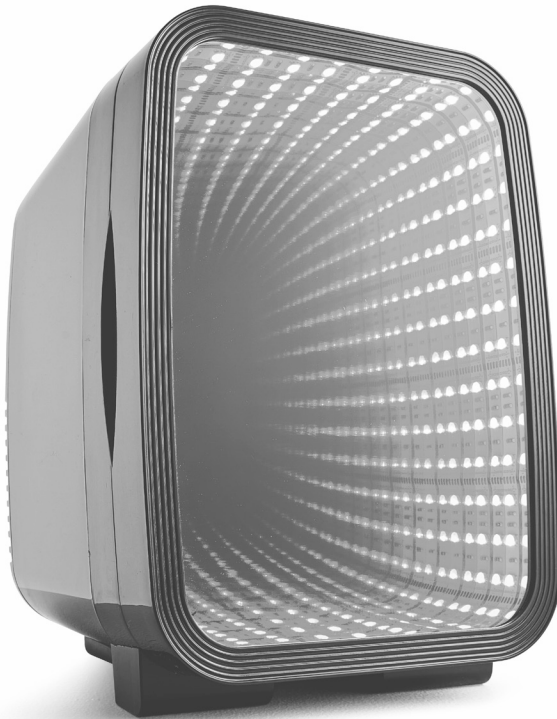


Model No.: MFA-5L-O
Rev 1

1	Safety Instructions	4
2	Features	6
3	Components	6
4	Preparation	7
5	Operation.....	7
5.1	ON / OFF.....	7
6	Usage	8
7	Infinity Lights - Mirror	9
8	Carry Handle.....	9
9	Care and Cleaning.....	9
10	Storage.....	10
11	Troubleshooting	10
12	Warranty Against Defect	11

1 Safety Instructions

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Carefully read this instruction manual before using the appliance. 
- Keep this appliance out of reach of young children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Ensure children and babies do not play with plastic bags or any packaging materials.
- Do Not disassemble the appliance. There are no user-serviceable parts inside.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices, and other working environments
 - farmhouses and by clients in hotels, motels, and other residential type environments
 - bed and breakfast type environments
 - catering and similar non-retail applications
- **WARNING:** When positioning the appliance, ensure the supply cord is not trapped or damaged.
- **WARNING:** Do not locate multiple portable socket outlets or portable power supplies at the rear of the appliance
- **VERY IMPORTANT:** Ensure that the appliance does not get wet (water splashes etc.). Do not use the appliance with wet hands.
- Do not immerse the appliance in water or other liquids or use near sinks, baths, or showers.
- Always operate the appliance from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
- Position the power supply lead properly so that they will not be walked on or pinched by items placed on or against them.
- Use the appliance only for its intended use. The appliance is intended for household use only and not for commercial or industrial use.
- Do not use the appliance if it has been dropped or any part of the appliance (including cord or plug) has been damaged. For electrical safety, any repairs to the product must be performed by a qualified electrical person only.

- If the supply cord is damaged, it must be replaced to avoid a hazard.
- Use only accessories supplied with the product. The use of accessories not intended for use with this appliance may cause injuries to the user or damage to the appliance.
- Do not install the unit on other appliances, on uneven surfaces or where it could be subject to heat sources (e.g., radiators or stoves), direct sunlight, excessive dust, or mechanical vibrations.
- Appliance should not be used outdoors, placed near a hot gas or electrical burner, or placed in a heated oven.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- Do not operate the appliance underneath or near flammable or combustible materials (e.g., curtains). Keep at least 300mm clearance around the sides, back, front, and top.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Do not block any ventilation openings.
- Unplug the appliance before cleaning.
- Any repairs to the product must be carried out by a qualified electrical person only or the product must be disposed of. There are no user-serviceable parts in this appliance.
- If a third party uses this appliance, please supply the instruction manual with it.
- Do not misuse the cord. Never carry the appliance by the cord or pull it to disconnect it from the outlet. Instead, grasp the plug and pull to disconnect.
- Do not insert or allow foreign objects to enter the grille openings as this may cause damage to the appliance and/or injury to the user.
- Be sure the unit is placed on a stable surface when operating.
- Turn off and unplug the unit before moving. Move the unit slowly and carefully.
- Turn off, unplug, and empty the water from the unit if you are not going to use it for a long time.
- No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling of the appliance.

Additional Safety Instructions

If using an extension cord:


- The technical specifications of the extension cord must match or exceed the technical specifications of this appliance.
- Do not allow the cord to hang over the edge of the work surface or to come into contact with stoves or other hot surfaces.
- If the cord or plugs are worn or damaged, do not use.
- Unplug from the power socket by grasping the plug body - Do Not pull on the cord.

Read and Save These Instructions

2 Features

- Cooling created by Thermo-electric Peltier module (no compressor).
- 220 – 240V~ operation.
- Easy operation.
- Near silent operation.
- Compact size.
- Removable Inner Shelf


3 Components

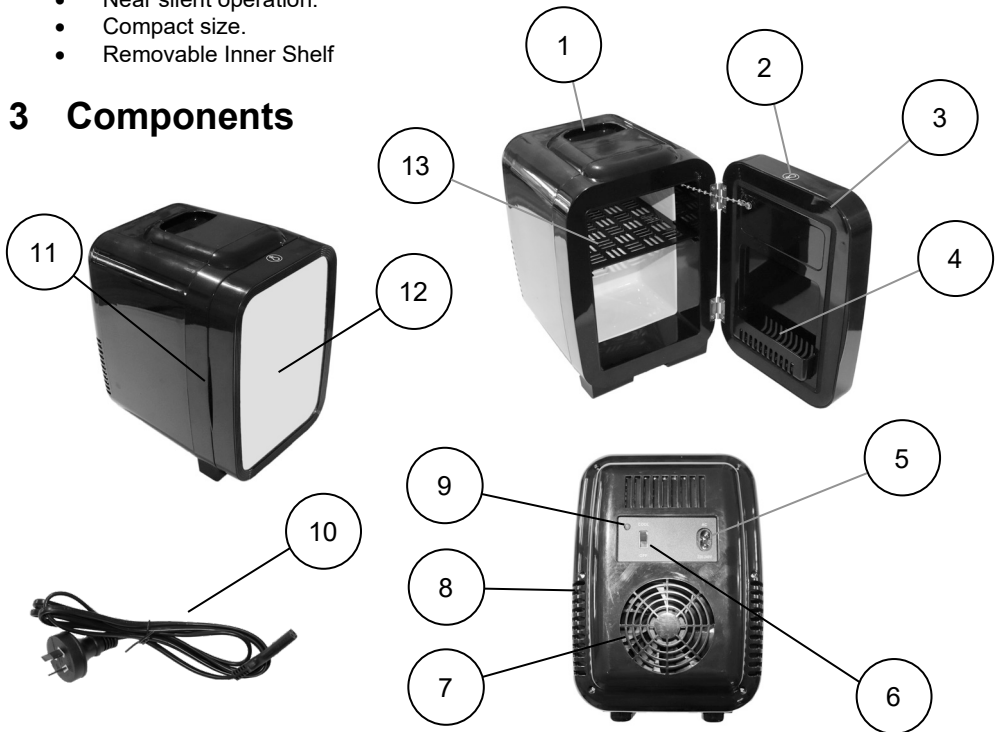

1	Carry Handle	8	Side Air Vents
2	Light Control Touch Button	9	Power On Indicator Light
3	Door Seal	10	Mains Power Cord
4	Inner Door Pocket (Max. Storage Weight: 150g)	11	Door Handle
5	Mains Power Inlet Socket	12	Mirror Front – Infinity Lights
6	On / Off Switch	13	Shelf - Removable
7	Cooling Fan Grille		

4 Preparation

- Before using the appliance, please set it up as follows:
- Fully unravel the power supply cord.
- Plug the small plug into the back of the appliance and push in hard as shown.

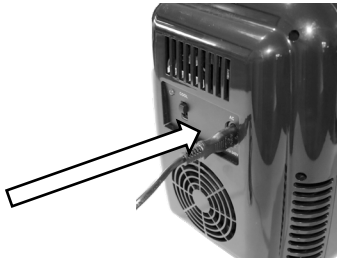

5 Operation

Important: Refer to the Section “Safety Instructions” before use.

- Insert the Power Cord Plug into the Power Point and switch it on.

5.1 ON / OFF

- Located at the back of the appliance is the On / Off switch.
- With the Switch in the Off position the appliance will not Cool.



- Slide the Switch to the “COOL” position and the Green Light will illuminate indicating the appliance is Cooling.

NOTE: The Infinity Lights will operate regardless of the position of the Cooling Switch.

6 Usage

Although this product can be used to cool a variety of products, its primary function is for cooling up to six standard size drink cans.

To insert the cans, first remove the shelf from inside by grasping with your thumb and fingers and pull straight out.



Note: Maximum Storage Weight for the door pocket is: 150g

Note: the shelf can be used if cooling alternative items other than drink cans.

To fit the six cans inside, you can either place the first four cans in the cooler standing up, and then place the remaining two cans on top of the four cans lying on their sides as shown or lay all six cans down as shown.



Note: For quick cooling of the cans, if possible, it is advised to cool the cans in your normal home refrigerator first for a few hours and then transfer them to the Can Cooler.

7 Infinity Lights - Mirror

When first plugged in and switched on, the Mirror in the front of the door will light up to show coloured LED lights which seem to disappear into infinity.

Note: After first plugging in and switching on, wait approximately 3 - 5 seconds for the lights to turn on.

The default mode when first plugged in and switched on will cycle through all colours.

If you wish to manually cycle through the colours and to stop on one colour, touch the “light” icon located on the top of the door frame.



The light will change to Red.

Touch the “light” icon again and it will cycle to the next colour Dark Blue and so on.

Each touch of the “light” icon will change the light as follows:

Red, Dark Blue, Dark Green, Light Green, Light Blue, Purple, Auto Cycle all colours.

To turn the light off, touch and hold the “light” icon, located on the top of the door frame, for approximately 2 seconds and release when the light turns off.

Touch the “light” icon again to turn the light back on in manual mode and then cycle through to your desired colour or to auto change colour mode.

8 Carry Handle

There is a moulded carry handle in the top of the cooler.

IMPORTANT: Never carry the product by the power cord.

9 Care and Cleaning

- Turn off and unplug the unit from the power source before cleaning.

IMPORTANT: Never spray with liquids or submerge the unit in water or any other liquid.

Do Not use flammable liquids, chemicals, abrasive creams, steel wool or scouring pads for cleaning.

- Wipe the unit over with a damp (not wet) cloth with fresh clean lukewarm water and mild detergent.
- Wipe over again to remove any detergent residue and thoroughly dry before reusing.
- Do not let the switch or power inlet sockets in the back get wet or splashed. Ensure the power inlet sockets are perfectly dry before inserting the power supply plug.
- If the rear vent holes are dusty, you can use a vacuum cleaner with a “non-rotating” brush attachment to gently vacuum the dust away.

Important: **Do Not** poke any objects into the vent holes.

10 Storage

- Switch off and unplug the appliance from the power supply and from the back of the unit.
- Coil the power supply cord loosely and place it inside the appliance.
- Ensure the inside of the cooler is dry then store away in a dry well-ventilated area.

11 Troubleshooting

Unit will Not Switch On	Check that the power cord is fully inserted into the back of the cooler.
	Check that there is power being supplied from the supply source (i.e. power point)
	Check that the selector switch on the back has been set to COOL.
Indicator Light is on but not Cooling	<p>The unit will take 1 to 2 hours to Cool to the required temperature depending on the ambient room temperature and the items placed inside.</p> <p>If the items placed inside are warm, it will take longer to cool.</p>

12 Warranty Against Defect

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre, 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd. C/- Customer Service Centre, 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

IMPORTANT! For all technical queries or difficulties in operating the product and for spare parts, contact H.E. Group customer service 1300 105 888 (Australia) and 09 8870 447 (New Zealand).

