

正面, 风琴3折, 成品315*142mm

anko

Instruction Manual
3 in 1 Keyboard Set
K:43-455-287 | T:70-035-940
Model No.:43351282



Safety Instruction:

- Please read the instruction manual before using this device and follow all the safety instructions to avoid damage caused by improper use.
- Keep the instruction manual for future reference. Should this device be given to a third party, then this instruction manual must also be handed over.
 - Use this device solely for its intended purpose.
 - For indoor use only.
 - Keep the appliance away from all hot surfaces and naked flames.
 - Always put the appliance on a level, stable, clean, dry surface. Protect the appliance from extreme heat and cold, dust, direct sunlight, humidity and drops or jets of water.
 - Do not immerse the appliance in water or in other liquids.
 - Do not open the housing under any circumstances.
 - Do not introduce any objects into the interior of the housing.

Features:

2.4GHz wireless technology
 Working distance up to 10 m (without any obstructions)
 Compatible with Windows XP/ Win 7/8/10.


Multimedia Hotkeys Functions:

FN+F1	Media	FN+F2	Volume Down
FN+F3	Volume Up	FN+F4	Mute
FN+F5	Previous Track	FN+F6	Next Track
FN+F7	Play/Pause	FN+F8	Stop
FN+F9	Homepage	FN+F10	Mailbox
FN+F11	My computer	FN+F12	Favourite

Some hotkeys function may not work because of the different devices system or application compatibility.

2

Product overview:

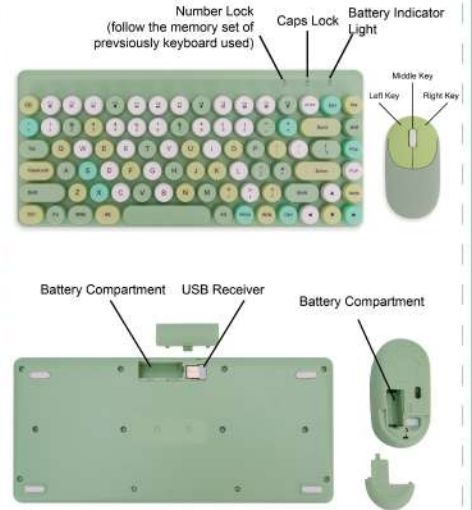

3

反面, 风琴3折, 成品315*142mm

User guide:

1. Remove the battery compartment cover of keyboard and insert 1x 1.5V AA battery. Please pay attention to the polarity diagram printed inside the battery compartment of keyboard. This wireless combo used one USB receiver, remove the USB receiver from its compartment inside the keyboard.
2. Remove the battery compartment cover of mouse and insert 1x 1.5V AA battery. Please pay attention to the polarity diagram printed inside the battery compartment of mouse. Caution! Danger of explosion if the batteries are incorrectly replaced. When the battery indicator light flicker, please change the battery in time.
3. Replace the battery compartment cover again, making sure it is closed firmly.
4. Plug the USB receiver into a free USB port on the computer.
5. Mouse and keyboard will connect automatically and can be used immediately.

Notes on batteries:

Only use top-quality batteries. Cheap batteries could leak and damage the device as a result. If the batteries leak, remove them with a cloth and dispose of them accordingly. Ensure that leaking battery acid does not come into contact with skin and eyes. If you do get battery acid in your eyes, flush them thoroughly with lots of water and consult a physician immediately! If battery acid comes into contact with your skin, wash the affected area with lots of water and soap.

If the device is not to be used for an extended period of time, then the batteries should be removed, as the device could become damaged should they leak. If the device functions weaken, replace all batteries.

Batteries do not belong in household waste! Expired batteries must be disposed of in an environmentally friendly way and according to the applicable legal regulations.

Batteries are very dangerous if swallowed. Please keep the batteries and the device components away from children at all times. If a battery is swallowed, seek medical attention immediately.

Batteries must not be recharged or activated with other means, dismantled, thrown into fire or short-circuited.

Remove the batteries prior to disposing of the device.

4

Keyboard connect:

"ESC"+"Q":

When the keyboard does not match the receiver, please insert the keyboard battery first, then press "ESC" and "Q" key at the same time, until the up right corner battery indicator light turns on.

Plug the USB receiver into the computer.

The keyboard will successfully connect to the computer if the indicator light turns off.

Mouse connect:

If the mouse no response, you can recode by following below step:

Press the left and middle keys at the same time and do not let go, then install battery to the mouse, finally plug USB receiver into the computer, at this stage you can loose the left and middle key and the mouse start to work.

Please note this step is only for the keyboard and mouse which is not match the receiver successfully. Generally plug the receiver to the computer, the keyboard and mouse can directly connect to the computer.

And this step can not be used in other brands of receiver and keyboard&mouse.

5