

POP UP PRIVACY TENT USER INSTRUCTIONS

Keycode: 43456321

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USE AND RETAIN THEM IN A SAFE PLACE FOR FUTURE REFERENCE.

ADULT ASSEMBLY REQUIRED.

WARNING

- Never set up or continue to use in any rain, wind or stormy conditions, especially lightning storms.
- Avoid bending the frame or pinching your fingers or hands while opening or closing the frame.
- Avoid setting up your tent on steep inclines.
- Always keep the tent away from heat and flames.
- Never leave your tent unattended.
- Never fold or store your tent when it is wet or damp. Please ensure the tent is completely dry completely avoid mildew.
- Never use the tent if it is damaged.

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.


ATTENTION: To avoid any damage, remove the tent during bad weather, e.g., during high winds or heavy rains.

Assembly Instructions

Follow these instructions carefully to avoid pinching your hands or fingers in any of the moving parts as the frame opens and closes.

Warning: Take care when opening as tent is under tension when packed and may spring open suddenly.

Unfold:

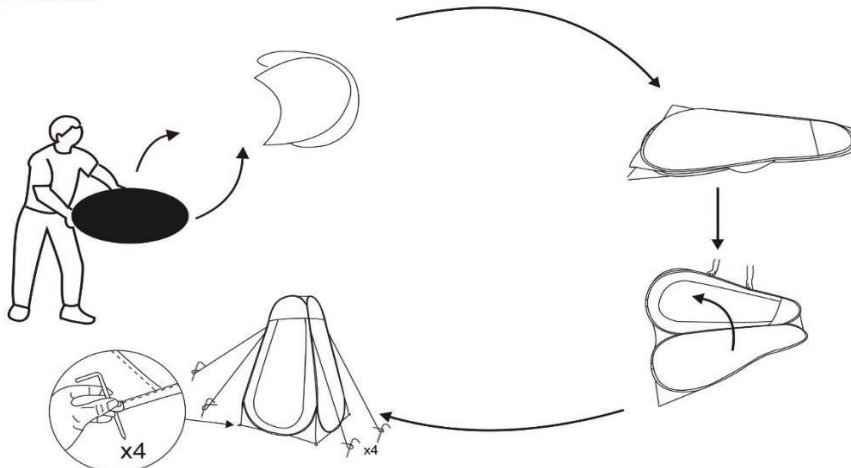


CAUTION: BE CAREFUL NOT TO PINCH FINGERS. DO NOT PUSH HARD.

Disassembly Instructions

Attempting to erect this tent in windy conditions may be hazardous and could result in injury and or damage to the product.

Fold:

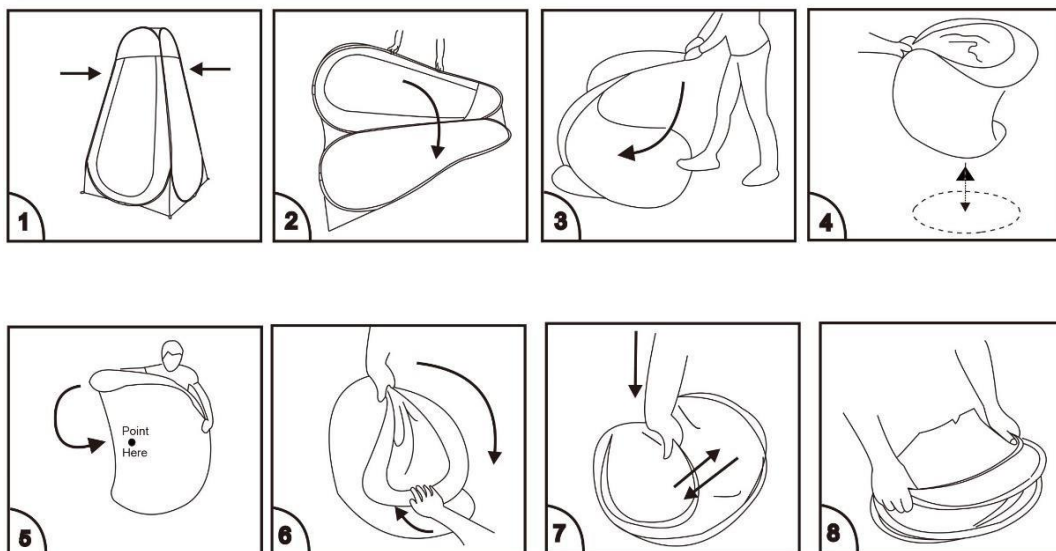

If the picture is not clear or assisting for folding, please kindly check below product how to fold video through scanning the QR code.



Care Instructions

- Wipe clean with a damp cloth.
- Do not use abrasive material and solvents.
- Do not store tents without drying it off thoroughly and brushing off caked dirt. Store in a cool, dry place.

MADE IN CHINA