

12 MONTH WARRANTY

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

anko

Portable USB Stick Blender 43005A User Manual



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE
REFERENCE**

IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE.

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. Do not allow children to use the appliance without supervision.
4. Do not operate the appliance if it is damaged.
5. The appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, office and other working environments, farmhouses,
 - by clients in hotels, motels and other residential type environments,
 - bed and breakfast type environments.
6. Do not operate the appliance for other than its intended use.
7. **WARNING! It must only be supplied at safety extra low voltage corresponding to the marking on the appliance.**
8. Do not put the appliance include USB cable in water or other liquid. For the details of cleaning, see "Care and Cleaning" section.
9. This appliance contains batteries that are non-replaceable.
10. Never remove parts from the appliance such as screws.
11. Do not use harsh detergents or abrasives materials to clean any of the parts/housing.
12. Keep the appliance and its cord out of reach of children.
13. Do not place the appliance in microwave oven or refrigerator.
14. Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning.
15. Strictly prohibit disassembling the product shell to replace the lithium battery privately.
16. Keep the appliance and its cord out of reach of children.
17. **WARNING! Misuse may cause injury.**
18. **WARNING! Do not immerse the motor base in any water or any liquid.**
19. **WARNING! Never blend mixture that are hot or contains ice.**

CARE AND CLEANING

WARNING! Electrical shock Hazard.

Disconnect power before cleaning. Do not immerse USB cable or motor housing in any liquid.

1. Unplug USB cable from the unit. Make sure LED indicator is off.
2. Remove any excess food from the stick blender and disassemble the unit. Wipe off the motor housing with a slightly damp cloth, and carefully wash the blending shaft in warm soapy water. Then wait until all parts are dry.

WARNING! Blades are sharp!

WARNING! Do not immerse the main unit in water or any other liquids to clean.

3. Clean exterior of motor base with a soft damp cloth and dry.

TECHNICAL DATA

Model: 43005A

Input: 5V  1A

Rated Input Power: 100W

Battery capacity: 1500mAh

DISPOSAL AND RECYCLING



This product must not be disposed together with normal household waste.

This product must be disposed at an authorised place for recycling of electrical and electronic appliances. By collecting and recycling waste you help save natural resources, and make sure the product is

disposed in an environmentally friendly and healthy way.

- The battery must be removed from the appliance before it is scrapped.
- Ensure the appliance is disconnected from mains power before removing the Battery.
- The battery is to be disposed/recycled safely.

WARNING! Never blend mixture that are hot or contains ice.

WARNING! Never lean it against sides.

2. Connect the blending shaft to the motor housing. Twist the blending shaft until the locked icon is aligned with the arrow on the motor housing.

3. Lower blending shaft into the mixture to be blended, single press power switch button, the appliance will switch to standby mode and light is in white colour. Then press a speed button within 3 seconds to start processing.


NOTE:

1) To stop blending, release the speed button.

2) The blender will stop automatically after running 60 seconds continuously to avoid overheating the motor.

WARNING! If a piece of food becomes lodged in the blade or the guard surrounding the blade, turn off the blender immediately, detach the blending shaft. Then use a spatula or a similar utensil to carefully remove the food. Avoid using your fingers. After the lodged food has been removed, reattach shaft, plug blender back in and continue blending.

4. During use, if the bottom LED indicator is blinking 5 times, it means that current battery is low, and the appliance needs to be charged as soon as possible to avoid stopping during use.

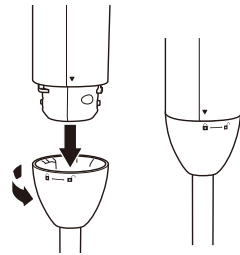


20. The max operating time per cycle for all speed is 60 seconds. See section “USING YOUR STICK BLENDER”.

21. After operated for 1 cycle, allow the appliance to rest for at least 3 minutes before using it again. After 5 cycles of operation, allow the appliance to cool down for approx. 30 minutes before using it again.

22. Switch off the appliance and disconnect from supply before approaching parts that move in use.

23. Be careful when handling the sharp cutting blades, emptying the bowl and during cleaning.

24. The appliance must only be supplied by safety certified SELV power supply with output 5V  1A.

25. For charging, please refer to “CHARGING YOUR STICK BLENDER”.

TROUBLESHOOTING AND SOLUTION

1. During the mixing process, if the unit stops working abnormally, please check if the blending shaft is loose and stuck.

2. When the three white indicator lights blink for 5 times during working process, and then shut down, this indicates that there is a blockage. Please turn off the power switch and check whether the food is too large that may be causing the jam.


3. When the battery is sufficiently charged, and the product does not work after starting, it is most likely due to a hardware fault. Please stop using the product.

4. Overheating protection starts while the unit is overheating. The motor stops operating, and the top LED indicator light continues to flash. Please stop using the unit and allow the appliance to cool down at least for half an hour before using it again.

5. If the unit is making an abnormal noise, bad smell or smoke, stop using the blender, and have the unit checked by qualified electrical person.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

KNOW YOUR PRODUCT

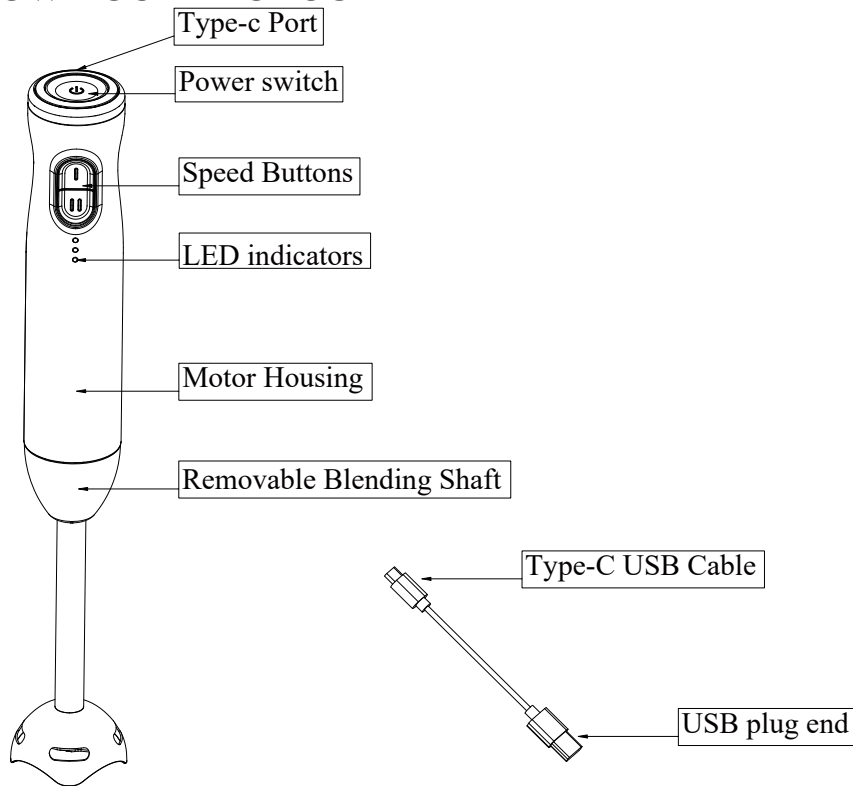

BEFORE FIRST USE

1. Unpack the appliance and all attachments carefully. We suggest you keep the original packaging carton and materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the appliance when it is not in use. In the event that the carton is to be disposed of, please recycle all packaging materials where possible.
2. Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.
3. Ensure you have all parts and accessories and inspect all parts of the appliance for visual damage. Unwind the USB cable to its full length and inspect the cable for damage. Do not use the appliance if the appliance or the USB cable has been damaged or is not working properly.
4. Read this manual to familiarize yourself with the parts and operating principles of the USB stick blender. Pay particular attention to the safety instructions in this manual.

5. To remove dust from transport and storage, wipe off the motor housing with a slightly damp cloth, and carefully wash the blending shaft in warm soapy water. Then wait until all parts are dry.

WARNING! Blades are sharp! Handle with care.

6. Do not use harsh detergents or abrasives materials to clean any of the parts/housing.
7. Please make sure the appliance is fully charged before use.


CHARGING YOUR STICK BLENDER

1. We recommend fully charging the stick blender before first use. Remove charging port cover and insert base plug into charging port. Plug USB plug end into a USB plug adapter and then plug into a power outlet.
2. During the charging process, the LED indicators will show the current level of charge; when the bottom indicator blinks, the battery is 0-1/3 full, when the bottom indicator illuminates steadily and the middle indicator blinks, the battery is 1/3-2/3 full; and when the bottom and middle two indicators illuminate steadily and the top indicator blinks, the battery is 2/3 to completely full. When the battery is fully charged, all the indicators will illuminate without blinking.
3. **A charger with 5Vd.c. 1A rated output will take maximum 4 hours to fully charge the appliance.**
4. Only use the USB Cable provided with stick blender.

USING YOUR STICK BLENDER

1. Place ingredients and liquid to be processed in a sufficiently deep mixing bowl or saucepan to prevent splatter. DO NOT process Max over 500g food. (Quantity should be changed according to different food. 500g is an example of mixture with 200g carrots and 300mL water.)

TIPS:

 : Unlock the stick blender by clicking the power button once, and the LED indicators will light up in white colour for 3 seconds. Press the speed button within 3 seconds, the indicator light will turn on, indicating that the unit is in operation. If the speed button has no operation within 3 seconds, or during operation the speed button is released over 3 second, the stick blender will automatically enter power off mode.

- 1) Avoid having fruit pits, bones or other hard foods in the blending mixture as these can damage the blade.
- 2) Please be careful not to over-process. If larger pieces are desired, process in several small batches.
- 3) If food is not chopped into even sized pieces, remove some of it from the bowl and process smaller quantities at a time.