# **Assembly Instructions**

K: 43-465-965 | T: 70-171-747 4 MESH DRAWER UNIT

#### **WARNING:**


While assembling part ⑤ and ⑥ and using a mallet, plastic chips may be released, this is normal and should not be of concern.


Place either cardboard or a blanket on the floor so that both the floor and the drawer unit will be protected during assembly.


MAXIMUM SAFE LOAD: 10KG FOR TOP PANEL, 5KG FOR EACH DRAWER.


**Hardware list** 


	А	Screw	8 PCS		D	Stopper	4 PCS	
	В	Nut	8 PCS		Е	Wall Plug	2 PCS	•
	С	Screw	6 PCS	O PUD	F	Wall Plug	2 PCS	
1	1PC	2	1PC		4PCS	4	1PC	
5			2PCS	6			2PCS	

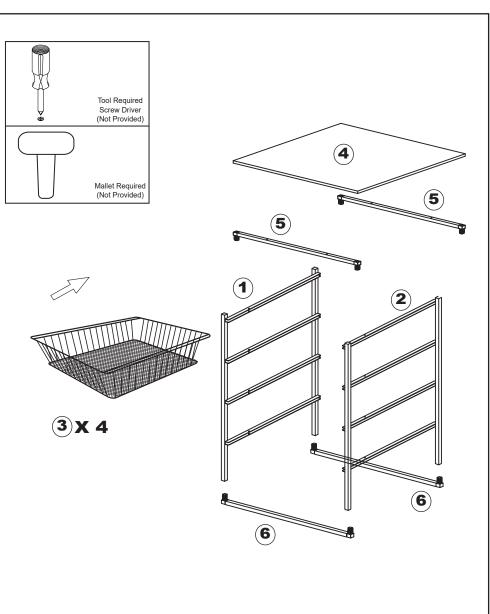

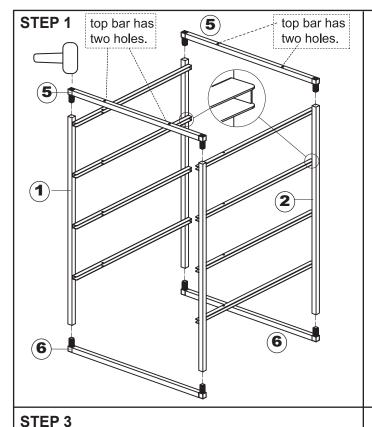

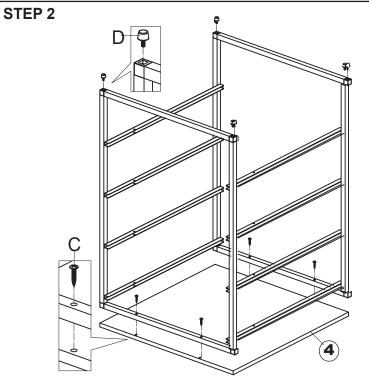

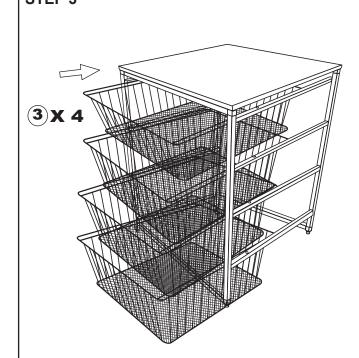

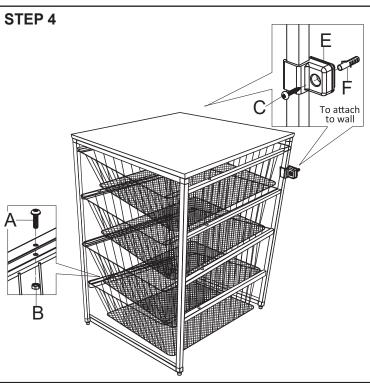

### Warning:

- It is strongly recommended that this product is permanently fixed to the wall.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors.
- Do not place unanchored televisions on furniture. Caution:

for your safety when attaching the anchor fixings, please note the following:

• Check any electrical wires or plumbing inside the wall before drilling any holes.(if you are unsure please seek professional advice from a qualified tradesperson).



WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.



## **▲** WARNING





#### Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- · Place heavy items down low.



This is a permanent label. Do not remove!