




Interactive Doll

INSTRUCTIONS

K: 43467839 | T: 70384598

HOW TO USE:

- 1) Turn the ON/OFF switch on the battery case to the "ON" position.
- 2) Wave hand in front of doll to activate.
- 3) **Daisy** - blows kisses
Lily - sucks on dummy
- 4) Wave hand in front of doll again to re-activate after she stops.
- 5) Please switch back to "OFF" position if you do not want to continue playing.

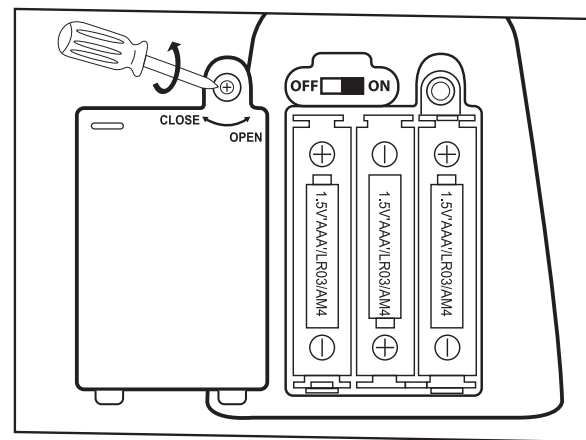

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY. DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.
CAUTION: BATTERY INSTALLATION BY AN ADULT IS REQUIRED.

WARNING: DISPOSE OF USED BATTERIES IMMEDIATELY. KEEP NEW AND USED BATTERIES AWAY FROM CHILDREN. IF YOU THINK BATTERIES MIGHT HAVE BEEN SWALLOWED OR PLACED INSIDE ANY PART OF THE BODY, SEEK IMMEDIATE MEDICAL ATTENTION.

BATTERY INSTALLATION:

- 1) Locate the battery compartment at back of the doll.
 - 2) Have an adult use a small Phillips® screwdriver to remove the battery compartment top.
 - 3) Insert 3 x 1.5V AAA size batteries following polarity markings.
- We recommend using alkaline batteries.

CLEANING THE DOLL:

- 1) Surface wash only, wipe with a damp cloth.
- 2) Do not put the doll in a washing machine.

Please keep these instructions for future reference as they contain important information.

CAUTION: All ties or fasteners are not part of this toy and should be removed before giving it to your child.
Colour and product may vary from photo.

2+Years

