

KITCHEN TIDY

Keycode: 43472208

**Please read completely before setting
up your kitchen tidy.**

Please read and understand these instructions before attempting to set up your kitchen tidy. Follow all safety precautions, care and maintenance tips listed below when using your Kitchen Tidy.

Warning!

1. Never set up or continue to use in any rain, wind or storm conditions, especially lightning storms.
2. Avoid bending the frame or pinching your fingers or hands while opening or closing the frame.
3. Avoid setting up your Kitchen Tidy on steep inclines.
4. Ensure legs and frame is fully extended and cover secure.
5. Always keep the kitchen tidy away from heat and flames.
6. Wipes clean with a damp cloth. Do not use abrasive materials or solvents.
7. Never fold or store your kitchen tidy when it is wet or damp. Let it dry completely to avoid mildew.

Loading capacity: 10kg

Packing list:

Fabric cover x1 pc

Aluminum frame x1 pc

Poles x 2 pc

Connector x4 pc

Small hooks x8 pc


Big hooks x4 pc

Carry bag x1 pc

Assembly Instructions

Follow these instructions carefully to avoid pinching your hands or fingers in any of the moving parts as the frame opens and closes.

Step 1. Following the strip and extend the aluminum frame. Please promise the frame has been fully extended.

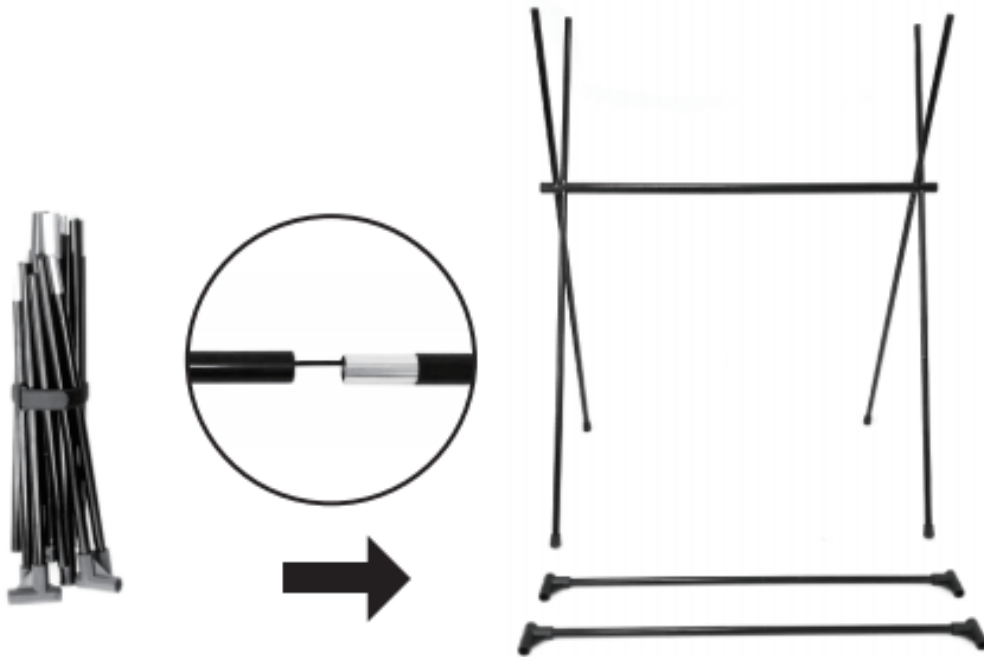


Step 2. Take two pc separated pole into the cover.



Step 3. Assembled the cover on the aluminum frame and hang the strap on the frame.



Step 4. 8pcs small hooks need to be assembled on the top of frame and 4pcs for each side to secure the fabric cover with frame. 4pcs big hook need to be assembled at the bottom of pole. 12pcs hooks in total can hang your pots and pans. Please kindly note that the loading weight is 10kg totally.

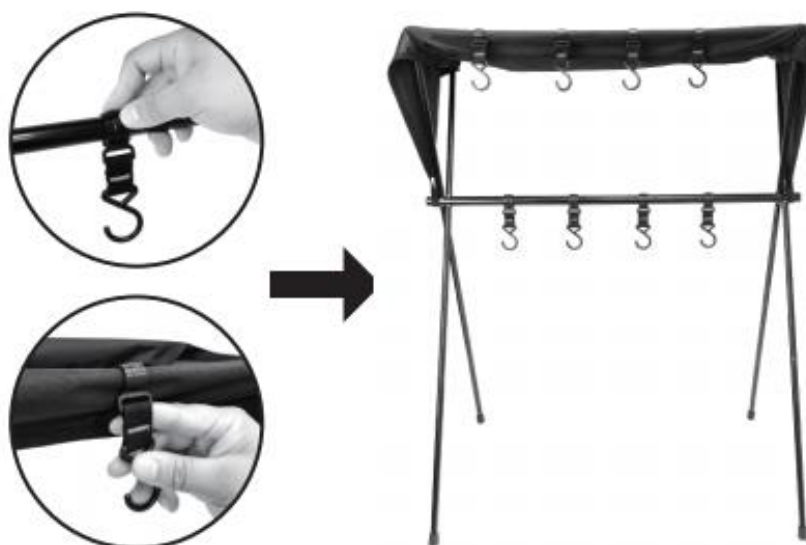

CAUTION: BE CAREFUL NOT TO PINCH FINGERS. DO NOT PUSH HARD.

Final having made sure the kitchen tidy is completely dry return your fold up kitchen tidy to its storage bag.

MADE IN CHINA