

Wooden Music Table


Assembly Instruction

K:43-473-410 | T:70-392-043

HARDWARE

J  x4

K  x1

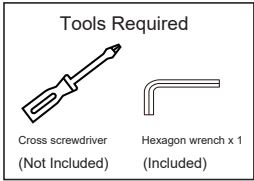

CAUTION: ADULT ASSEMBLY AND SUPERVISION REQUIRED.

WARNING: UNASSEMBLED PARTS CONTAIN SCREWS WITH FUNCTIONAL SHARP POINTS. PLEASE KEEP UNASSEMBLED PARTS AWAY FROM SMALL CHILDREN.

CAUTION: PLEASE CHECK CONDITION OF ITEM REGULARLY, AS SCREWS MAY LOOSEN WITH USE OVER TIME. TIGHTEN SCREW FITTINGS IF NECESSARY. STOP USING THIS PRODUCT IF THERE IS ANY LOOSE OR MISSING FASTENERS, JOINTS OR BROKEN PARTS.


WARNING: DO NOT SIT AND STAND INSIDE OR ON TOP OF PRODUCT.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAG, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

MADE IN CHINA


Read and follow instructions carefully and keep for future reference.

PARTS LIST

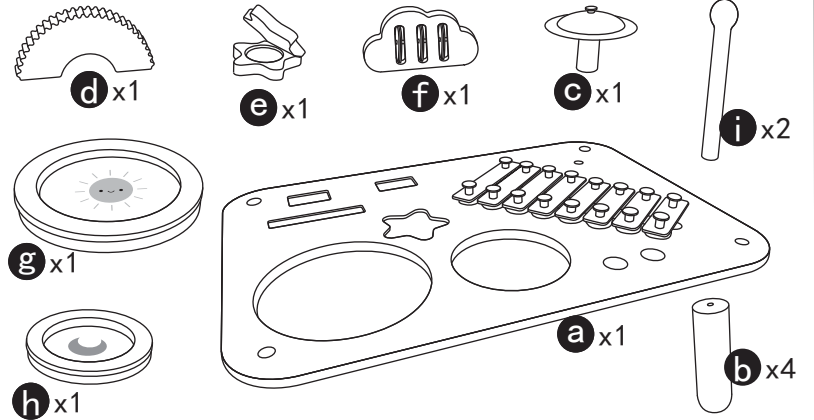

ASSEMBLY

Step 1

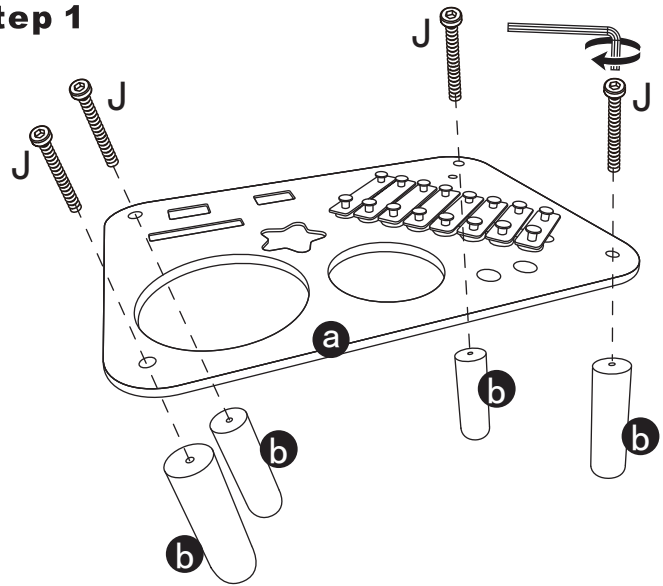

Step 2

