Assembly Instructions 43474066 CHASÉ CHEST OF DRAWERS

CARE INSTRUCTIONS:


WIPE CLEAN WITH A DRY CLOTH. DO NOT USE ABRASIVE MATERIALS AND SOLVENTS. CHECK AND TIGHTEN ALL PARTS REGULARLY. PLEASE LAY FURNITURE ON THE CARPET TO AVOID ANY DIRTY OR DAMAGE ON THE TEXTURE DURING ASSEMBLY. KEEP AWAY FROM WATER AND DIRECT SUNLIGHT. STORE IN A DRY PLACE. FOR INDOOR AND DOMESTIC USE ONLY. A MILD ODOUR MAY BE PRESENT WHEN FIRST OPENING THIS CARTON. SIMPLY ALLOW TO AIR OUTSIDE AND THIS WILL FADE.


WARNING:


DO NOT STAND OR SIT ON THIS UNIT. DO NOT USE THIS UNIT UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED. DO NOT KNOCK OR DRAG THIS UNIT. USE ONLY ON A FLAT SURFACE. DO NOT PLACE HOT ITEMS SUCH AS COFFEE CUPS DIRECTLY ON THE SURFACE. ADULT ASSEMBLY REQUIRED. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY. THIS PACKAGE CONTAINS SMALL PARTS AND SHARP POINTS. KEEP AWAY FROM CHILDREN AND BABIES.


MA.	XIMUM	SAFE L	OAD: 15K	G FOR T	OP, 7KG F	OR E	EACH DRA	WER.					
1 Hardware List													
		А	6x30mm	15pcs		В	7x50mm	4pcs	#HHHHHH	С	4x30mm	18pcs	
		D	6x35mm	34pcs		E	15x10mm	34pcs	8	F	3x12mm	44pcs	
		G		3pcs	72.	Н		3pcs	Chin his B	ı		3pcs	
		J		3pcs	\Diamond	K		5pcs	ſ	L	4#	1рс	
	ſ	M 3#		1pc		N		8pcs	80	0	3x14mm	8pcs	
	AMMINIMI	P	4x40mm	2pcs		Q		2pcs	0	R		4pcs	
		S		2pcs	(COMMUNICATION)	Т	5x40mm	5pcs	AUGUATURA	U	4x45mm	3pcs	
2 Parts List													
	1	1 1pc		2	1рс		3	1pc	(4)	1pc		
	(5)	5 2pcs		6	6 1pc		7	1рс	(8)	2pcs		
	9	9 5pcs		10 2pcs		11)	3pcs		2) 3pcs				
	13 3pcs		ocs	(14) 3pcs		(15)	15 3pcs		16 1pc				


PAGE 1 OF 9

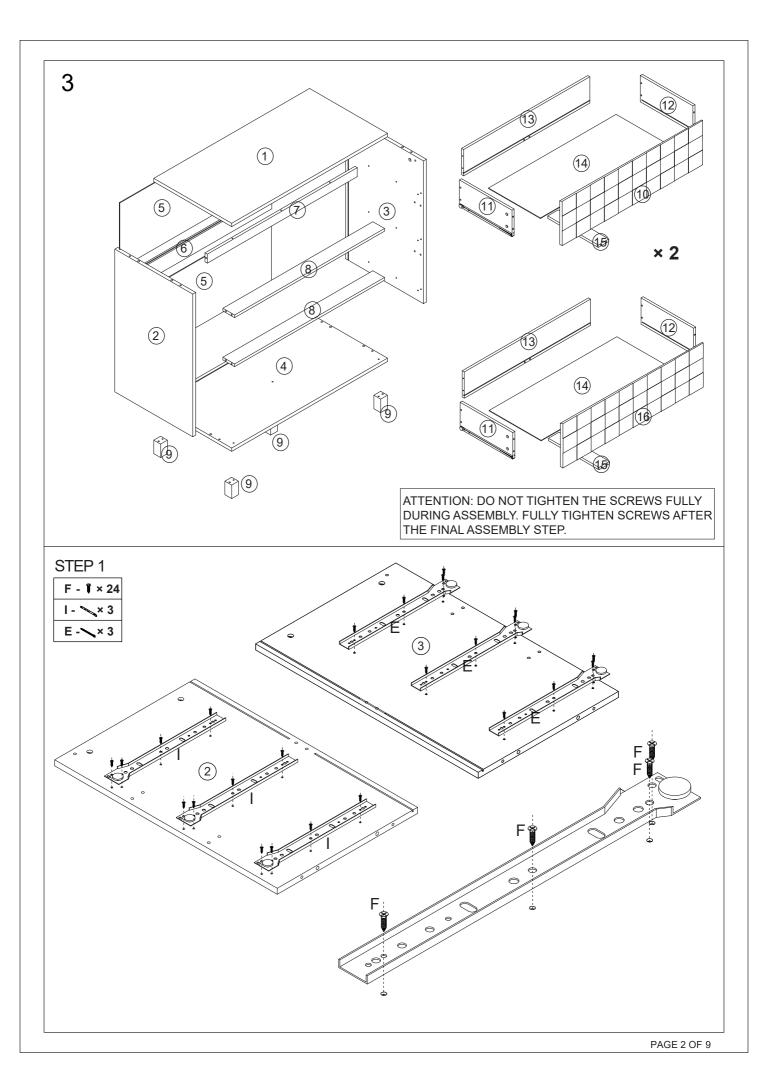


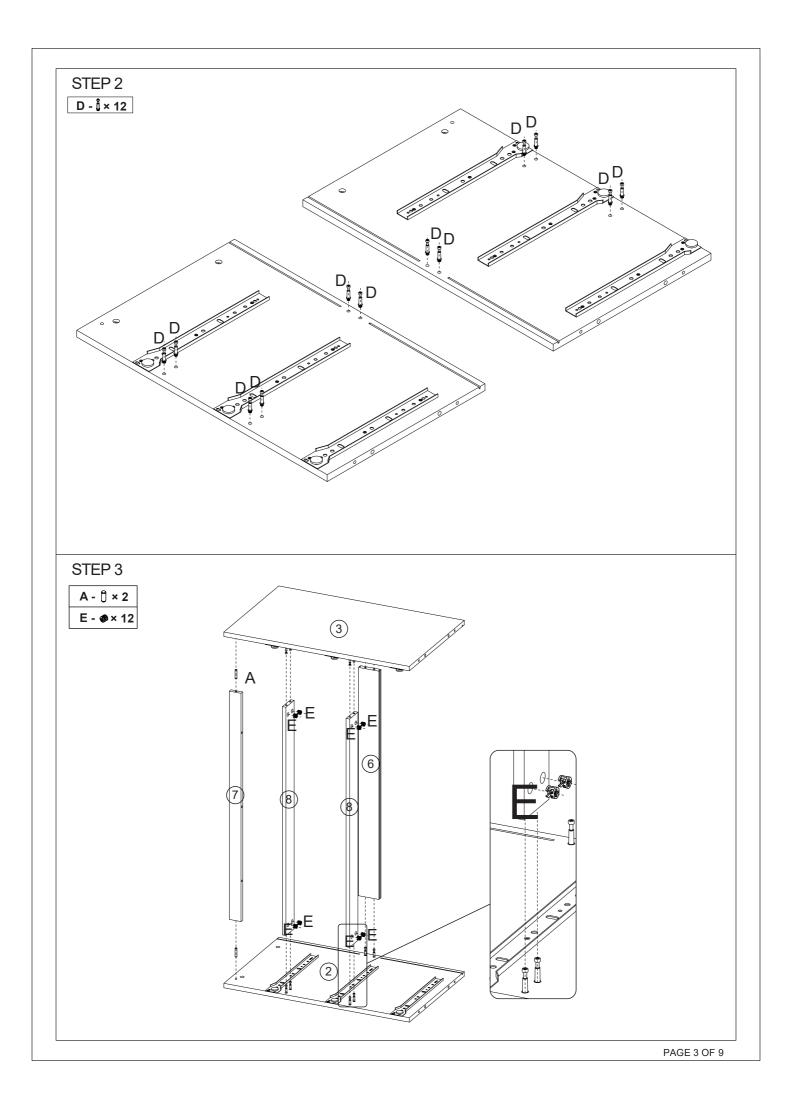


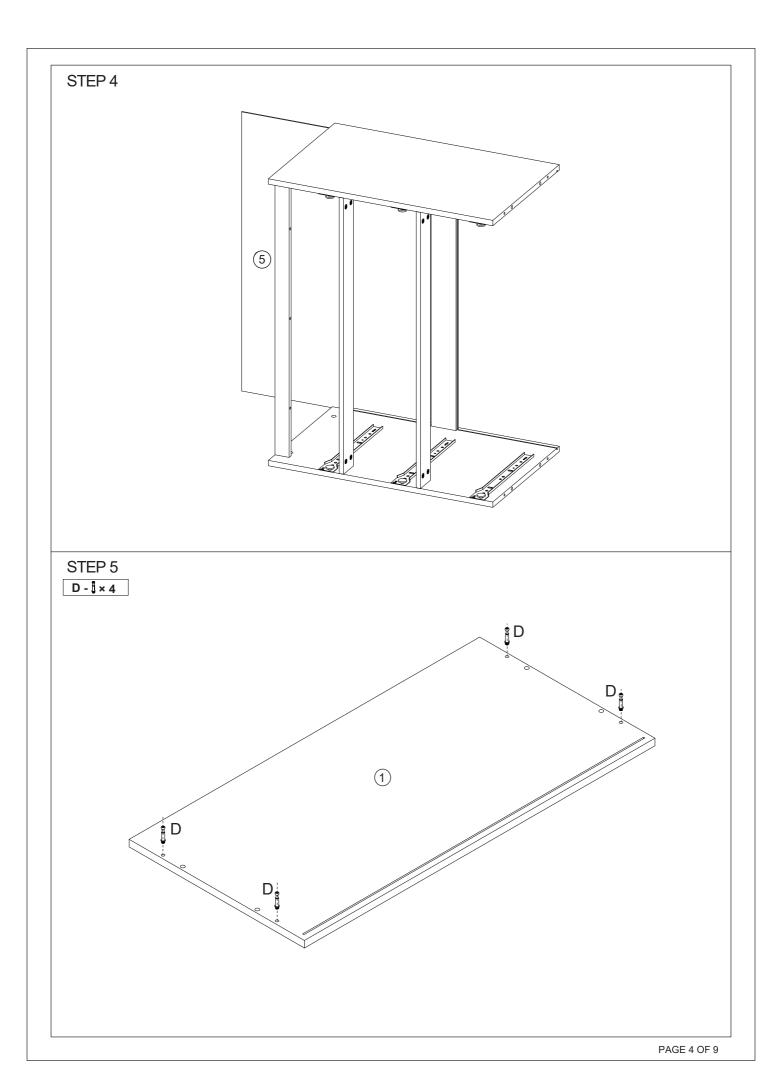


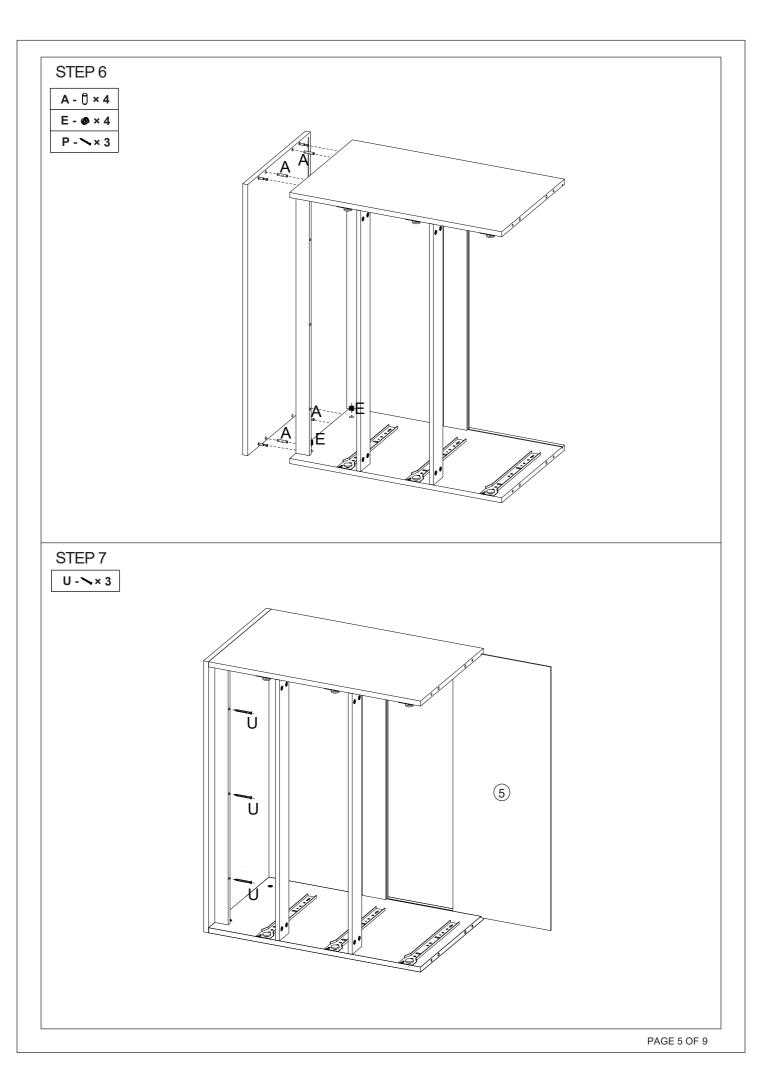


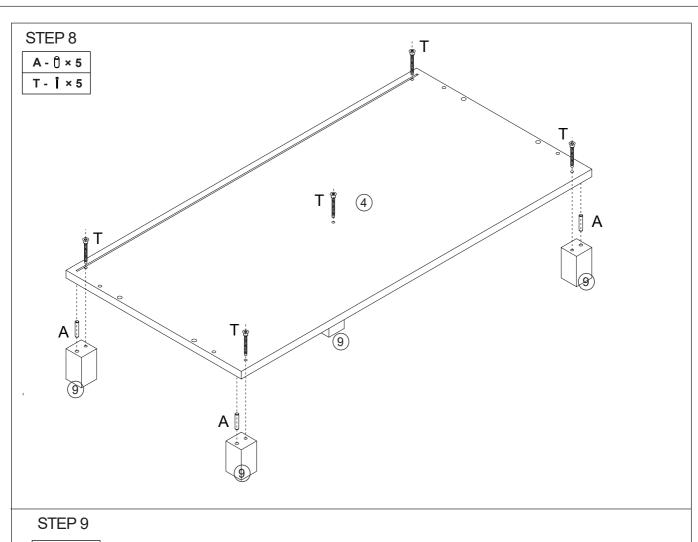

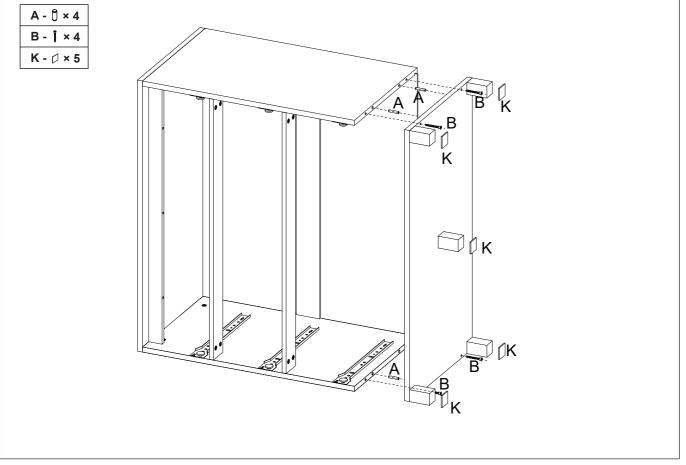

 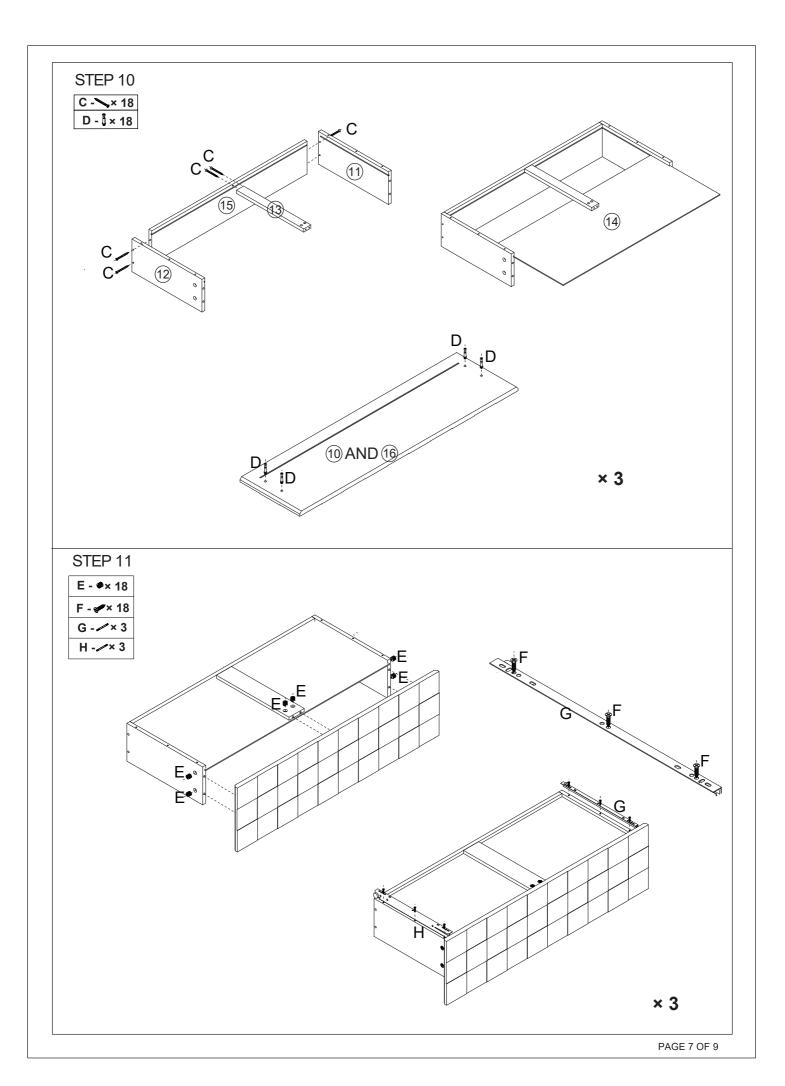


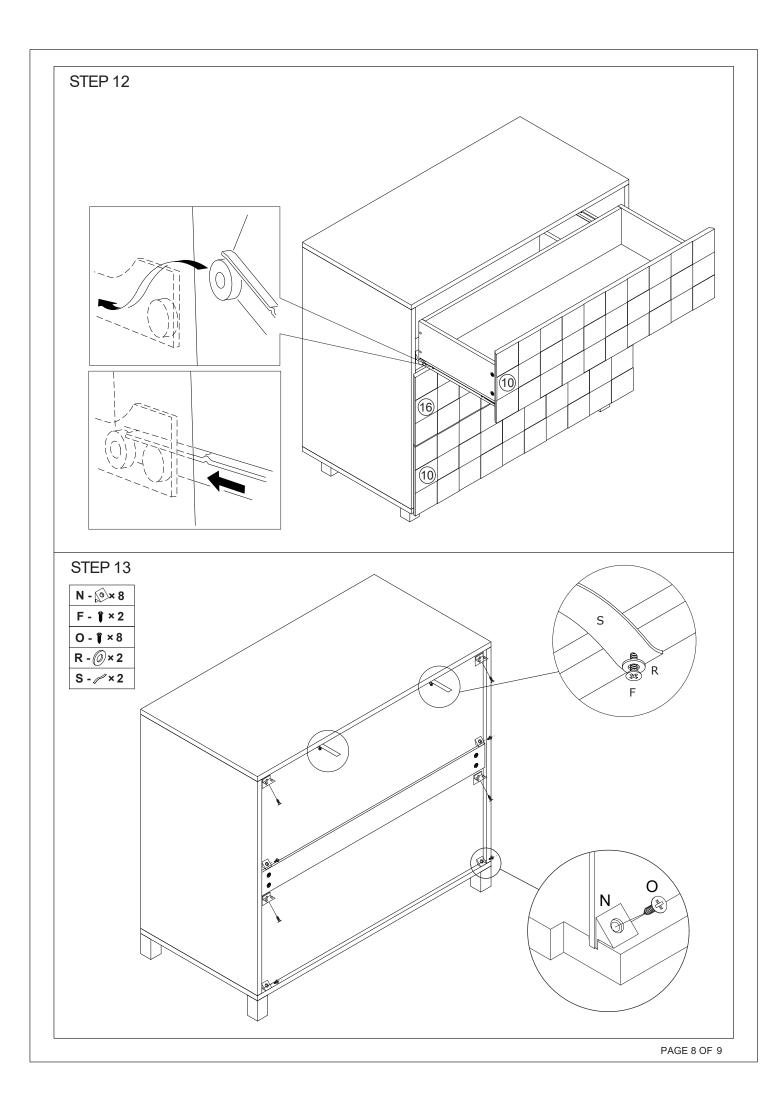

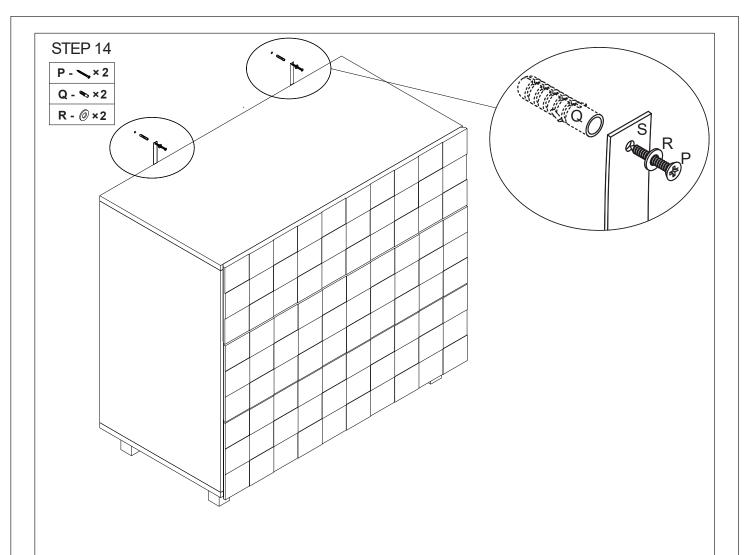







Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture



This is a permanent label. Do not remove!

TOPPLING FURNITURE WARNING:

- It is strongly recommended that this product is permanently fixed to the wall.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors.
- Do not place unanchored televisions on furniture.

CAUTION: for your safety when attaching the anchor fixings, please note the following:

 Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).



WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.

