


anko

Beauty Blender & Brush Cleaner

WBL-2405

User Manual

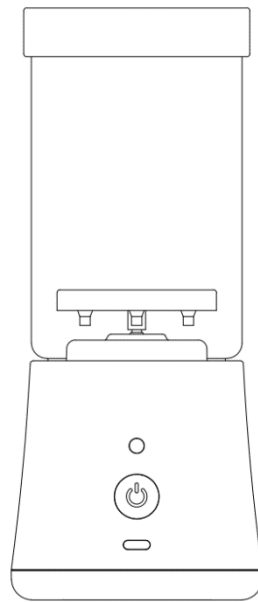

**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE.

1. Please read all instructions carefully before using this product.
2. When the product is in use, do not remove the brush holder/lid, do not touch moving parts.
3. The jug can be opened safely after the machine has come to a complete stop.
4. This appliance must only be powered by at safety extra low voltage corresponding to the marking on the appliance.
5. For hygiene always clean the product immediately after use. See section CLEANING AND STORAGE for instructions on how to clean the appliance.
6. After charging, when unplugging the USB plug, please grab by the plug when pulling it out. Do not pull from the wire.
7. Do not place appliance in or near flammable gases or electric stoves, or in hot ovens.
8. Do not immerse the main unit (electric motor) combination in water or other liquids to avoid the risk of fire, electric shock or personal injury.
9. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
10. Children should be supervised to ensure that they do not play with the appliance.
11. In the absence of supervision, the cleaning and maintenance work should not be done by a child.
12. Use of accessories not recommended or supplied with the product may cause fire, electric shock or personal injury.
13. For electrical safety, any repairs to the product should be carried out by a qualified electrical person only or the product must be disposed.
14. This appliance must be always used in accordance with the user instructions supplied with the product and must not be used for other purposes.
15. Before using, please make sure that the main body is firmly fixed.
16. Misuse may cause serious injury.
17. Switch OFF the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
18. This appliance contains batteries that are non-replaceable.
19. The appliance must only be supplied by AS/NZS 61558.1 & AS/NZS 61558.2.16 certified power supply unit with SELV output voltage corresponding to the marking on the appliance.
20. For cleaning, please refer to “CLEANING AND STORAGE” section.

WARNING: The maximum operating time is 20 minutes. Allow the appliance to rest for at least 5 minutes before using it again. After 5 cycles of operation, allow the appliance to cool down for approx. 30 minutes before using it again. Failing to follow these instructions may cause permanent damage to the product due to overheating.


IMPORTANT!

WARNING: Be alert to the risks that may lead to danger, serious injury and damage to property.

1. Do not immerse the main body (electric motor) of the appliance into the water or other liquid.
2. This product contains lithium-ion batteries. Therefore, do not attempt to dismantle the product. Fire risk exists if the batteries are damaged.
3. DO NOT squeeze, puncture, or short circuit the product or put it into water, fire or use in an environment where the temperature is higher than 60°C.
4. This product is for household use only and not designed for commercial use.
5. Do not operate the product without any liquid in the jug.
6. Do not expose the product to high temperatures, strong magnetic fields, near flammable and explosive gases (such as natural gas, methane, etc.) to avoid accidents such as abnormal operation and/or fire.
7. To avoid parts deformation or damage, do not put any parts of this product in a dishwasher, microwave oven or hot water above 60°C.
8. The product has built-in lithium-ion batteries. Pay attention to the following:
 - a) Only use and store the product in an environment where the temperature is between -5°C to + 35°C.
 - b) If not used for a long time, re-charge every three months to prevent battery damage.
 - c) Charging time may be longer when the room temperature is below 10°C, which is normal.
 - d) Charge the battery in time when the battery power goes low.

**SAVE THESE INSTRUCTIONS
FOR FUTURE REFERENCE**

KNOW YOUR BEAUTY BLENDER & BRUSH CLEANER

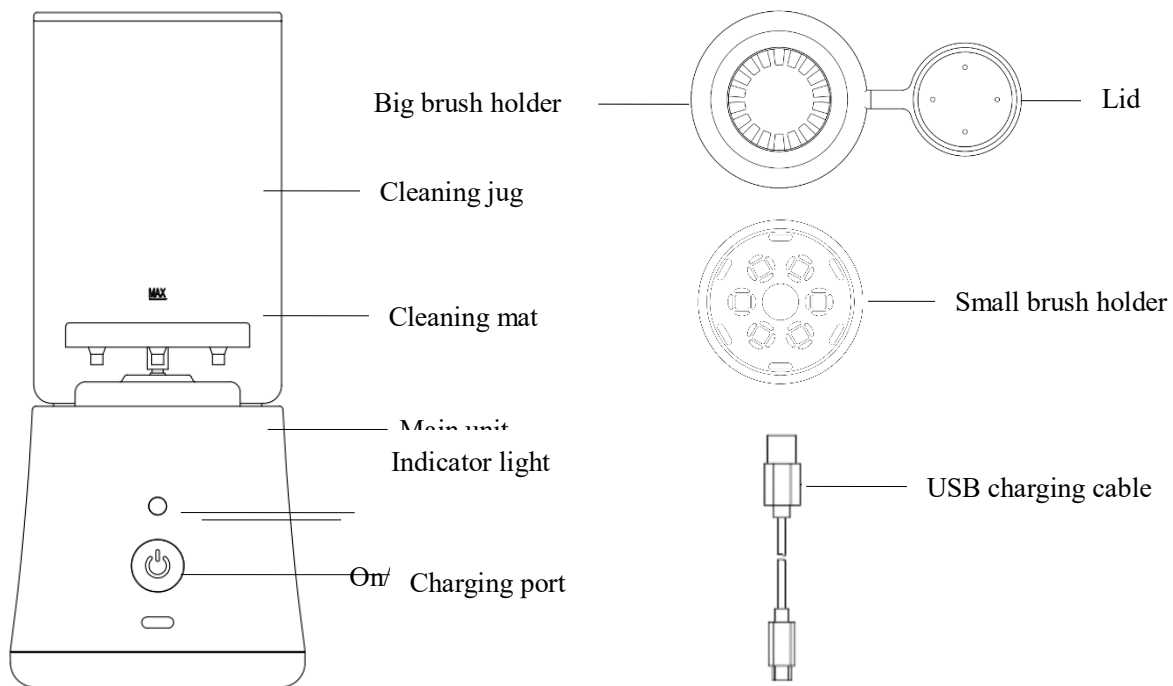

BEFORE FIRST USE

Note: When using the appliance for the first time, carefully remove all internal and external packaging, protective film and accessories.

- Fully charge the appliance before first use.
- The supplied USB charging cable should be inserted into a standard USB power outlet source rated at 5Vd.c. 1A specification. The charging time is approx. 3 hours. The indicator light will turn red during charging and turns blue when fully charged.

USING YOUR BEAUTY BLENDER & BRUSH CLEANER


Make sure the jug is assembled in place before using the appliance.

- To assemble the jug, screw it clockwise onto the main unit until the indicator light flash 3 times in blue colour.
- If the jug is not properly assembled, the indicator will flash in red/blue colour for 2 cycles to remind you to reassemble it properly.

1. Add water into the jug up to the MAX line and add 2-3 drops of cleaner.

WARNING! DO NOT add water beyond MAX level line.

Note: A high concentration foaming cleaner may cause foam to overflow during cleaning.

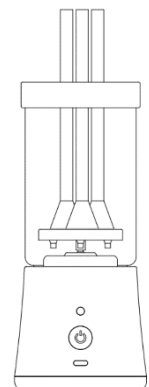

2. To clean the beauty brushes, choose the right brush holder and place the brushes into the right size bracket. Put the brush holder on the jug and adjust the brushes until they reach the cleaning mat.
To clean beauty eggs or powder puffs, just put them into the jug and place the lid on the jug.
 3. Double press the ON/OFF button to start the appliance, and the indicator light will light up in blue.
CAUTION! Do not operate the appliance with the jug empty to prevent damage to the electric motor.
- NOTES:
- The appliance can run for approx. 1 hour after fully charged.
 - When the battery runs out, the indicator will flash in Red colour 10 times and it will go out.
4. Press the ON/OFF button to stop the appliance.
 5. Take out the brushes/beauty eggs/powder puff from the appliance.

CLEANING AND STORAGE

Make sure the appliance has come to a complete stop before cleaning.

Do not use a steel ball, abrasive cleaner or corrosive liquid (such as gasoline, acetone) to clean the product.

- Fast Cleaning: Add 80mL of water to the jug. Start the appliance and operate for 5 to 10 seconds.
Discard the water.
- The main unit can be wiped with a wet cloth. Do not rinse, soak or spray water or other liquids to avoid damage to the appliance.
- Rinse the jug and the brush holders with clean water and wipe dry.
- When storing, ensure the product is clean and dry.
- This product contains a rechargeable Li-ion battery. When not in use, it should be stored in a clean, dry, ventilated room away from direct sunlight with an ambient temperature range of -5°C to $+35^{\circ}\text{C}$ and a relative humidity of 25% to 75%.
- When not in use, store the jug on the main unit.

TROUBLESHOOTING

Problem	Possible cause	Solution
The appliance does not work	Protection switch is not activated	Make sure the jug is screwed into place and the blue indicator light flashes 3 times.
	The appliance is connected with the power supply.	Disconnect the USB cord from the appliance with the power supply.
Red light flashes and the appliance does not work	Low battery	Charge the appliance.
The indicator light goes out and the appliance does not work	Low battery	Charge the appliance.
	Too much load	Remove some brushes. Connect the USB cable to the appliance with the power supply then disconnect. This should reset the appliance. Double press the ON/OFF switch on the appliance to continue cleaning.

TECHNICAL SPECIFICATION

Voltage: 5Vd.c. 1A
 Rated Power: 25W
 MAX. Capacity: 90mL

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us