





K: 43-477-302 | T: 70-392-104



Drum Kit Mat

Instruction Manual

 


BUTTON SYMBOL	FUNCTION	INSTRUCTION
 on off	ON/OFF	Flick the switch left to turn the product on. Flick the switch right to turn the product off.
	VOL-/VOL+	Press the + to turn the volume up. Press the - to turn the volume down.
	RHYTHMS	Press to hear the melody. Press again to play the next track.
	DRUM ICONS	Beat the different icons to make your beats.

BATTERY INSTALLATION

3 X AA

REQUIRES 3 x 1.5V AA BATTERIES (NOT INCLUDED)



CAUTION: BATTERY INSTALLATION BY ADULT REQUIRED.

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES SHOULD BE CHARGED BY ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

WARNING:

CHOKING HAZARD - SMALL PARTS.
NOT FOR CHILDREN UNDER 3 YEARS.

MADE IN CHINA
CUSTOMER SERVICE:
 KMART AU: 1800 124 125
 KMART NZ: 0800 945 995
 TARGET AU: 1300 753 567

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

ADULT SUPERVISION REQUIRED.
 PRODUCT MAY VARY FROM IMAGE SHOWN.
 PLEASE KEEP THE PACKING FOR FUTURE REFERENCE.