

ELECTRIC DICE BINGO INSTRUCTION SHEET (165 x 190 mm)

aniko
Education

ELECTRONIC DICE BINGO! MATCH THE SHAPES TO WIN

Players

2-5 players

Includes

→ 1 x Electronic dice shaker → 5 x Bingo boards → 46 x Bingo tokens

Getting ready to play

To start, each player picks one of the 5 bingo boards. The game can be played by 2 to 5 players.

How to play

The game begins with the first player pressing the button on the electronic dice shaker. The two 12-sided dice will land on 2 shape picture icons. Everyone quickly checks their bingo board to see if they have a matching picture shape. If you find a match, yell out the name of the shape picture. The first player to call out the correct shape wins a token to cover that picture on their bingo board.

Winning the game

Players take turns pressing the button to roll the dice. The game continues until one player fills their bingo board. When that happens, the player shouts "Bingo!" and wins the game.

Enjoy learning and playing with Electronic Dice Bingo!


Alternative ways to play

Try these alternative ways to play:

Double Bingo Zap - For a lightning fast two player game, both players use the same bingo board. One player uses blue tokens, and the other uses red tokens. Players take turns pressing the button to roll the dice. Players must quickly call out the matching symbols on the bingo board and place their token on the correct spot before the other player. Continue taking turns and placing tokens until the bingo board is filled. At the end, count how many of each color token is on the board. The player with the most tokens wins!

Lightning Quick-Call Bingo - Remove one of the dice from the electronic dice shaker. Players take turns pressing the button to roll the dice. When the dice lands on a shape picture, players must quickly yell out the name of the shape. The first player to correctly call out the shape wins a token. The game continues until one player collects 5 tokens and wins!

Changing the battery

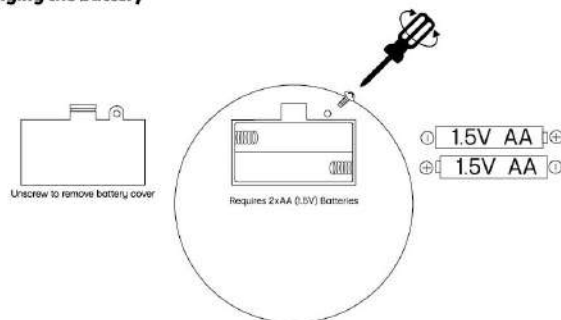

BATTERY PRECAUTIONS:

- Non rechargeable batteries are not be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be used under adult supervision.
- Different types of batteries or old and new batteries are not to be mixed.
- Only batteries of the same or equivalent type are recommended to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short circuited.
- Check and replace batteries periodically to prevent corrosion.
- Keep unit away from extreme heat.
- Do not dispose of batteries in fire, batteries may explode or leak.

WARNING/CAUTION:

1. Batteries/bulbs should only be inserted by an adult.
2. Rechargeable batteries are to be removed from the product before being charged.
3. Non-rechargeable batteries are not to be recharged.
4. Rechargeable batteries are only to be charged under adult supervision.
5. Do not mix different types of batteries e.g. alkaline, standard, (Carbon Zinc) or rechargeable (Nickel Metal Hydride) batteries.
6. Never mix old batteries with the new batteries (replace all batteries at the same time).
7. Only batteries of the same or equivalent type are recommended to be used.
8. Be sure to insert batteries with the correct polarity and always follow the product and battery instructions.

Not suitable for children under 3 years of age due to small parts which may cause a choking hazard. Please remove all packaging attachments before giving this product to a child.

Please retain all information for future reference. Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority for recycling advice.