 
 
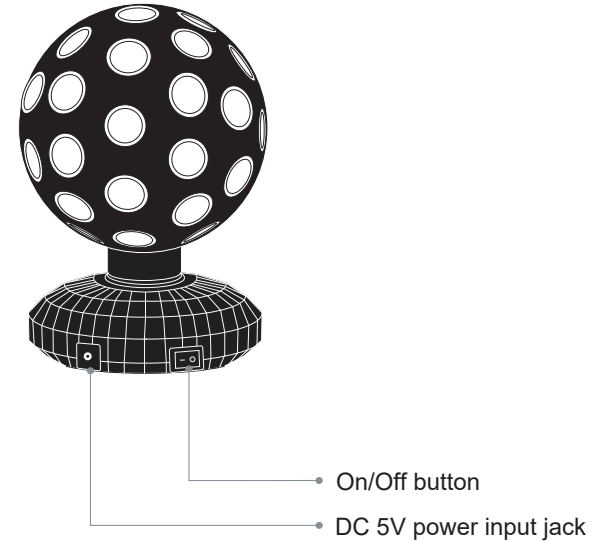 



ROTATING DISCO BALL LIGHT (Model No.: BD24496W Keycode: 43479993)

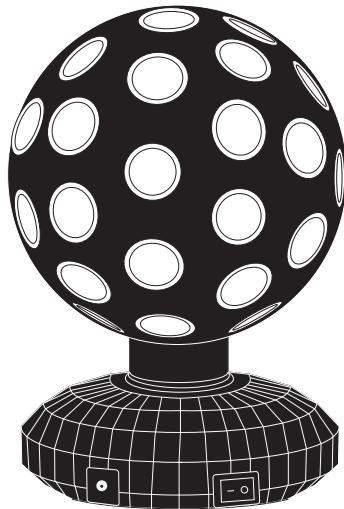

Contents:

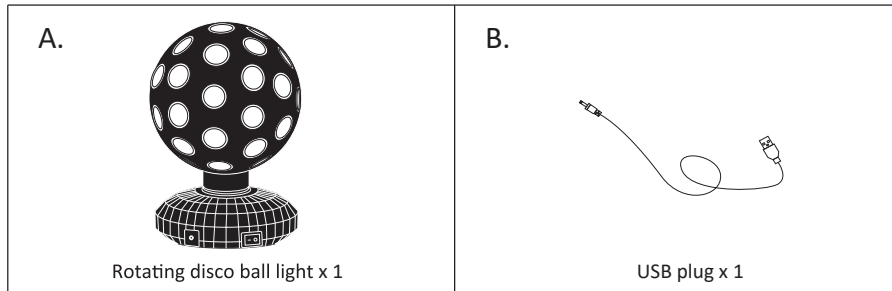

 Connecting Power:

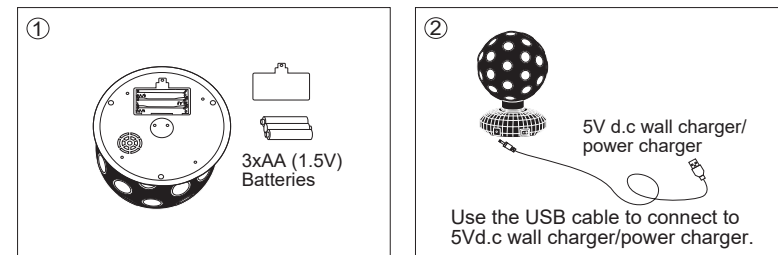

Power Connection:

Two power connection options are available as below

1. Install 3 x AA batteries into the battery compartment (batteries not included).
2. Connect the USB cable to USB power source.

Product Specification:

Input power: USB 5V 1A or 3 x AA batteries (not included).
Projection distance up to 3m approx..

Battery Installation:

- ▶ Open the battery compartment cover at the bottom of unit.
- ▶ Unscrew the screw and lift the cover off.
- ▶ Insert 3 x AA 1.5V batteries (not included) according to the polarity indicated in the battery compartment.
- ▶ Reinstall the battery compartment cover.
- ▶ Remove the batteries if they are flat or if you do not use the device for a long period of time.

Safety Instructions:

WARNING: FOR DECORATION ONLY. THIS IS NOT A TOY. KEEP AWAY FROM CHILDREN AND PETS.

- Before using the unit, please read the manual carefully.
- An adult must carry out battery replacement and installation.
- Remove exhausted batteries from this product.
- Do not dispose of batteries in a fire, batteries may explode or leak.
- Do not short-circuit the battery terminals.
- Do not mix used and new batteries.
- Do not mix alkaline standard (carbon-zinc), lithium or rechargeable batteries.
- Do not mix different types of batteries.
- Do not use rechargeable batteries in this product.
- Do not recharge non-rechargeable batteries.
- Do not allow any part to come in contact with heat or a direct flame.
- Do not allow water to come into contact with the batteries or wiring.
- Install carefully to prevent any damage to the batteries.
- When installing [3 x 1.5V AA (LR6)] batteries in the battery compartment, ensure the batteries are placed as marked (+)(-).
- Only the recommended batteries should be used.
- Remove batteries from product when not in use for long periods of time.
- Keep this product out of the reach of small children.
- Store unused batteries in their original packaging.
- Dispose of used batteries responsibly.
- This product is suitable for INDOOR use only.
- Remove all packaging before use.
- This product is not suitable for children under 36 months. Keep out of reach of small children.
- This product has small parts, which may pose a choking hazard if detached.
- Keep away from fire and sources of heat.
- Use provided USB cable only.
- The light source of this projector is not replaceable.