

Assembly Instructions

K: 43480326 / T: 70223729 PUDDLE DECORATIVE SHELF

CARE INSTRUCTIONS:







 

WIPE CLEAN WITH A DRY CLOTH. DO NOT USE ABRASIVE MATERIALS OR SOLVENTS. CHECK AND TIGHTEN ALL PARTS REGULARLY. KEEP AWAY FROM WATER AND DIRECT SUNLIGHT. DO NOT PLACE HOT ITEMS SUCH AS COFFEE CUPS DIRECTLY ON THE SURFACE. STORE IN A DRY PLACE. FOR INDOOR AND DOMESTIC USE ONLY

WARNING:




DO NOT STAND OR SIT ON THIS ITEM. DO NOT USE UNTIL ALL SCREWS ARE FIRMLY SECURED. ADULT ASSEMBLY REQUIRED. SEEK ASSISTANCE FROM A DIY EXPERT IF YOU ARE UNSURE HOW TO HANG. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY AND DAMAGE TO PROPERTY.


MAXIMUM LOADING WEIGHT: 3KG FOR SHELF.

Hardware list


	A		4 PCS		B		4 PCS		C	6×30mm	2 PCS		D	5×40mm	4 PCS
	E	4×35mm	2 PCS		F		2 PCS		G		1 PC		H		4 PCS

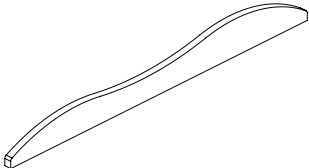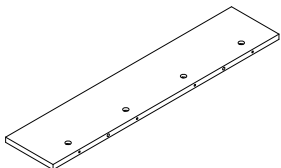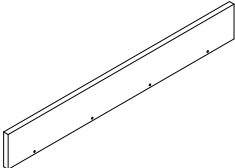

Parts List

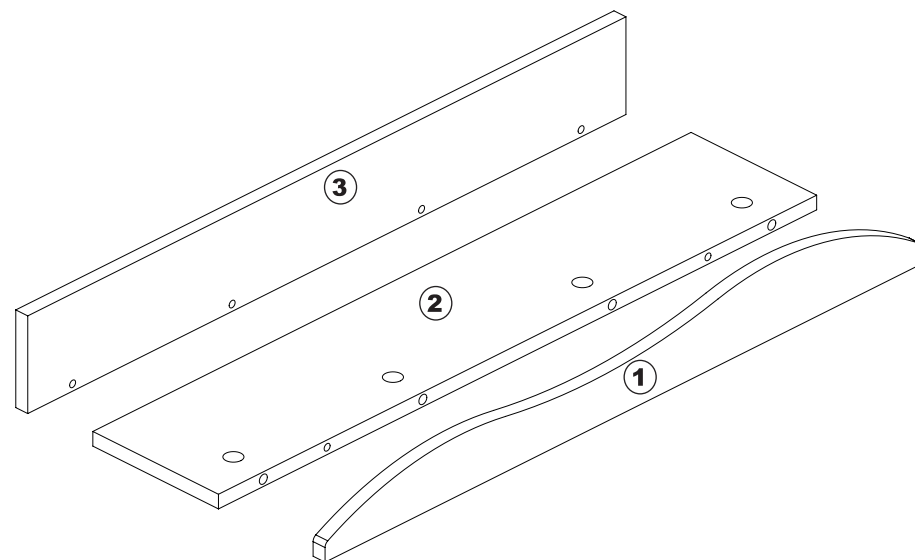
		
①	②	③
1PC	1PC	1PC



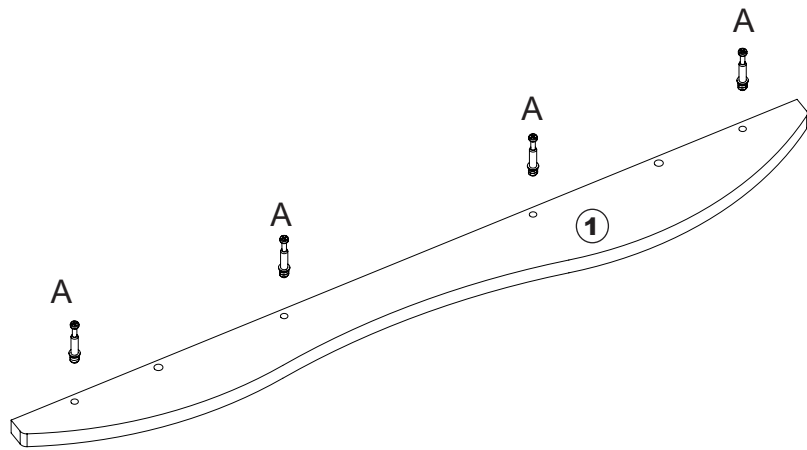



STEP 1 A-x4



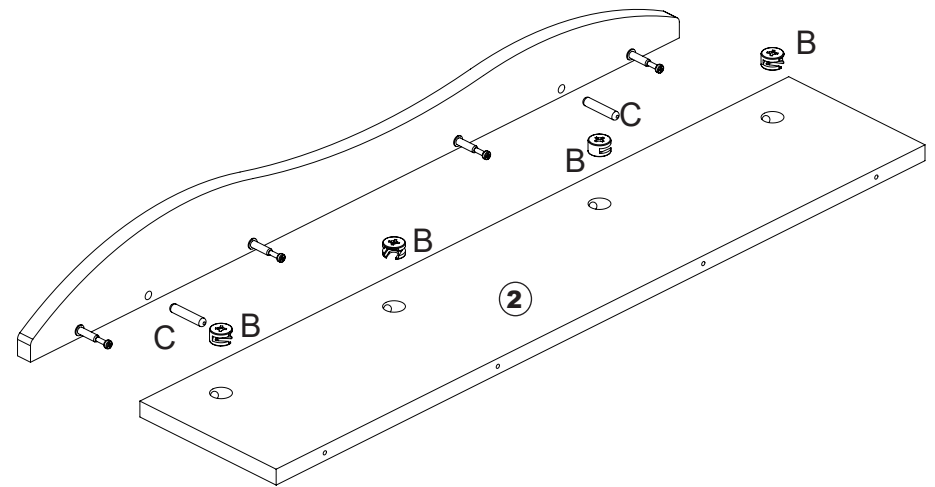

STEP 2 B-x4 C-x2

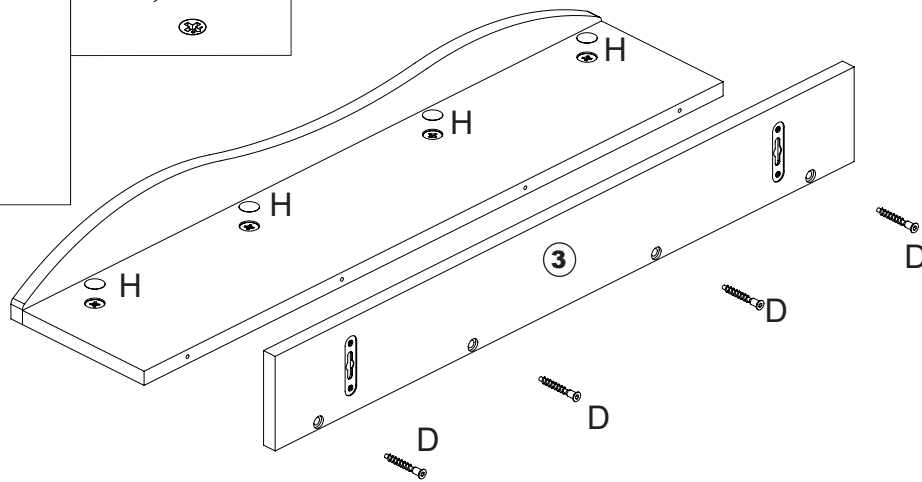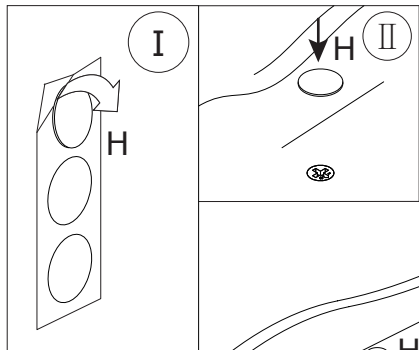

STEP 3 D-x4 H-x4



STEP 4 E-x2 F-x2

